



AirPrime HL7518 and HL7548

AT Commands Interface Guide



SIERRA
WIRELESS®

4116303
10.0
August 10, 2017

Important Notice

Due to the nature of wireless communications, transmission and reception of data can never be guaranteed. Data may be delayed, corrupted (i.e., have errors) or be totally lost. Although significant delays or losses of data are rare when wireless devices such as the Sierra Wireless modem are used in a normal manner with a well-constructed network, the Sierra Wireless modem should not be used in situations where failure to transmit or receive data could result in damage of any kind to the user or any other party, including but not limited to personal injury, death, or loss of property. Sierra Wireless accepts no responsibility for damages of any kind resulting from delays or errors in data transmitted or received using the Sierra Wireless modem, or for failure of the Sierra Wireless modem to transmit or receive such data.

Safety and Hazards

Do not operate the Sierra Wireless modem in areas where cellular modems are not advised without proper device certifications. These areas include environments where cellular radio can interfere such as explosive atmospheres, medical equipment, or any other equipment which may be susceptible to any form of radio interference. The Sierra Wireless modem can transmit signals that could interfere with this equipment. Do not operate the Sierra Wireless modem in any aircraft, whether the aircraft is on the ground or in flight. In aircraft, the Sierra Wireless modem **MUST BE POWERED OFF**. When operating, the Sierra Wireless modem can transmit signals that could interfere with various onboard systems.

Note: Some airlines may permit the use of cellular phones while the aircraft is on the ground and the door is open. Sierra Wireless modems may be used at this time.

The driver or operator of any vehicle should not operate the Sierra Wireless modem while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some states and provinces, operating such communications devices while in control of a vehicle is an offence.

Limitations of Liability

This manual is provided "as is". Sierra Wireless makes no warranties of any kind, either expressed or implied, including any implied warranties of merchantability, fitness for a particular purpose, or noninfringement. The recipient of the manual shall endorse all risks arising from its use.

The information in this manual is subject to change without notice and does not represent a commitment on the part of Sierra Wireless. SIERRA WIRELESS AND ITS AFFILIATES SPECIFICALLY DISCLAIM LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR EXEMPLARY DAMAGES INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS OR REVENUE OR ANTICIPATED PROFITS OR REVENUE ARISING OUT OF THE USE OR INABILITY TO USE ANY SIERRA WIRELESS PRODUCT, EVEN IF SIERRA WIRELESS AND/OR ITS AFFILIATES HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR THEY ARE FORESEEABLE OR FOR CLAIMS BY ANY THIRD PARTY.

Notwithstanding the foregoing, in no event shall Sierra Wireless and/or its affiliates aggregate liability arising under or in connection with the Sierra Wireless product, regardless of the number of events, occurrences, or claims giving rise to liability, be in excess of the price paid by the purchaser for the Sierra Wireless product.

Patents

This product may contain technology developed by or for Sierra Wireless Inc.

This product is manufactured or sold by Sierra Wireless Inc. or its affiliates under one or more patents licensed from MMP Portfolio Licensing.

Copyright

© 2017 Sierra Wireless. All rights reserved.

Trademarks

Sierra Wireless®, AirPrime®, AirLink®, AirVantage®, WISMO®, ALEOS® and the Sierra Wireless and Open AT logos are registered trademarks of Sierra Wireless, Inc. or one of its subsidiaries.

Watcher® is a registered trademark of NETGEAR, Inc., used under license.

Windows® and Windows Vista® are registered trademarks of Microsoft Corporation.

Macintosh® and Mac OS X® are registered trademarks of Apple Inc., registered in the U.S. and other countries.

QUALCOMM® is a registered trademark of QUALCOMM Incorporated. Used under license.

Other trademarks are the property of their respective owners.

Contact Information

Sales information and technical support, including warranty and returns	Web: sierrawireless.com/company/contact-us/ Global toll-free number: 1-877-687-7795 6:00 am to 5:00 pm PST
Corporate and product information	Web: sierrawireless.com

Document History

Version	Date	Updates
1.0	September 25, 2014	Document creation
2.0	November 05, 2014	Added: <ul style="list-style-type: none"> 2.17 &W Command: Save Stored Profile 2.18 &V Command: Display Current Configuration 2.19 &K Command: Flow Control Option 2.20 &S Command: DSR Option 3.15 +GCAP Command: Request Complete TA Capability List 5.40 +KSLEEP Command: Power Management Control for UART 9.24 +CGPIAF Command: Printing IP Address Format
		Updated: <ul style="list-style-type: none"> 2.11 &C Command: Set Data Carrier Detect (DCD) Function Mode 2.12 &D Command: Set Data Terminal Ready (DTR) Function Mode 2.13 &F Command: Restore Factory Settings
3.0	December 08, 2014	Added: <ul style="list-style-type: none"> 5.41 +HBHV Command: Configure General System Behavior 13.3 +WMANTSEL Command: Select Main and/or Diversity Antenna
		Updated: <ul style="list-style-type: none"> 11 Protocol Specific Commands 12.10 +WDSM Command: Manage Device Services 16.2.1 CME Error Codes 15.5 TCP Commands Examples 15.6 UDP Commands Examples 15.7 FTP Commands Examples 15.8 HTTP Commands Examples 15.9 Switch Data/Command Mode DTR +++ ATO Behavior Table
	Removed internal Siera Wireless notes throughout the document	
3.0	December 24, 2014	Added: <ul style="list-style-type: none"> 1.4 PDP Context Usage 1.5 SMS Commands 5.42 +CIREP Command: IMS Network Reporting 5.43 +CIREG Command: Registration Information 6.14 +CEMODE Command: UE Modes of Operation for EPS 8.16 +XCMGS3GPP2 Command: Send 3GPP2 SMS Message 8.17 +XCMT3GPP2 Command: Enable or Disable the 3GPP2 MT SMS URC
		Updated: <ul style="list-style-type: none"> 5.19 +KGPIO Command: Hardware IO Control 5.20 +KGPIOCFG Command: GPIO Configuration 5.35 +CTZU Command: Automatic Time Zone Update 5.40 +KSLEEP Command: Power Management Control for UART 8.6 +CMGS Command: Send Message 8.14 +CPMS Command: Preferred Message Storage 9.20 +CGSMS Command: Select Service for MO SMS Messages 15.2.7 Error Case Examples
		Deleted +CMUT

Version	Date	Updates
3.0	January 06, 2015	Updated: <ul style="list-style-type: none"> • 1.5 SMS Commands • 5.17 +CSQ Command: Signal Quality • 5.40 +KSLEEP Command: Power Management Control for UART • 5.42 +CIREP Command: IMS Network Reporting • 5.43 +CIREG Command: Registration Information • 8.14 +CPMS Command: Preferred Message Storage • 8.17 +XCMT3GGP2 Command: Enable or Disable the 3GPP2 MT SMS URC
3.1	February 02, 2015	Updated: <ul style="list-style-type: none"> • 5.17 +CSQ Command: Signal Quality • 13.1 +WMTXPOWER Command: Test RF Tx
4.0	March 16, 2015	Added: <ul style="list-style-type: none"> • HL7548 support • 5.44 +GST Command: General System Status Information • 5.45 +CESQ Command: Extended Signal Quality • 5.46 +XCSQ Command: Radio Signal Strength and Quality with URC Support • 5.47 +XCESQ Command: Extended Signal Quality with URC Support
		Updated: <ul style="list-style-type: none"> • 5.17 +CSQ Command: Signal Quality • 5.40 +KSLEEP Command: Power Management Control for UART
	March 23, 2015	Marked the following sections as "for internal use only": <ul style="list-style-type: none"> • 11 Protocol Specific Commands • 15.2.5 FTP Reply Codes • 15.2.7 Error Case Examples • 15.5 TCP Commands Examples • 15.6 UDP Commands Examples • 15.7 FTP Commands Examples • 15.8 HTTP Commands Examples • 15.9 Switch Data/Command Mode DTR +++ ATO Behavior Table
		Updated: <ul style="list-style-type: none"> • 5.15 *PSRDBS Command: Change Frequency Band • 5.19 +KGPIO Command: Hardware IO Control • 5.20 +KGPIOCFG Command: GPIO Configuration • 5.21 +KADC Command: Analog Digital Converter • 5.32 +KTEMPMON Command: Temperature Monitor • 5.33 +KBND Command: Current Networks Band Indicator • 13.1 +WMTXPOWER Command: Test RF Tx • 13.2 +WMRXPOWER Command: Test RF Rx
	April 14, 2015	Added 12.3 +WSD Command: Device Services Local Download
4.1	April 20, 2015	Updated: <ul style="list-style-type: none"> • 5.7 +CFUN Command: Set Phone Functionality • 5.21 +KADC Command: Analog Digital Converter • 10 SIM Application Toolkit AT Commands
		Deleted 3.15 CMUX Command: Multiplexing Mode

Version	Date	Updates
4.1	April 24, 2015	Updated: <ul style="list-style-type: none"> • 1.4 PDP Context Usage • 5.42 +CIREP Command: IMS Network Reporting • 5.43 +CIREG Command: Registration Information
4.2	April 29, 2015	Removed internal use only commands
5.0	August 10, 2015	Added: <ul style="list-style-type: none"> • 5.48 +CPWROFF Command: Switch MS Off • 14 NV Related Commands • 10.7 *PSSTKI Command: SIM Toolkit Interface Configuration
		Updated: <ul style="list-style-type: none"> • 5.18 +KCELL Command: Cell Environment Information • 5.38 +XCELLINFO Command: Provide Cell Information • 5.39 +KCCINFO Command: Camped Cell Information • 5.40 +KSLEEP Command: Power Management Control for UART • 5.41 +HBHV Command: Configure General System Behavior • 5.49 +KSIMDET Command: SIM Detection • 9.7 +CGDCONT Command: Define PDP Context • 12.3 +WSDS Command: Device Services Local Download • 12.7 +WDSI Command: Device Services Indication • 9.25 +WPPP Command: PDP Context Authentication Configuration
	Deleted internal use only sections	
	August 19, 2015	Updated: <ul style="list-style-type: none"> • 5.42 +CIREP Command: IMS Network Reporting • 5.43 +CIREG Command: Registration Information • 9.2 +CGACT Command: Activate or Deactivate PDP Context • 13.1 +WMTXPOWER Command: Test RF Tx
6.0	October 27, 2015	Added: <ul style="list-style-type: none"> • 3.16 +KODIS Command: Access ODIS Information • 5.49 +KUSBCOMP Command: Set USB Composition • 5.50 +WMUSBVCC Command: USB VCC Detection Setting • 15 Board Support Commands
		Updated: <ul style="list-style-type: none"> • 2.18 &V Command: Display Current Configuration • 3.1 I Command: Request Identification Information • 9.22 +XDNS Command: Dynamic DNS Request • 12.9 +WDSS Command: Device Services Session • 14 NV Related Commands
	November 23, 2015	Added 15.2 +WCARRIER: Show Carrier Name Updated 5.48 +CPWROFF Command: Switch MS Off
7.0	January 08, 2015	Updated: <ul style="list-style-type: none"> • 5.6 +CLAC Command: List Available AT Commands • 5.48 +CPWROFF Command: Switch MS Off • 8.9 +CNMI Command: New Message Indication • 16.2.2 CEER Error Codes
		Deleted 5.49 +KSIMDET Command: SIM Detection

Version	Date	Updates
8.0	June 20, 2016	Added: <ul style="list-style-type: none"> • 3.17 &R Command: RTS and CTS Option • 3.18 +FMI Command: Request Manufacturer Identification • 3.19 +FMM Command: Request Model Identification • 3.20 +FMR Command: Request Revision Identification • 3.21 \N Command: Data Transmission Mode • 3.22 N Command: Negotiate Handshake Option • 3.23 S5 Command: Write Command Line Editing Character • 3.24 S6 Command: Pause before Blind Dialing • 3.25 S8 Command: Comma Dial Modifier Time • 3.26 W Command: Extended Result Code • 5.51 +BOOTDWLCFG Command: Boot Configuration for Firmware Download • 11 Protocol Specific Commands
		Updated: <ul style="list-style-type: none"> • 2.17 &W Command: Save Stored Profile • 2.18 &V Command: Display Current Configuration • 5.41 +HBHV Command: Configure General System Behavior • 13.3 +WMANTSEL Command: Select Main and/or Diversity Antenna
	July 18, 2016	Added 5.52 +KRIC Command: Ring Indicator Control
		Updated: <ul style="list-style-type: none"> • 2.20 &S Command: DSR Option • 12.9 +WDSS Command: Device Services Session
9.0	May 23, 2017	Added: <ul style="list-style-type: none"> • 5.53 +KSYNC Command: Application Synchronization Signal • 5.54 +KSREP Command: Mobile Start-Up Reporting
		Updated 13.3 +WMANTSEL Command: Select Main and/or Diversity Antenna
10.0	August 10, 2017	Added: <ul style="list-style-type: none"> • 3.27 +KODIS Command: Access ODIS Information • HL7548 support to existing commands in section 11 Protocol Specific Commands • 11.9 SSL Configuration • 11.13 HTTP Client Specific Commands • 11.14 HTTPS Client Specific Commands • 11.15 SSL Certificate Manager • 16.8 HTTP Commands Usage Examples
		Updated: <ul style="list-style-type: none"> • 9.25 +WPPP Command: PDP Context Authentication Configuration • 11.10.1 +KTCPCFG Command: TCP Connection Configuration • 12.7 +WDSI Command: Device Services Indication • 12.9 +WDSS Command: Device Services Session • 13.3 +WMANTSEL Command: Select Main and/or Diversity Antenna • 16.9 Switch Data/Command Mode DTR +++ ATO Behavior Table

>> Contents

1. INTRODUCTION	17
1.1. Reference Configuration	17
1.2. AT Command Principles.....	17
1.2.1. Parameters.....	18
1.2.2. Answers and Responses	18
1.2.3. Multiple AT Commands on the Same Command Line.....	18
1.2.4. AT Commands on Separate Lines.....	18
1.3. Unsolicited Result Codes (URCs)	19
1.4. PDP Context Usage	19
1.4.1. HL7518.....	19
1.4.2. HL7548.....	20
1.5. SMS Commands	20
1.6. Document Modification.....	20
1.7. Abbreviations.....	20
2. V25TER AT COMMANDS	25
2.1. +++ Command: Switch from Data Mode to Command Mode	25
2.2. A/ Command: Repeat Previous Command Line	25
2.3. O Command: Switch from Command Mode to Data Mode.....	25
2.4. E Command: Enable Echo Command	26
2.5. Q Command: Set Result Code Presentation Mode	26
2.6. S0 Command: Set Number of Rings before Automatic Call Answering	27
2.7. S4 Command: Set Response Formatting Character.....	27
2.8. S7 Command: Set Delay for Connection Completion	28
2.9. V Command: TA Response Format	28
2.10. X Command: Result Code Selection and Call Progress Monitoring Control	29
2.11. &C Command: Set Data Carrier Detect (DCD) Function Mode	29
2.12. &D Command: Set Data Terminal Ready (DTR) Function Mode	30
2.13. &F Command: Restore Factory Settings	30
2.14. IPR Command: Set Fixed Local/DTE Rate	31
2.15. L Command: Monitor Speaker Loudness.....	31
2.16. M Command: Monitor Speaker Mode	32
2.17. &W Command: Save Stored Profile	32
2.18. &V Command: Display Current Configuration.....	32
2.19. &K Command: Flow Control Option	33
2.20. &S Command: DSR Option.....	34

3. GENERAL AT COMMANDS	35
3.1. I Command: Request Identification Information	35
3.2. Z Command: Reset and Restore User Configuration	38
3.3. +CGMI Command: Request Manufacturer Identification	39
3.4. +CGMM Command: Request Model Identification	39
3.5. +CGMR Command: Request Revision Identification	40
3.6. +CGSN Command: Request Product Serial Number Identification (IMEI)	40
3.7. +KGSN Command: Request Product Serial Number and Software Version	41
3.8. +HWREV Command: Request Hardware Revision	42
3.9. +CSCS Command: Set TE Character Set	43
3.10. +CIMI Command: Request International Mobile Subscriber Identity	43
3.11. +GMI Command: Request Manufacturer Identification	44
3.12. +GMM Command: Request Model Identification	44
3.13. +GMR Command: Request Revision Identification	45
3.14. +GSN Command: Request Product Serial Number (IMEI)	45
3.15. +GCAP Command: Request Complete TA Capability List	46
3.16. +KODIS Command: Access ODIS Information	46
3.17. &R Command: RTS and CTS Option	47
3.18. +FMI Command: Request Manufacturer Identification	48
3.19. +FMM Command: Request Model Identification	48
3.20. +FMR Command: Request Revision Identification	49
3.21. \N Command: Data Transmission Mode	49
3.22. N Command: Negotiate Handshake Option	50
3.23. S5 Command: Write Command Line Editing Character	50
3.24. S6 Command: Pause before Blind Dialing	51
3.25. S8 Command: Comma Dial Modifier Time	51
3.26. W Command: Extended Result Code	52
3.27. +KODIS Command: Access ODIS Information	52
4. CALL CONTROL COMMANDS	54
4.1. A Command: Answer a Call	54
4.2. H Command: Hook Control	54
4.3. D Command: Dial Number	54
4.4. D> Command: Direct Dialing from Phonebook	55
4.5. +CHUP Command: Hang up Call	55
4.6. +CR Command: Service Reporting Control	56
4.7. +CRC Command: Set Cellular Result Codes for Incoming Call Indication	57
4.8. +CSTA Command: Select Type of Address	58
4.9. +CMOD Command: Call Mode	58
4.10. +CEER Command: Extended Error Report	59

4.11.	+CSNS Command: Single Numbering Scheme.....	59
4.12.	+CBST Command: Select Bearer Service Type	60
5.	MOBILE EQUIPMENT CONTROL AND STATUS COMMANDS.....	62
5.1.	+CACM Command: Accumulated Call Meter.....	62
5.2.	+CAMM Command: Accumulated Call Meter (Maximum)	62
5.3.	+CCWE Command: Call Meter Maximum Event	63
5.4.	+CCLK Command: Real Time Clock.....	64
5.5.	+CIND Command: Indicator Control	64
5.6.	+CLAC Command: List Available AT Commands.....	65
5.7.	+CFUN Command: Set Phone Functionality.....	65
5.8.	+CMER Command: Mobile Equipment Event Reporting	66
5.9.	+CMEE Command: Report Mobile Termination Error.....	67
5.10.	+CCID Command: Request SIM Card Identification	68
5.11.	+FMR Command: Request Revision Identification	68
5.12.	+CPIN Command: Enter Pin	69
5.13.	+CPIN2 Command: Enter Pin2	70
5.14.	+CPUC Command: Price per Unit and Currency.....	70
5.15.	*PSRDBS Command: Change Frequency Band	71
5.16.	+CPAS Command: Phone Activity Status.....	72
5.17.	+CSQ Command: Signal Quality.....	72
5.18.	+KCELL Command: Cell Environment Information.....	73
5.19.	+KGPIO Command: Hardware IO Control	74
5.20.	+KGPIOCFG Command: GPIO Configuration	76
5.21.	+KADC Command: Analog Digital Converter	78
5.22.	+CSIM Command: Generic SIM Access	79
5.23.	+CLAN Command: Read Language	80
5.24.	+CCHO Command: Open Logical Channel	80
5.25.	+CCHC Command: Close Logical Channel	81
5.26.	+CGLA Command: Generic UICC Logical Channel Access	81
5.27.	+CRLA Command: Restricted UICC Logical Channel Access	82
5.28.	+CUAD Command: UICC Application Discovery	83
5.29.	+CRSM Command: Restricted SIM Access.....	83
5.30.	+CEAP Command: EAP Authentication.....	85
5.31.	+CERP Command: EAP Retrieve Parameters	86
5.32.	+KTEMPMON Command: Temperature Monitor	86
5.33.	+KBND Command: Current Networks Band Indicator	88
5.34.	+KSRAT Command: Set Radio Access Technology	88
5.35.	+CTZU Command: Automatic Time Zone Update	89
5.36.	+CTZR Command: Time Zone Reporting	89

5.37.	+XDATACHANNEL Command: Configure Data Channel.....	91
5.38.	+XCELLINFO Command: Provide Cell Information	92
5.39.	+KCCINFO Command: Camped Cell Information	93
5.40.	+KSLEEP Command: Power Management Control for UART.....	94
5.41.	+HBHV Command: Configure General System Behavior.....	95
5.42.	+CIREP Command: IMS Network Reporting	97
5.43.	+CIREG Command: Registration Information	98
5.44.	+GST Command: General System Status Information	99
5.45.	+CESQ Command: Extended Signal Quality	100
5.46.	+XCSQ Command: Radio Signal Strength and Quality with URC Support	101
5.47.	+XCESQ Command: Extended Signal Quality with URC Support.....	102
5.48.	+CPWROFF Command: Switch MS Off.....	104
5.49.	+KUSBCOMP Command: Set USB Composition	105
5.50.	+WMUSBVCC Command: USB VCC Detection Setting.....	106
5.51.	+BOOTDWLCFG Command: Boot Configuration for Firmware Download	107
5.51.1.	Description	107
5.51.2.	Syntax	109
5.52.	+KRIC Command: Ring Indicator Control	111
5.53.	+KSYNC Command: Application Synchronization Signal.....	112
5.54.	+KSREP Command: Mobile Start-Up Reporting.....	113
6.	NETWORK SERVICE RELATED COMMANDS	116
6.1.	+CAOC Command: Advice of Charge.....	116
6.2.	+CUSD: Unstructured Supplementary Service Data	116
6.3.	+CLCK Command: Facility Lock	117
6.4.	+CNUM Command: Subscriber Number.....	119
6.5.	+COLP Command: Connected Line Identification Presentation	119
6.6.	+COPN Command: Read Operator Name.....	120
6.7.	+COPS Command: Operator Selection	121
6.8.	+CPOL Command: Preferred PLMN List	122
6.9.	+CPWD Command: Change Password	123
6.10.	+CREG Command: Network Registration.....	124
6.11.	+CSSN Command: Supplementary Service Notification	125
6.12.	+CPLS Command: Select Preferred PLMN List	126
6.13.	+CEREG Command: EPS Network Registration Status.....	127
6.14.	+CEMODE Command: UE Modes of Operation for EPS.....	128
7.	PHONE BOOK MANAGEMENT	129
7.1.	+CPBF Command: Find Phonebook Entries.....	129
7.2.	+CPBR Command: Read Current Phonebook Entries	130
7.3.	+CPBS Command: Select Phonebook Memory Storage.....	131

7.4.	+CPBW Command: Write Phonebook Entry.....	132
7.5.	+PBREADY URC: Phonebook Ready.....	134
8.	SMS COMMANDS.....	135
8.1.	Parameters Definition.....	135
8.1.1.	Message Storage Parameters.....	135
8.1.2.	Message Data Parameters.....	136
8.2.	+CMGD Command: Delete Message.....	137
8.3.	+CMGF Command: Set Message Format.....	138
8.4.	+CMGL Command: List Messages.....	139
8.5.	+CMGR Command: Read Message.....	139
8.6.	+CMGS Command: Send Message.....	140
8.7.	+CMGW Command: Write Message to Memory.....	141
8.8.	+CMSS Command: Send Message from Storage.....	142
8.9.	+CNMI Command: New Message Indication.....	142
8.10.	+CSCB Command: Select Cell Broadcast Message Type.....	144
8.11.	+CSCA Command: Service Center Address.....	144
8.12.	+CSMP Command: Set Text Mode Parameters.....	145
8.13.	+CSMS Command: Select Message Service.....	145
8.14.	+CPMS Command: Preferred Message Storage.....	146
8.15.	+CSDH Command: Show Text Mode Parameters.....	147
8.16.	+XCMGS3GPP2 Command: Send 3GPP2 SMS Message.....	148
8.17.	+XCMT3GGP2 Command: Enable or Disable the 3GPP2 MT SMS URC.....	148
9.	PACKET DOMAIN COMMANDS.....	150
9.1.	+CGATT Command: PS Attach or Detach.....	150
9.2.	+CGACT Command: Activate or Deactivate PDP Context.....	150
9.3.	+CGANS Command: PDP Context Activation Manual Response.....	151
9.4.	+CGCMOD Command: Modify PDP Context.....	152
9.5.	+CGTFT Command: Traffic Flow Template.....	152
9.6.	+CGCLASS Command: GPRS Mobile Station Class.....	154
9.7.	+CGDCONT Command: Define PDP Context.....	155
9.8.	+CGDSCONT Command: Define Secondary PDP Context.....	157
9.9.	+CGDATA Command: Enter Data State.....	158
9.10.	+CGED Command: GPRS Cell Environment.....	159
9.11.	+CGEREP Command: Packet Domain Event Reporting.....	163
9.12.	+CGAUTO Command: Automatic Response.....	165
9.13.	+CGPADDR Command: Show PDP Address.....	166
9.14.	+CGQMIN Command: Quality of Service Profile (Minimum).....	166
9.15.	+CGEQMIN Command: 3G Quality of Service Profile (Minimum).....	167
9.16.	+CGQREQ Command: Request Quality of Service Profile.....	169

9.17.	+CGEQREQ Command: 3G Request Quality of Service Profile	170
9.18.	+CGEQNEG Command: 3G Negotiated Quality of Service Profile	172
9.19.	+CGREG Command: GPRS Network Registration Status	174
9.20.	+CGSMS Command: Select Service for MO SMS Messages	175
9.21.	+CRLP Command: Select Radio Link Protocol.....	175
9.22.	+XDNS Command: Dynamic DNS Request.....	176
9.23.	+XCEDATA Command: Establish ECM Data Connection	177
9.24.	+CGPIAF Command: Printing IP Address Format.....	178
9.25.	+WPPP Command: PDP Context Authentication Configuration.....	179
10. SIM APPLICATION TOOLKIT AT COMMANDS		180
10.1.	+STKPRO Command: Display List of Supported Proactive Commands	180
10.2.	+STKTR Command: Enter Response	183
10.3.	+STKENV Command: Send a SIM APPL TK Envelope Command.....	186
10.4.	+STKPROF Command: Terminal Profile Data.....	187
10.5.	+STKCC Notification: SIM – APPL – TK Call Control	187
10.6.	+STKCNF Notification: SIM – APPL – TK Proactive Session Status	188
10.7.	*PSSTKI Command: SIM Toolkit Interface Configuration.....	188
11. PROTOCOL SPECIFIC COMMANDS.....		192
11.1.	Preliminary Comments	192
11.2.	IP Address Format in AT Commands	192
11.3.	Session ID	192
11.4.	Connection of PDP Contexts.....	192
11.5.	Buffer Length of AT Commands.....	192
11.6.	Parameter Format of AT Commands	193
11.7.	Connection Configuration	193
11.7.1.	+KCNXCFG Command: GPRS Connection Configuration	193
11.7.2.	+KCNXTIMER Command: Connection Timer Configuration	194
11.7.3.	+KCNXPROFILE Command: Current Profile Connection Configuration	195
11.7.4.	+KCGPADDR Command: Display PDP Address	196
11.7.5.	+KCNX_IND Notification: Connection Status Notification.....	197
11.7.6.	+KCNXUP Command: Bring the PDP Connection Up.....	197
11.7.7.	+KCNXDOWN Command: Bring the PDP Connection Down	198
11.8.	Common Configuration	199
11.8.1.	+KPATTERN Command: Custom End of Data Pattern	199
11.8.2.	+KURCCFG Command: Enable or Disable the URC from Protocol Commands ..	199
11.8.3.	+KILOPT Command: General Options Configuration	201
11.9.	SSL Configuration	203
11.9.1.	+KSSLCRYPTO Command: Cipher Suite Configuration.....	203
11.9.2.	+KSSLCFG Command: SSL Configuration	204

11.10.	TCP Specific Commands	205
11.10.1.	+KTCPCFG Command: TCP Connection Configuration	205
11.10.2.	+KTCPCNX Command: Start TCP Connection	206
11.10.3.	+KTCPCRCV Command: Receive Data through a TCP Connection	207
11.10.4.	+KTCPSND Command: Send Data through a TCP Connection	208
11.10.5.	+KTCPCLOSE Command: Close Current TCP Operation	208
11.10.6.	+KTCPDEL Command: Delete a Configured TCP Session	209
11.10.7.	+KTCP_SRVREQ Notification: Incoming Client Connection Request	210
11.10.8.	+KTCP_DATA Notification: Incoming Data through a TCP Connection	211
11.10.9.	+KTCP_IND Notification: TCP Status	212
11.10.10.	+KTCPSTAT Command: Get TCP Socket Status	212
11.10.11.	+KTCPSTART Command: Start a TCP Connection in Direct Data Flow	213
11.10.12.	+KTCP_ACK Notification: Status Report for Latest TCP Data	214
11.10.13.	+KTCPPACKINFO Command: Poll ACK Status for the Latest Data	214
11.11.	UDP Specific Commands	215
11.11.1.	+KUDPCFG Command: UDP Connection Configuration	215
11.11.2.	+KUDPCRCV Command: Receive Data through a UDP Connection	216
11.11.3.	+KUDPSND Command: Send Data through a UDP Connection	217
11.11.4.	+KUDPCLOSE Command: Close Current UDP Operation	218
11.11.5.	+KUDPDEL Command: Delete a Configured UDP Session	219
11.11.6.	+KUDP_IND Notification: UDP Status	220
11.11.7.	+KUDP_DATA Notification: Incoming Data through a UDP Connection	220
11.12.	FTP Client Specific Commands	221
11.12.1.	+KFTPCFG Command: FTP Configuration	221
11.12.2.	+KFTPCNX Command: Start FTP Connection	222
11.12.3.	+KFTPCRCV Command: Receive FTP Files	223
11.12.4.	+KFTPSND Command: Send FTP Files	224
11.12.5.	+KFTPDEL Command: Delete FTP Files	226
11.12.6.	+KFTP_IND Notification: FTP Status	227
11.12.7.	+KFTPCLOSE Command: Close Current FTP Connection	227
11.12.8.	+KFTPCFGDEL Command: Delete a Configured FTP Session	228
11.13.	HTTP Client Specific Commands	228
11.13.1.	+KHTTPCFG Command: HTTP Connection Configuration	228
11.13.2.	+KHTTPCNX Command: Start the HTTP Connection	230
11.13.3.	+KHTTPHEADER Command: Set the HTTP Request Header	230
11.13.4.	+KHTTPGET Command: Get HTTP Server Information	231
11.13.5.	+KHTTPHEAD Command: Get HTTP Headers	232
11.13.6.	+KHTTPPOST Command: Perform HTTP Post	233
11.13.7.	+KHTTPCLOSE Command: Close an HTTP Connection	234
11.13.8.	+KHTTPDEL Command: Delete a Configured HTTP Session	234
11.13.9.	+KHTTP_IND Notification: HTTP Status	235
11.14.	HTTPS Client Specific Commands	236
11.14.1.	+KHTTSCFG Command: HTTPS Connection Configuration	236
11.14.2.	+KHTTSCNX Command: Start HTTPS Connection	237
11.14.3.	+KHTTSHHEADER Command: Set the HTTPS Request Header	238
11.14.4.	+KHTTSGET Command: Get Information from HTTPS Server	239
11.14.5.	+KHTTSHHEAD Command: Retrieve HTTPS Headers	240

11.14.6.	+KHTTPSPPOST Command: Send Data to HTTPS Server.....	241
11.14.7.	+KHTTPSCLOSE Command: Close an HTTPS Connection	242
11.14.8.	+KHTTPSEDEL Command: Close an HTTPS Connection.....	242
11.14.9.	+KHTTPS_IND Notification: HTTPS Status.....	243
11.15.	SSL Certificate Manager	243
11.15.1.	+KCERTSTORE Command: Store Root CA and Local Certificates to Internal Storage	243
11.15.2.	+KPRIVKSTORE Command: Store Private Key Associated to a Local Certificate	244
11.15.3.	+KCERTDELETE Command: Delete Local Certificate from the Index	245
11.15.4.	+KPRIVKDELETE Command: Delete Private Key from the Index	246
12.	AVMS COMMANDS	247
12.1.	+WDSA Command: Change Account for DM Connection	247
12.2.	+WDSC Command: Device Services Configuration	248
12.3.	+WSDS Command: Device Services Local Download	250
12.4.	+WDSE Command: Device Services Error	251
12.5.	+WDSF Command: Device Services Fallback.....	252
12.6.	+WDSG Command: Device Services General Status	253
12.7.	+WDSI Command: Device Services Indication	254
12.8.	+WDSR Command: Device Services Reply.....	257
12.9.	+WDSS Command: Device Services Session	258
12.10.	+WDSM Command: Manage Device Services	261
13.	TEST COMMANDS	263
13.1.	+WMTXPOWER Command: Test RF Tx	263
13.2.	+WMRXPOWER Command: Test RF Rx	264
13.3.	+WMANTSEL Command: Select Main and/or Diversity Antenna.....	265
14.	NV RELATED COMMANDS.....	267
14.1.	Auto Generation of NV Backup Files.....	267
14.2.	Auto Recovery from Backup NV Files	267
14.3.	+NVBU: NV Backup Status and Control	267
14.4.	+NVBU_IND: NV Backup Status Notification	270
15.	BOARD SUPPORT COMMANDS	271
15.1.	+WIMEI Command: IMEI Write and Read	271
15.2.	+WCARRIER: Show Carrier Name	272
16.	APPENDIX	273
16.1.	Result Codes and Unsolicited Messages.....	273
16.2.	Error Codes	274
16.2.1.	CME Error Codes	274
16.2.2.	CEER Error Codes	276
16.2.3.	CMS Error Codes	281
16.2.4.	GPRS Error Codes.....	282

16.2.5.	FTP Reply Codes	283
16.2.6.	AVMS Error Codes.....	284
16.2.7.	Error Case Examples	284
16.3.	Commands without Pin Code Requirement	286
16.4.	GSM 27.010 Multiplexing Protocol	287
16.5.	TCP Commands Examples	288
16.5.1.	Client Mode	288
16.5.2.	Server Mode.....	289
16.5.3.	Polling for the Status of a Socket.....	290
16.5.4.	End to End TCP Connection.....	291
16.5.5.	Error Case for End to End TCP Connection	292
16.5.6.	Use Cases for AT+KTCPPACKINFO and <URC-ENDTCP-enable> Option	292
16.6.	UDP Commands Examples.....	294
16.6.1.	Client Mode	294
16.6.2.	Server Mode.....	295
16.6.3.	Use Cases for KTCP_DATA and KUDP_DATA	296
16.7.	FTP Commands Examples	298
16.7.1.	Client Mode	298
16.7.2.	"FTP Resume" Use Case.....	299
16.8.	HTTP Commands Usage Examples	300
16.9.	Switch Data/Command Mode DTR +++ ATO Behavior Table	302

>> 1. Introduction

This document presents the AT Command Set for the AirPrime HL7518 and HL7548 modules.

1.1. Reference Configuration

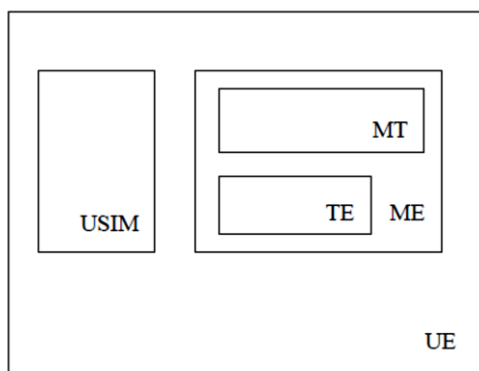


Figure 1. Reference Configuration

The User Equipment (UE) consists of the mobile equipment (ME) and the (U)SIM messages may be stored in either, but the present document does not distinguish between messages stored in the (U)SIM or in the ME. The management of message storage in the two parts of the UE is a matter for the UE implementation.

1.2. AT Command Principles

The "AT" or "at" prefix must be set at the beginning of each line. To terminate a command line, a <CR> character must be inserted.

Commands are usually followed by a response that includes '<CR><LF><response><CR><LF>'. Throughout this document, only the responses are indicated, the <CR> and <LF> characters are omitted intentionally.

Four kinds of extended AT commands are implemented:

Command Type	Syntax	Definition
Test Command	AT+CXXX=?	The equipment returns the list of parameters and values ranges set with the corresponding Write command or by internal processes
Read Command	AT+CXXX?	This command returns the currently set value of parameters
Write Command	AT+CXXX=<...>	This command sets user-related parameter values
Execution command	AT+CXXX	The execution command reads non-variable parameters affected by internal processes in the equipment

1.2.1. Parameters

In this document, the default parameters are underlined and the optional parameters are enclosed in square brackets.

Optional parameters or sub-parameters can be omitted unless they are followed by other parameters. A parameter in the middle of a string can be omitted by replacing it with a comma.

When the parameter is a character string, the string must be enclosed in quotation marks.

All space characters will be ignored when using strings without quotation marks.

1.2.2. Answers and Responses

There is always an answer sent by the TA to an AT Command line (except the very special case of a TA setup for no answer, see ATQ).

The answer is always terminated by an indication of success or failure. However, regarding the setup of the TA (by AT Commands), the message may be different.

Classical messages

OK or **ERROR**

Extended Error message (see AT+CMEE)

+CME ERROR: <n>

(See Appendix for the different values for <n>)

Numeric Mode (see ATV)

<n> with: <n> = 0 ⇔ OK or <n> is an error code

1.2.3. Multiple AT Commands on the Same Command Line

You may enter several AT commands on the same line. This eliminates the need to type the "AT" or "at" prefix before each command and to wait for the answer for each command. The main advantage is to avoid losing bandwidth on the link between DTE and the Module.

There is no separator between two basic commands but a semi-colon character is necessary between two extended commands (prefix +). The command line buffer accepts a maximum of 391 characters. If this number is exceeded none of the commands will be executed and TA returns ERROR.

If a command is not supported, then the treatment of the line is stopped (i.e. the following ones are not treated) and an error message is returned.

Example:

Command: **ATZ&K3+CBST=7,0,1;+CBST?**

Answer: **+CBST=7,0,1**
OK

1.2.4. AT Commands on Separate Lines

When you enter a series of AT commands on *separate* lines, it is strongly advised to leave a pause between the preceding and the following command until the final answer (OK or Error message) appears. This avoids sending too many AT commands at a time without waiting for a response for each.

1.3. Unsolicited Result Codes (URCs)

Unsolicited result codes (URCs) are sent simultaneously to all the channels (USB/UART) configured in AT commands mode.

URCs are not sent to channels configured in Data/NMEA/Traces modes.

In sleep mode URCs wake up the module and are sent to the AT commands channels.

1.4. PDP Context Usage

1.4.1. HL7518

PDP context IDs (CIDs) are designed with the following purposes:

- CID=1 with APN=VZWIMS is reserved for IMS in Verizon (SMS over IMS)
- CID=2 with APN=VZWADMIN is reserved for Verizon Administration (SIM provision, OMADM, etc.)
- CID=3 with APN=VZWINTERNET is the default Internet APN in Verizon
- CID=4 with APN=VZWAPP is the default application APN in Verizon
- CID=5 is reserved for Sierra Wireless AirVantage (AVMS)

Note that:

- CID=1 to CID=4 are managed by Verizon OMADM administration. These APNs may be updated by the VZW OMADM server, e.g. after server's initialized DM session, or after a SIM card change.
- CID=3 to CID=10 are intended for customer use if another APN/PDP context is needed (e.g. APN for private network). Note that:
 - CID=3 or 4 may be updated by the VZW OMADM server
 - CID=5 is reserved for AVMS, but can be used by customer if AVMS feature is not used
 - It is recommended to use CID=6 to CID=10 in customer application if another APN/PDP context is needed
- CID=11 to CID=20 are disabled (related AT commands return error response) as maximum PDP context (APN parameter list) is 10 entries for Verizon data retry restriction. These CIDs can only be used properly provided that their IP-type and APN are the same as one configured in CID=1 to CID=10.
- CID=1 or 2 and CID=11-20 are locked by AT+HBHV=2 (related AT commands return error response).

Caution: *Two failed activation attempts (+CGACT, DUT, etc.) due to invalid/incorrect APN blocks the corresponding CID from further attempts until the module reboots, due to Verizon data retry restriction. If the CID is blocked, AT+CGACT returns +CME ERROR: 4 until the module reboots.*

1.4.2. HL7548

PDP context IDs (CIDs) are designed with the following purposes:

- CID=1 with APN=Itemobile.apn is reserved for IMS in Rogers (reserved by LTE protocol stack)
- CID=5 is reserved for Sierra Wireless AirVantage (AVMS)

Note that CID=1 is locked by AT+HBHV=2 (PDP context related AT commands return error response).

Caution: *Failed activation attempts (+CGACT, DUT, etc.) due to invalid/incorrect APN blocks the corresponding CID from further attempts until data retry condition releases PDP context blocking.*

1.5. SMS Commands

SMS is sent over IMS in the Verizon network using 3GPP2 SMS PDU format and protocol. Generally, 3GPP AT commands do not work with 3GPP2 SMS, but additional support is added in the HL7518 and HL7548 to convert input SMS from 3GPP format to 3GPP2 format. This allows the use of 3GPP AT commands like +CMGS, +CNMI and +CMGD to send, show or delete SMS messages as if the SMS is sent, received or stored in 3GPP SMS PDU format.

However, +XCMGS3GPP2 and +XCMT3GGP2 are still available for sending and receiving SMS messages in 3GPP2 SMS PDU format.

1.6. Document Modification

The commands described in this document are only to be used for usual AT commands use.

The information provided for the commands are subject to change without notice.

1.7. Abbreviations

Abbreviation	Definition
ACM	Accumulated Call Meter
ADC	Analog Digital Converter
ADN	Abbreviated Dialing Number (Phonebook)
AMR	Adaptive Multi-Rate
AMR-FR	AMR Full Rate (full rate speech version 3)
AMR-HR	AMR Half Rate (half rate speech version 3)
AOC	Advice Of Charge
APN	Access Point Name
ARN	Address Resolution Protocol
ARFCN	Absolute Radio Frequency Channel Number
ASCII	American Standard Code for Information Interchange
AT	ATtention; Hayes Standard AT command Set
BCCH	Broadcast Channel
BER	Bit Err Rate

Abbreviation	Definition
BM	Broadcast Message Storage
CBM	Cell Broadcast Message
CB	Cell Broadcast
CCK	Corporate Control Key
CCM	Current Call Meter
CHV	Card Holder Verification
CHAP	Challenge handshake Authentication Protocol
CI	Cell Identifier
CLI	Client Line Identification
CNL	Cooperative Network List
CODEC	Coder Decoder
COLP	Connected Line Identification Presentation
CPHS	Common PCN Handset Specification
CPU	Central Processing Unit
CSD	Circuit Switched Data
CSP	Customer Service Profile
CTM	Cellular Text telephone Modem
CTS	Clear To Send signal
CUG	Closed User Group
DAC	Digital to Analog Converter
DTR	Data Terminal Ready
DCS	Digital Cellular System
DCE	Data Circuit Equipment
DCD	Data Carrier Detect
DLC	Data Link Connection
DLCI	Data Link Connection Identifier
DM	Device Management
DNS	Domain Name System
DSR	Data Set Ready
DTE	Date Terminal Equipment
DTMF	Dual Tone Multi-Frequency
DTR	Data Terminal Ready
ECC	Emergency Call Codes
ECM	Error Correction Mode
ECT	Explicit Call Transfer
EDGE	Enhanced Data rates for GSM Evolution
EEPROM	Electrically Erasable Programming Only Memory
EF	Elementary Files
EFR	Enhanced Full Rate (full rate speech version 2)
EGPRS	Enhanced GPRS
ENS	Enhanced Network Selection
E-ONS	Enhanced Operator Name Service
ERMES	European Radio Messaging System

Abbreviation	Definition
ETSI	European Telecommunications Standards Institute
FD	FIFO depth
FDN	Fixed Dialing Number (Phonebook)
FR	Full Rate (full rate speech version 1)
GERAN	GSM EDGE Radio Access Network
GPIO	General Purpose Input Output
GPRS	General Packet Radio Service
GSM	Global System for Mobile communication
HDLC	High-level Data Link Control
HFR	High Frequency Regeneration
HLR	Home Location Register
HR	Half Rate (half rate speech version 1)
ID	IDentifier
IETF	Internet Engineering Task Force
IMEI	International Mobile Equipment Identity
IMSI	International Mobile Subscriber Identity
IN/OUT/IN_OUT	In, out or In Out
I/O	Input/Output
IP	Internet Protocol
LAC	Local Area Code
LED	Light Emitting Diode
LND	Last Number Dialed
LP	Language Preferred
LPI	Lines Per Inch
M	Mandatory
MCC	Mobile Country Code
ME	Mobile Equipment
MMI	Man Machine Interface
MNC	Mobile Network Code
MNP	Microcom Networking Protocol
MO	Mobile Originated
MOC	Mobile Originated Call (outgoing call)
MS	Mobile Station
MSB	Most Significant Bit
MSISDN	Mobile Station International ISDN Number
MT	Mobile Terminal
MTC	Mobile Terminated Call (incoming call)
N.A.	Not applicable
NCK	Network Control Key
NITZ	Network Information and Time Zone
NSCK	Network Subset Control Key
NTC	Negative Temperature Coefficient
N.U.	Not used

Abbreviation	Definition
O	Optional
OA	Outgoing Access
OPL	Operator PLMN List
OS	Operating System
OTA	Over the Air
PAD	Portable Application Description
PAP	Password Authentication Protocol
PC	Personal Computer
PCCP	PC character set Code Page
PCK	Personalization Control Key
PCL	Power Control Level
PCM	Protection Circuit Module
PCN	Personal Communication Network
PCS 1900	Personal Communication Service
PDP	Packet Data Protocol
PDU	Protocol Description Unit
PIN	Personal Identification Number
PLMN	Public Land Mobile Networks
PNN	PLMN Network Name
PPP	Point-to-Point Protocol/Peer to Peer
PSTN	Public Switched Telephone Network
PTS	Product Technical Specification
PUCT	Price per Unit and Currency Table
PUK	PIN Unlock Key
PWM	Pulse Width Modulation
QoS	Quality of Service
RAM	Random Access Memory
RDMS	Remote Device Management Services
RI	Ring Indicator
RIL	Radio Interface Layer
RLP	Radio Link Protocol
RSSI	Received Signal Strength Indication
RTS	Ready To Send signal
RX	Reception
SAP	Service Access Point
SC	Service Center
SDU	Service Data Unit
SIM	Subscriber Information Module
SMSR	Short Message Status Report
SMS	Short Message Service
SS	Supplementary Services
SPCK	Service Provider Control Key
SPN	Service Provider Name

Abbreviation	Definition
STK	SIM ToolKit
SVN	Software Version Number
TA	Terminal Adaptor
TBF	Temporary Block Flow
TE	Terminal Equipment
TTY	TeleTYpe
TON/NPI	Type Of Number/Numbering Plan Identification
TX	Transmission
UART	Universal Asynchronous Receiver Transmitter
UCS2	Universal Character Set 2 Character table (2-byte coding)
UDUB	User Determined User Busy
UIH	Unnumbered Information with Header check
USB	Universal Serial Bus
USSD	Unstructured Supplementary Service Data

2. V25ter AT Commands

2.1. +++ Command: Switch from Data Mode to Command Mode

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> +++	<u>Response</u> OK
<u>Reference</u> V.25Ter	<u>Notes</u> <ul style="list-style-type: none"> • This command is only available during data mode. The +++ character sequence suspends the data flow over the AT interface and switches to command mode. This allows entering AT commands while maintaining the data connection to the remote device. • To return to data mode, use the ATO[n] command. • Line needs one second silence before and one second after (do not end with terminating character). • The "+" character may be changed with the ATS2 command (see following chapters). • The +++ characters are not transmitted in the data flow.

2.2. A/ Command: Repeat Previous Command Line

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> A/	<u>Response</u> Depend on the previous command
<u>Reference</u> V.25Ter	<u>Notes</u> Line does not need to end with terminating character.

2.3. O Command: Switch from Command Mode to Data Mode

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> ATO[<n>]	<u>Response</u> TA returns to data mode from command mode: CONNECT <text>

HL7518 and HL7548							
	<p>If connection is not successfully resumed: NO CARRIER</p> <p><u>Parameter</u></p> <table> <tr> <td><n></td> <td>0</td> <td>Switch from command mode to data mode</td> </tr> <tr> <td></td> <td>1 – 200</td> <td>Session ID</td> </tr> </table>	<n>	0	Switch from command mode to data mode		1 – 200	Session ID
<n>	0	Switch from command mode to data mode					
	1 – 200	Session ID					
<u>Reference</u> V.25Ter	<u>Notes</u> ATO is the alternative command to the +++ escape sequence described in section 2.1. When a data call has been established and TA is in command mode, ATO causes the TA to resume the data connection and return to data mode.						

2.4. E Command: Enable Echo Command

HL7518 and HL7548							
<i>Execute command</i>							
<u>Syntax</u> ATE[<value>]	<p><u>Response</u></p> <p>OK</p> <p>or</p> <p>+CME ERROR: <err></p> <p><u>Parameters</u></p> <table> <tr> <td><value></td> <td>0</td> <td>Echo OFF</td> </tr> <tr> <td></td> <td>1</td> <td>Echo ON</td> </tr> </table>	<value>	0	Echo OFF		1	Echo ON
<value>	0	Echo OFF					
	1	Echo ON					
<u>Notes</u>	<ul style="list-style-type: none"> This setting determines whether or not the TA echoes characters received from TE during the command state. <value > is saved in non-volatile memory per AT port over module reboot. 						

2.5. Q Command: Set Result Code Presentation Mode

HL7518 and HL7548							
<i>Execute command</i>							
<u>Syntax</u> ATQ[<n>]	<p><u>Response</u></p> <p>OK (if <n> = 0)</p> <p>Nothing (if <n> = 1)</p> <p><u>Parameters</u></p> <table> <tr> <td><n></td> <td>0</td> <td>Result codes transmitted by TA</td> </tr> <tr> <td></td> <td>1</td> <td>No result codes transmitted by TA</td> </tr> </table>	<n>	0	Result codes transmitted by TA		1	No result codes transmitted by TA
<n>	0	Result codes transmitted by TA					
	1	No result codes transmitted by TA					
<u>Notes</u>	<ul style="list-style-type: none"> Specifies whether the TA transmits any result code to the TE. Information text transmitted in response is not affected by this setting. <n> is saved in non-volatile memory per AT port over module reboot. 						

2.6. S0 Command: Set Number of Rings before Automatic Call Answering

HL7518 and HL7548	
<i>Read command</i>	
<u>Syntax</u> ATS0?	<u>Response</u> <n> OK
<i>Write command</i>	
<u>Syntax</u> ATS0=<n>	<u>Response</u> OK <u>Parameters</u> <n> 0 Automatic answering deactivated 1 – 255 Number of rings before automatically answering
<u>Notes</u>	In data mode (after any CONNECT) automatic call answering does not work that means that incoming calls are not automatically answered during data mode.

2.7. S4 Command: Set Response Formatting Character

HL7518 and HL7548	
<i>Read command</i>	
<u>Syntax</u> ATS4?	<u>Response</u> <n> OK
<i>Write command</i>	
<u>Syntax</u> ATS4=<n>	<u>Response</u> OK <u>Parameters</u> <n> 10 Response formatting character <LF>: line feed
<u>Notes</u>	This parameter determines the character recognized by TA to terminate answer line (10 = <LF> by default); it cannot be changed.

2.8. S7 Command: Set Delay for Connection Completion

HL7518 and HL7548	
<i>Read command</i>	
<u>Syntax</u> ATS7?	<u>Response</u> <n> OK
<i>Write command</i>	
<u>Syntax</u> ATS7=<n>	<u>Response</u> OK
	<u>Parameters</u> <n> 1 – 255 Number of second to wait for connection completion

2.9. V Command: TA Response Format

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> ATV[<i>value</i>]	<u>Response</u> In case of information responses, the format is: for V0: <text><CR><LF> for V1: <CR><LF><text><CR><LF> In case of result codes, the format is: for V0: <numeric code><CR> for V1: <CR><LF><verbose code><CR><LF> or +CME ERROR: <err>
	<u>Parameters</u> <value> 0 Short result code format: <numeric code> 1 Long result code format: <verbose code>
<u>Notes</u>	<n> is saved in non-volatile memory per AT port over module reboot.

2.10. X Command: Result Code Selection and Call Progress Monitoring Control

HL7518 and HL7548																
<i>Write command</i>																
<u>Syntax</u> ATX[<value>]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <table border="0"> <tr> <td><value></td> <td>0</td> <td>CONNECT result code only returned, dial tone and busy detection are both disabled</td> </tr> <tr> <td></td> <td>1</td> <td>CONNECT<text> result code only returned, dial tone and busy detection are both disabled</td> </tr> <tr> <td></td> <td>2</td> <td>CONNECT<text> result code returned, dial tone detection is enabled, busy detection is disabled</td> </tr> <tr> <td></td> <td>3</td> <td>CONNECT<text> result code returned, dial tone detection is disabled, busy detection is enabled</td> </tr> <tr> <td></td> <td>4</td> <td>CONNECT<text> result code returned, dial tone and busy detection are both enabled</td> </tr> </table>	<value>	0	CONNECT result code only returned, dial tone and busy detection are both disabled		1	CONNECT<text> result code only returned, dial tone and busy detection are both disabled		2	CONNECT<text> result code returned, dial tone detection is enabled, busy detection is disabled		3	CONNECT<text> result code returned, dial tone detection is disabled, busy detection is enabled		4	CONNECT<text> result code returned, dial tone and busy detection are both enabled
<value>	0	CONNECT result code only returned, dial tone and busy detection are both disabled														
	1	CONNECT<text> result code only returned, dial tone and busy detection are both disabled														
	2	CONNECT<text> result code returned, dial tone detection is enabled, busy detection is disabled														
	3	CONNECT<text> result code returned, dial tone detection is disabled, busy detection is enabled														
	4	CONNECT<text> result code returned, dial tone and busy detection are both enabled														
<u>Notes</u>	<ul style="list-style-type: none"> This command defines the result code to be returned, as well as sets the dial tone or busy detection features. <value> is saved in non-volatile memory per AT port over module reboot. 															

2.11. &C Command: Set Data Carrier Detect (DCD) Function Mode

HL7518 and HL7548							
<i>Execute command</i>							
<u>Syntax</u> AT&C<value>	<u>Response</u> OK <u>Parameters</u> <table border="0"> <tr> <td><value></td> <td>0</td> <td>DCD line is always active</td> </tr> <tr> <td></td> <td>1</td> <td>DCD line is active in the presence of data carrier only</td> </tr> </table>	<value>	0	DCD line is always active		1	DCD line is active in the presence of data carrier only
<value>	0	DCD line is always active					
	1	DCD line is active in the presence of data carrier only					
<u>Reference</u> V.25Ter	<u>Notes</u> DCD/AT&C is only applicable to the USB AT port; it has no effect on UART1.						

2.12. &D Command: Set Data Terminal Ready (DTR) Function Mode

HL7518 and HL7548										
<i>Execute command</i>										
<u>Syntax</u> AT&D<value>	<u>Response</u> OK <u>Parameters</u> <table border="0"> <tr> <td><value></td> <td>0</td> <td>TA ignores status on DTR</td> </tr> <tr> <td></td> <td>1</td> <td>DTR drops from active to inactive. Change to command mode while retaining the connected data call</td> </tr> <tr> <td></td> <td>2</td> <td>DTR drops from active to inactive. Disconnect data call, change to command mode. Auto-answer is off during DTR inactive state</td> </tr> </table>	<value>	0	TA ignores status on DTR		1	DTR drops from active to inactive. Change to command mode while retaining the connected data call		2	DTR drops from active to inactive. Disconnect data call, change to command mode. Auto-answer is off during DTR inactive state
<value>	0	TA ignores status on DTR								
	1	DTR drops from active to inactive. Change to command mode while retaining the connected data call								
	2	DTR drops from active to inactive. Disconnect data call, change to command mode. Auto-answer is off during DTR inactive state								
<u>Reference</u> V.25Ter	<u>Notes</u> <ul style="list-style-type: none"> This command only applies to data calls. DTR/AT&D is only applicable to the USB AT port; it has no effect on UART1. 									

2.13. &F Command: Restore Factory Settings

HL7518 and HL7548				
<i>Execute command</i>				
<u>Syntax</u> AT&F[<value>]	<u>Response</u> OK <u>Parameter</u> <table border="0"> <tr> <td><value></td> <td>0 or Omitted</td> <td>Restore STORED PROFILE 0 and 1 to factory settings</td> </tr> </table>	<value>	0 or Omitted	Restore STORED PROFILE 0 and 1 to factory settings
<value>	0 or Omitted	Restore STORED PROFILE 0 and 1 to factory settings		
<u>Reference</u> V.25Ter	<u>Notes</u> This command also restores the factory settings to the active profile.			
<u>Examples</u>	AT&F OK AT&F0 OK AT&F1 ERROR			

2.14. IPR Command: Set Fixed Local/DTE Rate

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+IPR=?</p>	<p><u>Response</u> +IPR: (list of supported auto detectable <rate> values)[,(list of fixed only <rate> values)] OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+IPR?</p>	<p><u>Response</u> +IPR: <baud_rate> OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+IPR= <baud_rate></p>	<p><u>Response</u> OK</p> <p>or</p> <p>+CME ERROR: <err></p> <p><u>Parameters</u> <baud_rate> 115200 (default value) 300, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 230400, 460800, 500000, 750000, 921600, 1843200, 3000000, 3250000, 6000000</p>
<p><u>Notes</u></p>	<ul style="list-style-type: none"> • Not all listed rates may be available as they depend on the target. • The full range of data rate values may be reduced depending on hardware or other criteria. • <baud_rate> is saved in non-volatile memory per AT port over module reboot.

2.15. L Command: Monitor Speaker Loudness

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> ATL [<volume>]</p>	<p><u>Response</u> OK</p> <p><u>Parameter</u> <volume> 0-9</p>
<p><u>Notes</u></p>	<p>The responses of this command are compliant with the recommendation but this command has no effect.</p>

2.16. M Command: Monitor Speaker Mode

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> ATM[<mode>]	<u>Response</u> OK
	<u>Parameter</u> <mode> 0 – 65535
<u>Notes</u>	The responses of this command are compliant with the recommendation but this command has no effect.

2.17. &W Command: Save Stored Profile

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> AT&W[<value>]	<u>Response</u> OK
	<u>Parameters</u> <value> 0 or Omitted Save in STORED PROFILE 0 1 Save in STORED PROFILE 1
<u>Reference</u> V.25Ter	<u>Notes</u> <ul style="list-style-type: none"> • This command saves the current configuration in a non-erasable place. • &R, S05, S06 and S08 have no effect and are not saved in non-volatile memory.
<u>Examples</u>	AT&W // Save current configuration to Profile 0 OK
	AT&W0 // Save current configuration to Profile 0 OK
	AT&W1 // Save current configuration to Profile 1 OK

2.18. &V Command: Display Current Configuration

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> AT&V[<value>]	<u>Response</u> ACTIVE PROFILE: <current configuration> STORED PROFILE 0: <user default configuration> STORED PROFILE 1: <manufacturer configuration> OK

HL7518 and HL7548	
	<p><u>Parameters</u> <value> <u>0</u> Profile number This command indicates the result of certain actions as shown below:</p> <div style="text-align: center;"> <pre> graph TD ActiveProfile[Active Profile] -- ATZ --> StoredProfile[Stored profile] StoredProfile -- AT&W --> ActiveProfile DefaultSettings[Default Settings] -- AT&F --> ActiveProfile </pre> </div>
<u>Reference</u> Sierra Wireless Proprietary	<p><u>Notes</u></p> <ul style="list-style-type: none"> At startup, the latest profile stored with AT&W is restored to the Active profile (no restoration if AT&W has not been used). The configuration is a text string on multiple lines as shown in the example below. This string may vary depending on the manufacturer, the product and the user setup. Some commands and registers have no effect and are only implemented for compliance with V.25ter: <ul style="list-style-type: none"> Registers S05, S06 and S08 will always return 8, 2 and 2 respectively. &R will always return 1.
<u>Example</u>	<p>AT&V ACTIVE PROFILE: E1 Q0 V1 X0 &C1 &D1 &R:1 &S0 &K0 +IPR:115200 +FCLASS0 S00:0 S01:0 S04:10 S05:8 S06:2 S07:255 S08:2 STORED PROFILE 0: E1 Q0 V1 X0 &C1 &D1 &R:1 &S0 &K3 +IPR:115200 +FCLASS0 S00:0 S01:0 S04:10 S05:8 S06:2 S07:255 S08:2 STORED PROFILE 1: E1 Q0 V1 X0 &C1 &D1 &R:1 &S0 &K3 +IPR:115200 +FCLASS0 S00:0 S01:0 S04:10 S05:8 S06:2 S07:255 S08:2 OK</p>

2.19. &K Command: Flow Control Option

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> AT&K<mode>	<p><u>Response</u> OK</p> <p><u>Parameters</u> <mode> <u>0</u> Disable all flow control <u>3</u> Enable bi-directional hardware flow control</p>

HL7518 and HL7548	
<u>Reference</u> V.25ter	<u>Notes</u> <ul style="list-style-type: none"> • Use AT&V0 to display the current flow control setting. • Sierra Wireless recommends the use of hardware flow control. • AT&K3 hardware flow control is only effective for UART1 and +KSLEEP=2 (UART always ON); it has no effect on the USB AT port. • <mode> is saved in non-volatile memory per AT port over module reboot.

2.20. &S Command: DSR Option

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT&S [<override>]	<u>Response</u> OK
	<u>Parameter</u> <override> 0 or Omitted DSR signal is always ON (0 is the default value) 1 DSR signal is always OFF
<u>Reference</u> V.25ter	<u>Notes</u> This is a dummy command and has no effect on the DSR signal.

3. General AT Commands

3.1. I Command: Request Identification Information

HL7518 and HL7548

Execute command

Syntax

ATI[<value>]

Response

If <value> = 0 or omitted:

<model>

OK

If <value> = 1:

<short version name>

OK

If <value> = 3:

<version tag>

OK

If <value> = 4:

<fuse state>

OK

If <value> = 9:

<version name>

<model>

<short version name>

<chipset>

<fuse state>

<build date & time>

<source rev>

OK

If <value> =10:

Modem-Firmware:

<version name>

<model>

<short version name>

<chipset>

<fuse state>

<build date & time>

<source rev>

Primary-Boot:

<version name>

<build date & time>

<source rev>

HL7518 and HL7548	
	<p>Secondary-Boot: <version name> <build date & time> <source rev></p> <p>Update-Agent: <version name> <build date & time> <source rev></p> <p>4G-Firmware: <4G FW version name></p> <p>3G-Firmware: <4G FW version name> OK</p> <p><u>Parameters</u></p> <p><model> Model identifier</p> <p><version name> Firmware version For example: AHL75xx_TEST.0.0.141506 <...> (for testing purpose firmware) AHL75xx.1.0.141506.<...> (for official firmware)</p> <p><short version name> Short version of the firmware name For example: HL75xx_TEST.0.0 (for testing purpose firmware) HL75xx.1.0 (for official firmware)</p> <p><4G FW version name> 4G Firmware version string</p> <p><3G FW version name> 3G Firmware version string</p> <p><chipset> Chipset name</p> <p><build date & time> Souce code build time in format YYYY-MM-DD HH:MM:SS</p> <p><source rev> Source code revision in version control</p> <p><fuse state> Fuse state information FUSED Fused module NON-FUSED Non-fused module</p>
<u>Reference</u> V.25ter	<u>Notes</u> See also AT+CGMR
<u>Examples</u>	<p>ATI HL7518 //When using an HL7518 module OK</p> <p>ATI0 HL7518 //When using an HL7518 module OK</p>

HL7518 and HL7548

```

# For testing purpose firmware, TEST given in the version name
ATI3
AHL75xx_TEST.0.0.142102.201406222214.x7160_1
OK

# Examples on official firmware,
ATI1
HL75xx.1.0
OK

ATI3
AHL75xx.1.0.141506.201406241105.x7160_1
OK

# For fused module
ATI4
FUSED
OK

ATI9
AHL75xx.1.0.141506.201406241105.x7160_1
HL7518 //When using an HL7518 module
HL75xx.1.0
x7160I
FUSED
2014-06-24 11:15:12
r53
OK

# For non-fused module
ATI4
NON-FUSED
OK

ATI9
AHL75xx.1.0.141506.201406241105.x7160_1
HL7518 //When using an HL7518 module
HL75xx.1.0
x7160I
NON-FUSED
2014-06-24 11:15:12
r53
OK

ati10
Modem-Firmware:
AHL75xx.1.0.151600.201508191527.x7160_1
HL7518 //When using an HL7518 module
HL75xx_TEST.A.0.0
x7160
FUSED
2015-08-19 15:27:48
r2046

```

HL7518 and HL7548	
	<p>Primary-Boot: AHL75xx.1.0.0102150819.201508191441.x7160_1 2015-08-19 14:41:29 r2024</p> <p>Secondary-Boot: AHL75xx.1.0.0102150819.201508191441.x7160_1 2015-08-19 14:41:29 r2024</p> <p>Update-Agent: AHL75xx.1.0.0102150819.201508191441.x7160_1 2015-08-19 14:41:46 r2046</p> <p>4G-Firmware: 7160.S3.561.10.3.516.00.0001</p> <p>3G-Firmware: 202.413.386.43-54.35 OK</p>

3.2. Z Command: Reset and Restore User Configuration

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> ATZ<value>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameter</u> <value> 0 Reset and restore user configuration with profile 0 1 Reset and restore user configuration with profile 1</p>

3.3. +CGMI Command: Request Manufacturer Identification

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGMI=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+CGMI	<u>Response</u> (manufacturer identification text) OK
<u>Reference</u> [27.007] § 5.1	<u>Example</u> AT+CGMI Sierra Wireless OK

3.4. +CGMM Command: Request Model Identification

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGMM=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+CGMM	<u>Response</u> <mode> OK <u>Parameter</u> <model> Model identifier
<u>Reference</u> [27.007] § 5.2	<u>Example</u> AT+CGMM HL7518 //When using an HL7518 module OK

3.5. +CGMR Command: Request Revision Identification

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGMR=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+CGMR	<u>Response</u> (model revision identification text) OK
<u>Reference</u> [27.007] § 5.3	<u>Notes</u> The (model revision identification text) could be: AHL75xx_TEST.0.0.142102.201406222214.x7160_1 or AHL75xx.1.0.141506.201406241105.x7160_1

3.6. +CGSN Command: Request Product Serial Number Identification (IMEI)

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGSN=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+CGSN	<u>Response</u> <IMEI> (identification text for determination of the individual ME) OK
<u>Reference</u> V.25ter	<u>Notes</u> <ul style="list-style-type: none"> • This command can work with or without a SIM card. • See also AT+KGSN, AT+GSN.

3.7. +KGSN Command: Request Product Serial Number and Software Version

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KGSN=?	<u>Response</u> +KGSN: (list of supported <number type>s) OK
<i>Execute command</i>	
<u>Syntax</u> AT+KGSN= <number type>	<u>Response</u> If <number type> = 0: +KGSN: <IMEI> OK If <number type> = 1: +KGSN: <IMEISV> OK If <number type> = 2: +KGSN: <IMEISV_STR> OK If <number type> = 3: +KGSN: <FSN> OK If <number type> = 4: +KGSN: <FSN-BB> OK <u>Parameters</u> <IMEI> 15 digits IMEI (8 digits for TAC + 6 digits for SNR + 1 check digit) <IMEISV> 16 digits IMEISV (8 digits for TAC + 6 digits for SNR + 2 SVN digits) <IMEISV_STR> Formatted string: <15 digits>-<Check digit> SV: <Software version> <FSN> 14 digits Serial Number <FSN-BB> 16 digits Serial Number + BB
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> This command has been developed to provide the IMEI SV and Serial Number through an AT Command and it can work with or without SIM card.
<u>Examples</u>	AT+KGSN=0 +KGSN: 351578000023006 OK AT+KGSN=1 +KGSN: 3515780000230001 OK

HL7518 and HL7548	
	<p>AT+KGSN=2 +KGSN: 35157800002300-6 SV:01 OK</p> <p>AT+KGSN=3 +KGSN: 0123456789ABCD OK</p> <p>AT+KGSN=4 +KGSN: 0123456789ABCD01 OK</p>

3.8. +HWREV Command: Request Hardware Revision

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u> AT+HWREV=?</p>	<p><u>Response</u> OK</p>
<i>Execute command</i>	
<p><u>Syntax</u> AT+HWREV?</p>	<p><u>Response</u> Hardware revision: X.Y OK</p> <p><u>Parameter</u> X.Y These are the HH numbers in FSN (returned by TTYWWDNNNNPPHH-BB)</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u> This command works with or without a SIM card.</p>
<u>Example</u>	<p>Assuming FSN=TTYWWDNNNNPP01-BB</p> <p>AT+HWREV? Hardware revision: 0.1 OK</p>

3.9. +CSCS Command: Set TE Character Set

HL7518 and HL7548									
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CSCS=?</p>	<p><u>Response</u> +CSCS: (list of supported <vail>s) OK</p>								
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CSCS?</p>	<p><u>Response</u> +CSCS: <vail> OK</p> <p>or</p> <p>+CME ERROR: <err></p>								
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CSCS= [<vail>]</p>	<p><u>Response</u> OK</p> <p>or</p> <p>+CME ERROR: <err></p> <p><u>Parameter</u> <table border="0"> <tr> <td><vail> "GSM"</td> <td>GSM default alphabet (3GPP TS 23.038)</td> </tr> <tr> <td> "HEX"</td> <td>Character strings only consist of hexadecimal numbers from 00 to FF. For example, "032FE6" equals three 8-bit characters with decimal values 3, 47 and 230. No conversions to the original MT character set shall be done</td> </tr> <tr> <td> "IRA"</td> <td>International reference alphabet (ITU-T T.50)</td> </tr> <tr> <td> "UCS2"</td> <td>16-bit universal multiple-octet coded character set (ISO/IEC 10646)</td> </tr> </table> </p>	<vail> "GSM"	GSM default alphabet (3GPP TS 23.038)	"HEX"	Character strings only consist of hexadecimal numbers from 00 to FF. For example, "032FE6" equals three 8-bit characters with decimal values 3, 47 and 230. No conversions to the original MT character set shall be done	"IRA"	International reference alphabet (ITU-T T.50)	"UCS2"	16-bit universal multiple-octet coded character set (ISO/IEC 10646)
<vail> "GSM"	GSM default alphabet (3GPP TS 23.038)								
"HEX"	Character strings only consist of hexadecimal numbers from 00 to FF. For example, "032FE6" equals three 8-bit characters with decimal values 3, 47 and 230. No conversions to the original MT character set shall be done								
"IRA"	International reference alphabet (ITU-T T.50)								
"UCS2"	16-bit universal multiple-octet coded character set (ISO/IEC 10646)								
<u>Notes</u>	<vail> is saved in non-volatile memory per AT port over module reboot.								

3.10. +CIMI Command: Request International Mobile Subscriber Identity

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CIMI=?</p>	<p><u>Response</u> OK</p>

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> AT+CIMI	<u>Response</u> <IMSI> OK or +CME ERROR: <err> <u>Parameter</u> <IMSI> International Mobile Subscriber Identity

3.11. +GMI Command: Request Manufacturer Identification

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+GMI=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+GMI	<u>Response</u> (manufacturer identification text) OK
<u>Reference</u> [27.007] § 5.1	<u>Example</u> AT+GMI Sierra Wireless OK

3.12. +GMM Command: Request Model Identification

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+GMM=?	<u>Response</u> OK

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> AT+GMM	<u>Response</u> <model> OK <u>Parameter</u> <mode> Model identifier
<u>Reference</u> [27.007] § 5.2	<u>Example</u> AT+GMM HL7518 //When using an HL7518 module OK

3.13. +GMR Command: Request Revision Identification

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+GMR=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+GMR	<u>Response</u> (model revision identification text) OK
<u>Reference</u> [27.007] § 5.3	<u>Notes</u> The (model revision identification text) could be: AHL75xx_TEST.0.0.142102.201406222214.x7160_1 or AHL75xx.1.0.141506.201406241105.x7160_1

3.14. +GSN Command: Request Product Serial Number (IMEI)

Note: This command is identical to +CGSN.

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+GSN=?	<u>Response</u> OK

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> AT+GSN	<u>Response</u> <IMEI> (identification text for determination of the individual ME) OK
<u>Reference</u> V.25ter	<u>Notes</u> <ul style="list-style-type: none"> • This command can work with or without a SIM card. • See also AT+KGSN, AT+CGSN.

3.15. +GCAP Command: Request Complete TA Capability List

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> AT+GCAP	<u>Response</u> +GCAP: list of <name>s OK
<u>Example</u>	+GCAP:+FCLASS,+CGSM OK

3.16. +KODIS Command: Access ODIS Information

Note: For HL7548 only.

HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KODIS=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+KODIS?	<u>Response</u> +KODIS: <index>,"<hostMan>","<hostMod>","<hostSwv>","<hostPlasmaID>" OK

HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KODIS= <index>, <hostMan>, <hostMod>, <hostSwv>, <hostPlasmaID></p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <index> Index number of the following parameters</p> <p><hostMan> Host manufacturer of ODIS node (ATT)</p> <p><hostMod> Host model of ODIS node (ATT)</p> <p><hostSwv> Host software version of ODIS node (ATT)</p> <p><hostPlasmaID> Host plasma ID of ODIS node (ATT)</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • This command is used for modifying host device details required by specific ODIS test cases in AT&T. • The maximum number of characters in the parameters listed above are 31. Characters beyond the maximum limit will be ignored.
<p><u>Examples</u></p>	<p>at+kodis? +KODIS: 1,"HostMan","HostMod","HostSwV","HostPlasmaID" OK</p> <p>at+kodis=1,"HostMan","HostMode","01.00","HostPlasmaID" OK</p> <p>at+kodis? +KODIS: 1,"HostMan","HostMode","01.00","HostPlasmaID" OK</p>

3.17. &R Command: RTS and CTS Option

Note: For HL7548 only.

HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT&R <option></p>	<p><u>Response</u> OK</p> <p><u>Parameter</u> <option> 1 In sync mode, CTS is always ON (RTS transitions are ignored). In async mode, CTS will only drop if required by the flow control</p>
<p><u>Notes</u></p>	<p>This command has no effect and it is not defined in the V.25ter specification; it was only implemented for compatibility reasons. Parameters are ignored and are not saved in non-volatile memory.</p>

3.18. +FMI Command: Request Manufacturer Identification

Note: For HL7548 only.

HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+FMI=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+FMI	<u>Response</u> (manufacturer identification text) OK
<u>Reference</u> [27.007] § 5.1	<u>Example</u> AT+FMI Sierra Wireless OK

3.19. +FMM Command: Request Model Identification

Note: For HL7548 only.

HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+FMM=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+FMM	<u>Response</u> <model> OK
	<u>Parameter</u> <model> Model identifier
<u>Reference</u> [27.007] § 5.2	<u>Example</u> AT+FMM HL7548 // when using an HL7548 module OK

3.20. +FMR Command: Request Revision Identification

Note: For HL7548 only.

HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+FMR=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+FMR	<u>Response</u> (model revision identification text) OK
<u>Reference</u> [27.007] § 5.3	<u>Notes</u> An example of (model revision identification text) is: AHL75xx_TEST.0.0.142102.201406222214.x7160_1 or RHL75xx.V.3.5.151600.201602082318.x7160_1

3.21. \N Command: Data Transmission Mode

Note: For HL7548 only.

HL7548	
<i>Execute command</i>	
<u>Syntax</u> ATN<x>	<u>Response</u> OK
	<u>Parameter</u> <x> 0 Transparent mode 4, 6 RLP mode (non-transparent)
<u>Notes</u>	This command has no effect and it is not defined in the V.25ter specification; it was only implemented for compatibility reasons. Parameters are ignored and are not saved in non-volatile memory.

3.22. N Command: Negotiate Handshake Option

Note: For HL7548 only.

HL7548	
<i>Execute command</i>	
<u>Syntax</u> ATN[<option>]	<u>Response</u> OK
	<u>Parameter</u> <option> 0 – 9
<u>Notes</u>	This command has no effect and it is not defined in the V.25ter specification; it was only implemented for compatibility reasons. Parameters are ignored and are not saved in non-volatile memory.

3.23. S5 Command: Write Command Line Editing Character

Note: For HL7548 only.

HL7548	
<i>Read command</i>	
<u>Syntax</u> ATS5?	<u>Response</u> OK
<i>Write command</i>	
<u>Syntax</u> ATS5=<n>	<u>Response</u> OK
	<u>Parameters</u> <n> 1 – 255 Number of seconds to wait for connection completion
<u>Reference</u> V.25Ter	<u>Notes</u> This command has no effect and was only implemented to comply with V.25ter. Parameters are ignored and are not saved in non-volatile memory.

3.24. S6 Command: Pause before Blind Dialing

Note: For HL7548 only.

HL7548	
<i>Write command</i>	
<u>Syntax</u> ATS6=<time>	<u>Response</u> OK
	<u>Parameters</u> <time> 0 – 999
<u>Reference</u> V.25ter	<u>Notes</u> This command has no effect and was only implemented to comply with V.25ter. Parameters are ignored and are not saved in non-volatile memory.

3.25. S8 Command: Comma Dial Modifier Time

Note: For HL7548 only.

HL7548	
<i>Read command</i>	
<u>Syntax</u> ATS8?	<u>Response</u> <time> OK
<i>Write command</i>	
<u>Syntax</u> ATS8=<time>	<u>Response</u> OK
	<u>Parameters</u> <time> 0 – 255
<u>Reference</u> V.25ter	<u>Notes</u> This command has no effect and was only implemented to comply with V.25ter. Parameters are ignored and are not saved in non-volatile memory.

HL7548	
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none">• This AT command is for modifying host device details required by specific ODIS test cases in AT&T.• The maximum number of characters the parameters above are 31. Characters beyond the maximum number will be ignored.
<u>Examples</u>	at+kodis? +KODIS: 1,"HMAN1","HMOD1","HSW1","HUID1" OK at+kodis=1,"HostMan","HostMode","01.00","HostID" OK at+kodis? +KODIS: 1,"HostMan","HostMode","01.00","HostID" OK

4. Call Control Commands

4.1. A Command: Answer a Call

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> ATA	<u>Response</u> ----- ----- -- ATA OK or +CME ERROR: <err>

4.2. H Command: Hook Control

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> ATH	<u>Response:</u> OK
or ATH0	or ERROR

4.3. D Command: Dial Number

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> ATD=?	<u>Response</u> 1 2 3 4 5 6 7 8 9 0 * # + A B C OK
<i>Read command</i>	
<u>Syntax</u> ATD?	<u>Response</u> 1 2 3 4 5 6 7 8 9 0 * # + A B C OK

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> ATD[<n>]	<u>Response</u> OK If successfully connected CONNECT Connection has been established RING The DCE has detected an incoming call signal from the network NO CARRIER The connection cannot be established BUSY Engaged (busy) signal detected NO ANSWER If no hang up is detected after a fixed network timeout CONNECT <data rate> Same as CONNECT but includes the data rate RING CTM The MS has detected an incoming CTM call signal from the network; this code is proprietary CONNECT FAX Same as CONNECT but includes the indication related to a fax call <u>Parameters</u> <n> String of dialing digits and optionally V.25ter modifiers (dialing digits): 0-9, *, #, +, A, B, C (maximum length: 20 digits)

4.4. D> Command: Direct Dialing from Phonebook

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> ATD><str> ATD>[<mem>] <n>	<u>Response</u> See ATD <u>Parameters</u> <str> Alphanumeric field (if possible all available memories should be searched for correct entry) <mem> Memory storage ("ME", "SM", etc.) <n> Entry location
<u>Notes</u>	For memory storage locations, see AT+CPBS.

4.5. +CHUP Command: Hang up Call

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CHUP=?	<u>Response</u> OK

HL7518 and HL7548	
<i>Execute command</i>	
<u>Syntax</u> AT+CHUP	<u>Response</u> OK or +CME ERROR: <err>
<u>Notes</u>	This command hangs up waiting/active MT calls and MO calls.

4.6. +CR Command: Service Reporting Control

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CR=?	<u>Response</u> +CR: (list of supported <mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CR?	<u>Response</u> +CR: <mode> OK
<i>Write command</i>	
<u>Syntax</u> AT+CR= [<mode>]	<u>Response</u> OK Or +CME ERROR: <err> <u>Parameters</u> <mode> <u>0</u> Disables reporting 1 Enables reporting <serv> ASYNC Asynchronous transparent SYNC Synchronous transparent REL ASYNC Asynchronous non-transparent REL SYNC Synchronous non-transparent GPRS [<L2P>] GPRS
<u>Notes</u>	The optional <L2P> proposes a layer 2 protocol to use between the MT and the TE. It is defined in +CGDATA command.

4.7. +CRC Command: Set Cellular Result Codes for Incoming Call Indication

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CRC=?</p>	<p><u>Response</u> +CRC: (list of supported <mode>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CRC?</p>	<p><u>Response</u> +CRC:<mode> OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CRC= [<mode>]</p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameter</u> <mode> 0 Disable extended format 1 Enable extended format</p>
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +CRING: <type></p> <p><u>Parameter</u> <type> ASYNC [,<priority>[,<subaddr>,<satype>]] Asynchronous transparent SYNC [,<priority>[,<subaddr>,<satype>]] Synchronous transparent REL ASYNC [,<priority>[,<subaddr>,<satype>]] Asynchronous non transparent REL SYNC [,<priority>[,<subaddr>,<satype>]] Synchronous non transparent CTM [,<priority>[,<subaddr>,<satype>]] Incoming CTM call CTM2 [,<priority>[,<subaddr>,<satype>]] Incoming CTM call at line 2 GPRS <PDP_type>, <PDP_addr>[, [<L2P>][,<APN>]] GPRS network request for PDP context activation</p> <p><priority> (Optional) EMLPP priority level of the incoming call by paging, notification or setup message.</p> <p><subaddr> String type subaddress of format specified by <satype></p> <p><satype> Type of subaddress octet in integer format</p> <p><PDP_type>, <PDP_addr>, <APN> As defined in AT+CGDCONT command</p> <p><L2P> (Optional) proposes a layer 2 protocol to use between the MT and the TE</p>

4.8. +CSTA Command: Select Type of Address

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CSTA=?	<u>Response</u> +CSTA: (list of supported <type>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CSTA?	<u>Response</u> +CSTA: <type> OK
<i>Write command</i>	
<u>Syntax</u> AT+CSTA= <type>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameter</u> <type> <u>129</u> Dial string begins with a digit, or is a local number <u>145</u> Dial string includes international access code character "+"
<u>Notes</u>	<type> is saved in non-volatile memory over module reboot.

4.9. +CMOD Command: Call Mode

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CMOD=?	<u>Response</u> +CMOD: (list of supported <mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CMOD?	<u>Response</u> +CMOD: <mode> OK
<i>Write command</i>	
<u>Syntax</u> AT+CMOD= [<mode>]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameter</u> <mode> <u>0</u> Single mode

4.10. +CEER Command: Extended Error Report

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CEER=?	<u>Response</u> OK
<i>Write command</i>	
<u>Syntax</u> AT+CEER	<u>Response</u> +CEER: <category>[,<cause>,<descriptions>] OK
	<u>Parameter</u> <category> "No report available" "CC setup error" "CC modification error" "CC release" "SM attach error" "SM detach" "SM activation error" "SM deactivation" "SS network error cause" "SS network reject cause" "SS network GSM cause" "EMM cause" "ESM attach error" "ESM detach"
	<cause> Digit representing the error cause sent internally or by the network. Refer to 16.2.2 CEER Error Codes for more information.
	<description> Verbose string containing the textual representation of <cause>. Refer to 16.2.2 CEER Error Codes for more information.

4.11. +CSNS Command: Single Numbering Scheme

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CSNS=?	<u>Response</u> +CSNS: (list of supported <mode>) OK
<i>Read command</i>	
<u>Syntax</u> AT+CSNS?	<u>Response</u> +CSNS:<mode> OK

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CSNS= [<mode>]	<u>Response</u> OK
	<u>Parameters</u> <mode> 4 Data

4.12. +CBST Command: Select Bearer Service Type

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CBST=?	<u>Response</u> +CBST: (list of supported <speed>s),(list of supported <name>s),(list of supported <ce>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CBST?	<u>Response</u> +CBST: <speed> , <name> , <ce> OK
<i>Write command</i>	
<u>Syntax</u> AT+CBST= [<speed> [,<name>[,<ce>]]]	<u>Response</u> OK or CME ERROR: <err>
	<u>Parameter</u> <speed> 0 Autobauding (automatic selection of the speed; this setting is possible in case of 3.1 kHz modem and non-transparent service) 4 2400 bps (V.22bis) 5 2400 bps (V.26ter) 6 4800 bps (V.32) 7 9600 bps (V.32) 12 9600 bps (V.34) 14 14400 bps (V.34) 15 19200 bps (V.34) 16 28800 bps (V.34) 17 33600 bps (V.34) 39 9600 bps (V.120) 43 14400 bps (V.120) 47 19200 bps (V.120) 48 28800 bps (V.120) 49 38400 bps (V.120) 50 48000 bps (V.120) 51 56000 bps (V.120) 68 2400 bps (V.110 or X.31 flag stuffing)

HL7518 and HL7548	
	70 4800 bps (V.110 or X.31 flag stuffing)
	71 9600 bps (V.110 or X.31 flag stuffing)
	75 14400 bps (V.110 or X.31 flag stuffing)
	79 19200 bps (V.110 or X.31 flag stuffing)
	80 28800 bps (V.110 or X.31 flag stuffing)
	81 38400 bps (V.110 or X.31 flag stuffing)
	82 48000 bps (V.110 or X.31 flag stuffing)
	83 56000 bps (V.110 or X.31 flag stuffing; this setting can be used in conjunction with asynchronous non-transparent UDI or RDI service in order to get FTM)
	84 64000 bps (X.31 flag stuffing; this setting can be used in conjunction with asynchronous non-transparent UDI service in order to get FTM)
	115 56000 bps (bit transparent)
	116 64000 bps (bit transparent)
	120 32000 bps (PIAFS32k)
	121 64000 bps (PIAFS64k)
	130 28800 bps (multimedia)
	131 32000 bps (multimedia)
	132 33600 bps (multimedia)
	133 56000 bps (multimedia)
	134 64000 bps (multimedia)
<name>	<u>0</u> Data circuit asynchronous (UDI or 3.1 kHz modem)
	1 Data circuit synchronous (UDI or 3.1 kHz modem)
	4 Data circuit asynchronous (RDI)
	5 Data circuit synchronous (RDI)
<ce>	<u>0</u> Transparent
	1 Non-transparent
	2 Both, transparent preferred
	3 Both, non-transparent preferred

5. Mobile Equipment Control and Status Commands

5.1. +CACM Command: Accumulated Call Meter

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CACM=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+CACM?	<u>Response</u> +CACM: <acm> OK
<i>Write command</i>	
<u>Syntax</u> AT+CACM= [<passwd>]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <passwd> SIM PIN2 as a string type <acm> Accumulated call meter value similarly coded as <ccm> in command +CAOC as string type

5.2. +CAMM Command: Accumulated Call Meter (Maximum)

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CAMM=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+CAMM?	<u>Response</u> +CAMM: <acmmax> OK

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CAMM= [<acmmax> [,<passwd>]]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <acmmax> String type containing the accumulated call meter maximum value coded in hexadecimal format. Value 0 disables the ACMmax feature <passwd> SIM PIN2

5.3. +CCWE Command: Call Meter Maximum Event

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CCWE=?	<u>Response</u> +CCWE: (list of supported <mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CCWE?	<u>Response</u> +CCWE: <mode> OK
<i>Write command</i>	
<u>Syntax</u> AT+CCWE= <mode>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameter</u> <mode> <u>0</u> Disable the call meter warning event <u>1</u> Enable the call meter warning event

5.4. +CCLK Command: Real Time Clock

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CCLK=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+CCLK?	<u>Response</u> +CCLK: <time> or +CME ERROR: <err>
<i>Write command</i>	
<u>Syntax</u> AT+CCLK= <time>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameter</u> <time> String type value; format is "yy/MM/dd,hh:mm:ss+/-TZ", where characters indicate year (last two digits), month, day, hour, minutes, seconds and time zone (optional).
<u>Notes</u>	Year must be 2004 or later.

5.5. +CIND Command: Indicator Control

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CIND=?	<u>Response</u> +CIND: ("call",(0,1)), ("roam",(0,1)) OK
<i>Read command</i>	
<u>Syntax</u> AT+CIND?	<u>Response</u> +CIND: [<ind>,<ind>,...]] OK
<i>Execute command</i>	
<u>Syntax</u> AT+CIND= [<ind> ,<ind>,...]]	<u>Response</u> OK or +CME ERROR: <err>

HL7518 and HL7548	
	<p><u>Parameters</u></p> <p><ind> 0 – 1 Integer type depending on the corresponding <descr></p> <p><descr> “call” Call in progress “roam” Roaming indicator</p>
<u>Notes</u>	<ind> is saved in non-volatile memory per AT port over module reboot.

5.6. +CLAC Command: List Available AT Commands

HL7518 and HL7548	
<i>Execute command</i>	
<p><u>Syntax</u></p> <p>AT+CLAC</p>	<p><u>Response</u></p> <p>+CLAC: <AT command 1> [<CR><LF><AT command 2>[.]] OK</p> <p>or</p> <p>+CME ERROR: <err></p> <p><u>Parameter</u></p> <p><AT command> AT command (including the prefix “AT”)</p>
<u>Notes</u>	This command provides the AT Command list available for the user.

5.7. +CFUN Command: Set Phone Functionality

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u></p> <p>AT+CFUN=?</p>	<p><u>Response</u></p> <p>+CFUN: (list of supported <fun>s), (list of supported <rst>s) OK</p> <p>or</p> <p>+CME ERROR: <err></p>
<i>Read command</i>	
<p><u>Syntax</u></p> <p>AT+CFUN?</p>	<p><u>Response</u></p> <p>+CFUN: <power_mode>,<STK_mode></p> <p>or</p> <p>+CME ERROR: <err></p>

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CFUN=<fun> [,<rst>]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <fun> 0 Switch off MS 1 Full functionality 4 Disable both phone's transmit and receive RF circuits; airplane mode 6 Enable SIMTK and fetching of proactive commands Note that when <fun> = 0, the OK response may be missed as MT may already be switched off by the time the OK response is triggered. <rst> Reset value 0 Do not reset MT before resetting it to <fun> power level 1 Reset MT before setting it to <fun> power level <power_mode> 1 MS is switched ON 2 Invalid mode 4 Airplane mode <STK_mode> 0 Inactive state 6 Enable the SIM-toolkit interface and fetching of proactive commands by SIM-APPL from the SIM card

5.8. +CMER Command: Mobile Equipment Event Reporting

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CMER=?	<u>Response</u> +CMER: (1,0,0,(0-1),0) OK
<i>Read command</i>	
<u>Syntax</u> AT+CMER?	<u>Response</u> +CMER: <mode>,<keyp>,<disp>,<ind>,<bfr> OK
<i>Write command</i>	
<u>Syntax</u> AT+CMER= [<mode>,<keyp> [,<disp>,<ind> [,<bfr>]]]]]	<u>Response</u> OK or +CME ERROR: <err>

HL7518 and HL7548	
	<p><u>Parameters</u></p> <p><mode> 1 Discard unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE</p> <p><keyp> 0 No keypad event reporting</p> <p><disp> 0 No display event reporting</p> <p><ind> <u>0</u> 1 No indicator event reporting Indicator event reporting using result code +CIEV: <ind>,<value>. <ind> indicates the indicator order number (as specified for +CIND) and <value> is the new value of indicator. Only those indicator events, which are not caused by +CIND shall be indicated by the TA to the TE</p> <p><bfr> 0 TA buffer of unsolicited result codes defined within this command is cleared when <mode> = 1 is entered</p>
<u>Notes</u>	<mode> is saved in non-volatile memory per AT port over module reboot.

5.9. +CMEE Command: Report Mobile Termination Error

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CMEE=?	<u>Response</u> +CMEE: (list of supported <n>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CMEE?	<u>Response</u> +CMEE: <n> OK
<i>Write command</i>	
<u>Syntax</u> AT+CMEE=[<n>]	<u>Response</u> OK
	<u>Parameter</u> <n> <u>0</u> Disable +CME ERROR: <err> result code and use ERROR instead 1 +CME ERROR: <err> result code and use numeric <err> values 2 +CME ERROR: <err> result code and use verbose <err> values
<u>Notes</u>	<n> is saved in non-volatile memory per AT port over module reboot.

5.10. +CCID Command: Request SIM Card Identification

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CCID=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+CCID?	<u>Response</u> +CCID: <ICCID> OK or +CME ERROR: <err>
<i>Execute command</i>	
<u>Syntax</u> AT+CCID	<u>Response</u> +CCID: <ICCID> OK or +CME ERROR: <err> <u>Parameter</u> <ICCID> Integrated Circuit Card ID of the SIM card

5.11. +FMR Command: Request Revision Identification

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+FMR=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+FMR	<u>Response</u> <revision>,<sv> OK or +CME ERROR: <err> <u>Parameters</u> <revision> Revised version from IMEISV of the mobile station <sv> Software version from IMEISV of the mobile station

5.12. +CPIN Command: Enter Pin

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CPIN=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+CPIN?	<u>Response</u> +CPIN: <code> OK or +CME ERROR: <err>
<i>Write command</i>	
<u>Syntax</u> AT+CPIN=<pin> [,<newpin>]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <code> Values when queried using the read command READY MT is not pending for any password SIM PIN MT is waiting for SIM PIN to be given SIM PUK MT is waiting for SIM PUK to be given SIM PIN2 MT is waiting SIM PIN2 to be given (this <code> is recommended to be returned only when the last executed command resulted in PIN2 authentication failure (i.e. +CME ERROR: 17); if PIN2 is not entered right after the failure, it is recommended that MT does not block its operation) SIM PUK2 MT is waiting SIM PUK2 to be given (this <code> is recommended to be returned only when the last executed command resulted in PUK2 authentication failure (i.e. +CME ERROR: 18); if PUK2 and new PIN2 are not entered right after the failure, it is recommended that ME does not block its operation). PH-NET PIN MT is waiting for the network personalization password to be given PH-NET PUK MT is waiting network personalization unblocking password to be given PH-NETSUB PIN MT is waiting network subset personalization password to be given PH-NETSUB PUK MT is waiting network subset personalization unblocking password to be given PH-SP PIN MT is waiting service provider personalization password to be given PH-SP PUK MT is waiting service provider personalization unblocking password to be given PH-CORP PIN MT is waiting corporate personalization password to be given PH-CORP PUK MT is waiting corporate personalization unblocking password to be given <pin>, <newpin> String type values

5.13. +CPIN2 Command: Enter Pin2

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CPIN2=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+CPIN2?	<u>Response</u> +CPIN:code OK or +CME ERROR: <err>
<i>Write command</i>	
<u>Syntax</u> AT+CPIN2= <puk2/oldpin2> [,<newpin2>] or AT+CPIN2= <oldpin2>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <puk2/oldpin2> , <newpin2> String type values <code> READY MT is not pending for any password SIM PIN2 MT is waiting for SIM PIN2 to be given (this "code" is recommended to be returned only when the last executed command resulted in PIN2 authentication failure (i.e. +CME ERROR: 17); if PIN2 is not entered right after the failure, it is recommended that MT does not block its operation) SIM PUK2 MT is waiting for SIM PUK2 to be given (this "code" is recommended to be returned only when the last executed command resulted in PUK2 authentication failure (i.e. +CME ERROR: 18); if PUK2 and new PIN2 are not entered right after the failure, it is recommended that MT does not block its operation)

5.14. +CPUC Command: Price per Unit and Currency

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CPUC=?	<u>Response</u> OK

HL7518 and HL7548	
<i>Read command</i>	
<u>Syntax</u> AT+CPUC?	<u>Response</u> +CPUC: <currency>,<ppu> OK
<i>Write command</i>	
<u>Syntax</u> AT+CPUC= <currency> , <ppu> [,<passwd>]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <currency> String type containing the three-character currency code (e.g. GBP, EUR) <ppu> String type containing the price per unit; dot is used as a decimal separator <passwd> String type containing SIM PIN2

5.15. *PSRDBS Command: Change Frequency Band

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT*PSRDBS=?	<u>Response</u> *PSRDBS: (list of supported<mode>s), (list of supported <band>s) OK
<i>Read command</i>	
<u>Syntax</u> AT*PSRDBS?	<u>Response</u> *PSRDBS: < band> OK
<i>Write command</i>	
<u>Syntax</u> AT*PSRDBS= <mode>,<band>	<u>Response</u> OK <u>Parameter</u> <Mode> 0 Set <band> at next switch on 1 Set <band> immediately <band> Bit field type parameter; to set several bands, sum up the values 4096 BAND_LTE_2; for HL7548 only 16384 BAND_LTE_4 32768 BAND_LTE_5; for HL7548 only 131072 BAND_LTE_13; for HL7518 only 262144 BAND_LTE_17; for HL7548 only

HL7518 and HL7548Notes

Selection can be one or more (up to two for the HL7518, up to four for the HL7548) LTE bands.

5.16. +CPAS Command: Phone Activity Status

HL7518 and HL7548*Test command*Syntax**AT+CPAS=?**Response**+CPAS:** (list of supported **<pas>**es)**OK**

or

+CME ERROR: **<err>***Execute command*Syntax**AT+CPAS**Response**+CPAS:** **<pas>****OK**

or

+CME ERROR: **<err>**Parameter

<pas>	0	Ready (ME allows commands from TA/TE)
	1	Unavailable (ME does not allow commands from TA/TE)
	2	Unknown (ME is not guaranteed to respond to instructions)
	3	Ringing (ME is ready for commands from TA/TE, but the ringer is active)
	4	Call in progress (ME is ready for commands from TA/TE, but a call is in progress)
	5	Asleep (ME is unable to process commands from TA/TE because it is in a low functionality state)

5.17. +CSQ Command: Signal Quality

HL7518 and HL7548*Test command*Syntax**AT+CSQ=?**Response**+CSQ:** (list of supported **<rsqi>**s),(list of supported **<ber>**s)**OK***Execute command*Syntax**AT+CSQ**Response**+CSQ:** **<rsqi>**,**<ber>**

HL7518 and HL7548	
	or +CME ERROR: <err> <u>Parameters</u> <rssi> Received signal strength indication 0 -113 dBm or less 1 – 30 -111 to -53 dBm 31 -51 dBm or greater 99 Not known or not detectable <ber> Integer type; channel bit error rate (in percent) 0 – 7 As RXQUAL values in the table in 3GPP TS 45.008 [20] subclause 8.2.4 99 Not known or not detectable
<u>Notes</u>	<ul style="list-style-type: none"> For LTE, <rssi> is scaled from the current radio signal strength (RSRP) value of the serving cell. RSRP is defined according to 3GPP TS 36.133 section 9.1.4, from -140 dBm to -44 dBm with 1 dB resolution. For LTE, <ber> is scaled to 0 – 7 from RSRQ signal quality 34 – 0. RSRQ is defined according to specification 3GPP 36.133 section 9.1.7, from -19.5 dBm to -3 dBm with 0.5 dB resolution.

5.18. +KCELL Command: Cell Environment Information

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KCELL=?	<u>Response</u> +KCELL: (list of supported <revision>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+KCELL?	<u>Response</u> OK
<i>Write command</i>	
<u>Syntax</u> AT+KCELL= <revision>	<u>Response</u> +KCELL: <nbLTEcells>[,<cell_type>,<PLMN>,<LTE_CI>,<PhyCellInd>,<trackingAreaCode>,<RSRPResult>,<RSRQResult>,<TA>][<cell_type>,[[Earfcn],[<PhyCellID>],[<RSRPResult>],[<RSRQResult>]]]]][...] OK <u>Parameters</u> <revision> reserved for future development (only 0 for the moment) <nbLTEcells> Number of LTE base stations available ($0 \leq k \leq 33$) <cell_type> 5 LTE serving cell 6 LTE neighbor cell

HL7518 and HL7548	
	<p><PLMN> PLMN identifiers (3 bytes) in hexadecimal format, made of MCC (Mobile Country Code), and MNC (Mobile Network Code)</p> <p><LTE_CI> Cell Identity in 8 hexadecimal digits with length = 28 bits. (Ref: 3GPP TS 36.331, 6.3.4, CellIdentity IE)</p> <p><PhyCellInd> Physical Cell ID (Ref: 3GPP TS 36.331, 6.3.4, PhysCellId IE) Integer type with range = 0 – 503</p> <p><TrackingAreacode> Tracking Area Code (Ref: 3GPP TS 36.331, 6.3.4, Tracking AreaCode IE) Integer type with length = 16 bits</p> <p><RSRPResult> Reference Signal Received Power (Ref: 3GPP TS 36.331, 6.3.5, RSRP-Range IE) Integer type with range = 0 – 97</p> <p><RSRQResult> Reference Signal Received Quality (Ref: 3GPP TS 36.331, 6.3.5, RSRQ-Range IE) Integer type with range = 0 – 34</p> <p><TA> Timing Advance (as per [3GPP 36.321]). Integer type. In RRC_IDLE state, range is 0 – 1282, but in RRC_Connected state, range is 0 – 63.</p> <p><Earfcn> The carrier frequency of the neighbor cell designated by the EUTRA Absolute Radio Frequency Channel Number (EARFCN), valid range: 0 – 0xFFFF. (Ref: 3GPP TS 36.101, 5.7.3)</p> <p><PhyCellInd> Physical Cell ID (Ref: 3GPP TS 36.331, 6.3.4, PhysCellId IE) Integer type with range = 0 – 503</p> <p><RSRQResult> Reference Signal Received Quality (Ref: 3GPP TS 36.331, 6.3.5, RSRQ-Range IE) Integer type with range = 0 – 34</p>
Reference Sierra Wireless Proprietary	<p><u>Notes</u></p> <ul style="list-style-type: none"> This command provides information related to the network environment and can be used, for example, for localization calculation. SIM card must be inserted to support this command. The cell information can only be retrieved when the UE stays in an attached mode.

5.19. +KGPIO Command: Hardware IO Control

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KGPIO=?	<u>Response</u> +KGPIO: (list of supported <IO>s),(list of supported <cde>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+KGPIO?	<u>Response</u> OK

HL7518 and HL7548											
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KGPIO=<IO>,<cde></p>	<p><u>Response</u> If <cde> = 2: +KGPIO: <IO>, <current_value> OK</p> <p>Else OK</p> <p><u>Parameters</u> <IO> 1 – 8, 10, 11, 13 – 15, 21 Selected IO. Note that <IO>=21 is only available on the HL7518</p> <p><cde></p> <table style="margin-left: 20px;"> <tr> <td style="padding-right: 20px;">0</td> <td>Reset the selected IO</td> </tr> <tr> <td>1</td> <td>Set the selected IO</td> </tr> <tr> <td>2</td> <td>Request the current value of the IO</td> </tr> </table> <p><current_value></p> <table style="margin-left: 20px;"> <tr> <td style="padding-right: 20px;">0</td> <td>GPIO is Low</td> </tr> <tr> <td>1</td> <td>GPIO is High</td> </tr> </table>	0	Reset the selected IO	1	Set the selected IO	2	Request the current value of the IO	0	GPIO is Low	1	GPIO is High
0	Reset the selected IO										
1	Set the selected IO										
2	Request the current value of the IO										
0	GPIO is Low										
1	GPIO is High										
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • The current configuration is saved in non-volatile memory over module reboot. • Check the configuration of +KGPIOCFG when +CME ERROR: 3 is issued. • By default, GPIO 3 and 4 are used by SIM detection in the HL7518, while only GPIO 3 is used by SIM detection in the HL7548. These GPIOs cannot be reconfigured. • The test command AT+KGPIO=? returns a dynamic list of supported GPIOs. GPIOs assigned to a specific purpose are not listed. • GPIO21 is reserved for internal Sierra Wireless use only. • This command can be used without SIM. 										
<p><u>Examples</u></p>	<p>Make GPIO1 output high/low level</p> <pre>AT+KGPIOCFG=1,0,2 // Configure GPIO1 as output mode; <pull mode> must // be "no pull" OK AT+KGPIO=1,1 // Set GPIO1 OK AT+KGPIO=1,0 // Reset GPIO1 OK Define input/output mode for GPIO1 AT+KGPIOCFG=1,1,0 // Configure GPIO1 as input mode;<pull mode> is "pull // down" OK AT+KGPIO=1,2 // Request the current value of GPIO1 +KGPIO: 1,1 // Value is HIGH for GPIO1 OK at+kgpio=? +KGPIO: (1,2,5,6,7,8,10,11,13,14,15,21),(0-2) // for HL7518 +KGPIO: (1,2,4,5,6,7,8,10,11,13,14,15),(0-2) // for HL7548 OK</pre>										

HL7518 and HL7548

```
at+kgpio=9,1           // Set GPIO9, and it should return ERROR
+CME ERROR: 3
```

5.20. +KGPIOCFG Command: GPIO Configuration**HL7518 and HL7548**

<i>Test command</i>	
<u>Syntax</u> AT+KGPIOCFG=?	<u>Response</u> +KGPIOCFG: (list of supported <n>s),(list of supported <dir>s), (list of supported <pull mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+KGPIOCFG?	<u>Response</u> +KGPIOCFG: <n>,<dir>,<pull mode>[<CR><LF> +KGPIOCFG: <n>,<dir>,<pull mode> [...]] OK
<i>Write command</i>	
<u>Syntax</u> AT+KGPIOCFG=<n>,<dir>,<pull mode>	<u>Response</u> OK <u>Parameters</u> <n> 1 – 8, 10, 11, 13 – 15, 21 GPIO number. Note that <n>=21 is only available on the HL7518 <dir> Direction 0 Output 1 Input <pull mode> 0 Pull down. Internal pull-down resistor available. Only used in input mode 1 Pull up. Internal pull up resistor available. Only used in input mode 2 No pull. Internal pull up/down resistor NOT available. Only used in output mode
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> • This command provides configuration for +KGPIO command. • The current configuration is saved in non-volatile memory before a reset. • By default, GPIO 3 and 4 are used by SIM detection in the HL7518, while only GPIO 3 is used by SIM detection in the HL7548. These GPIOs cannot be reconfigured. • Pull down/up mode provides a stable input level. • Commands AT+KGPIOCFG=? and AT+KGPIOCFG? return a dynamic list of supported GPIOs. GPIOs assigned to a specific purpose are not listed. • GPIO 21 on the HL7518 is reserved for internal Sierra Wireless use only. • This command can be used without SIM.

HL7518 and HL7548		
<u>Examples</u>	<pre> at+kgpiocfg=1,0,0 // When setting GPIO1 as Output, with incorrect <pull mode> ERROR at+kgpiocfg=1,0,1 // When setting GPIO1 as Output, with incorrect <pull mode> ERROR at+kgpiocfg=1,0,2 // When setting GPIO1 as Output, with correct <pull mode> OK at+kgpiocfg=1,1,0 // When setting GPIO1 as Input, with pull down OK at+kgpiocfg=1,1,1 // When setting GPIO1 as Input, with pull up OK at+kgpiocfg=1,1,2 // When setting GPIO1 as Input, with incorrect <pull mode> ERROR at+kgpiocfg=? +KGPIOCFG: (1,2,5,6,7,8,10,11,13,14,15,21),(0-1),(0-2) // for HL7518 +KGPIOCFG: (1,2,4,5,6,7,8,10,11,13,14,15),(0-1),(0-2) // for HL7548 OK at+kgpiocfg? // for the HL7518 +KGPIOCFG: 1,0,2 +KGPIOCFG: 2,0,2 +KGPIOCFG: 5,0,2 +KGPIOCFG: 6,0,2 +KGPIOCFG: 7,0,2 +KGPIOCFG: 8,0,2 +KGPIOCFG: 10,0,2 +KGPIOCFG: 11,0,2 +KGPIOCFG: 13,0,2 +KGPIOCFG: 14,0,2 +KGPIOCFG: 15,0,2 +KGPIOCFG: 21,0,2 OK // for the HL7548 +KGPIOCFG: 1,0,2 +KGPIOCFG: 2,0,2 +KGPIOCFG: 4,0,2 +KGPIOCFG: 5,0,2 +KGPIOCFG: 6,0,2 +KGPIOCFG: 7,0,2 +KGPIOCFG: 8,0,2 +KGPIOCFG: 10,0,2 +KGPIOCFG: 11,0,2 +KGPIOCFG: 13,0,2 +KGPIOCFG: 14,0,2 +KGPIOCFG: 15,0,2 OK </pre>	

HL7518 and HL7548	
	<pre>at+kgpiocfg=9,1,0 +CME ERROR: 3</pre>

5.21. +KADC Command: Analog Digital Converter

HL7518 and HL7548											
<i>Test command</i>											
<u>Syntax</u> AT+KADC=?	<u>Response</u> +KADC: (list of supported <Meas id> s),(list of supported <Meas time> s) OK										
<i>Read command</i>											
<u>Syntax</u> AT+KADC= <Meas id> , <Meas time>	<u>Response</u> +KADC: <Meas result> , <Meas id> , <Meas time> [, <Temperature>] <u>Parameters</u> <Meas id> Measurement ID 0 VBATT – “VBATT” voltage 1 VCOIN – “BAT_RTC” backup battery voltage 2 THERM – Connected to RT400 (the thermistor on board which is located close to the 26MHz VCTCXO) 3 Reserved 4 Reserved 5 Reserved 6 Reserved 7 ADC1 <Meas time> Measurement time 1 During TX 2 Far from TX 3 No constraint <Meas result> Measurement result is in μ V <Temperature> Temperature in degrees Celsius										
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> • 10 bits converter • VBATT does not support no constraint measurement time • This AT command does not require a SIM card • Available range for voltage input are as follows: <table border="1" style="margin-left: 20px;"> <thead> <tr> <th><Meas id></th> <th>Range (V)</th> </tr> </thead> <tbody> <tr> <td>VBATT</td> <td>3.2 - 4.5</td> </tr> <tr> <td>VCOIN</td> <td>0 - 1.8</td> </tr> <tr> <td>THERM</td> <td>0 - 1.2</td> </tr> <tr> <td>ADC1</td> <td>0 - 1.2</td> </tr> </tbody> </table> 	<Meas id>	Range (V)	VBATT	3.2 - 4.5	VCOIN	0 - 1.8	THERM	0 - 1.2	ADC1	0 - 1.2
<Meas id>	Range (V)										
VBATT	3.2 - 4.5										
VCOIN	0 - 1.8										
THERM	0 - 1.2										
ADC1	0 - 1.2										

HL7518 and HL7548	
<u>Examples</u>	<p>Apply ~0.6V to ADC1</p> <pre>AT+KADC=7,1 +KADC: 569531, 7, 1 OK</pre> <p>AT+KADC=7,2</p> <pre>+KADC: 567188, 7, 2 OK</pre> <p>AT+KADC=7,3</p> <pre>+KADC: 567188, 7, 3 OK</pre> <p>AT+KADC=2,2</p> <pre>+KADC: 343359, 2, 2, 26 OK</pre>

5.22. +CSIM Command: Generic SIM Access

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CSIM =?	<u>Response</u> OK
<i>Write command</i>	
<u>Syntax</u> AT+CSIM= <length> , <command>	<p><u>Response</u></p> <pre>+CSIM: <length>,<response> OK</pre> <p>or</p> <pre>+CME ERROR: <err></pre> <p><u>Parameters</u></p> <p><length> Integer type; length of the characters that are sent to TE in <command> or <response></p> <p><command> Command passed on by MT to the SIM in hexadecimal format</p> <p><response> Response to the command passed on by the SIM to the MT in hexadecimal format</p>

5.23. +CLAN Command: Read Language

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CLAN=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+CLAN?	<u>Response</u> +CLAN: <In>
	<u>Parameter</u> <In> Two letter abbreviation of the language. The language codes, as defined in ISO 639, consists of two characters, e.g. "sv", "en" etc.

5.24. +CCHO Command: Open Logical Channel

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CCHO=?	<u>Response</u> OK
<i>Write command</i>	
<u>Syntax</u> AT+CCHO= <dfname>	<u>Response</u> <session_id> OK
	or +CME ERROR: <err>
	<u>Parameters</u> <dfname> DF name coded on 1 to 16 bytes that references to all selectable application in the UICC <session_id> Session ID to be used to target a specific application on the smart card using logical channels mechanism (string without double quotes that represents a decimal value).
<u>Notes</u>	The +CCHO execute command gives the <session_id> when it receives SIM application response status words as shown below: <ul style="list-style-type: none"> • '90' '00' – normal ending of the command • '91' 'XX' – normal ending of the command with extra information from the proactive UICC containing a command for the terminal.length 'XX' of the response data • '92' 'XX' – normal ending of the command with extra information concerning an ongoing data transfer session

5.25. +CCHC Command: Close Logical Channel

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CCHC=?	<u>Response</u> OK
<i>Write command</i>	
<u>Syntax</u> AT+CCHC= <session_id>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <session_id> Session ID to be used to target a specific application on the smart card using logical channels mechanism (string without double quotes that represents a decimal value).

5.26. +CGLA Command: Generic UICC Logical Channel Access

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CGLA= <sessionid>, <length>, <command>	<u>Response</u> +CGLA: <length>,<response> OK or +CME ERROR: <err> <u>Parameters</u> <sessionid> Integer type; used as the identifier of the session to be used in order to send the APDU commands to the UICC. It is mandatory to send commands to the UICC when targeting applications on the smart card using a logical channel other than the default channel (channel "0"). <length> Integer type; length of the characters that are sent to TE in <command> or <response> (two times the actual length of the command or response). <command> Command passed on by the MT to the UICC in the format as described in 3GPP TS 31.101 in hexadecimal format (refer to +CSCS). <response> Response to the command passed on by the UICC to the MT in the format as described in 3GPP TS 31.101 in hexadecimal format (refer to +CSCS).

5.27. +CRLA Command: Restricted UICC Logical Channel Access

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CRLA= <sessionid>, <command> [,<file id>[,<P1>, <P2>,<P3> [,<data> [,<pathid>]]]]></p>	<p><u>Response</u> +CRLA: <sw1>,<sw2>[,<response>] OK</p> <p>or</p> <p>+CME ERROR: <err></p> <p><u>Parameters</u> <sessionid> Integer type which identifies the session to be used in order to send the APDU commands to the UICC. It is mandatory to send commands to the UICC when targeting applications on the smart card using a logical channel other than the default channel (channel "0").</p> <p><command> 176 READ BINARY 178 READ RECORD 192 GET RESPONSE 214 UPDATE BINARY 220 UPDATE RECORD 242 STATUS 219 SET DATA All other values are reserved</p> <p><fileid> Integer type that identifies the elementary datafile on SIM. Mandatory for every <command> except STATUS.</p> <p><P1>, <P2>, <P3> Integer type; parameters passed on by the MT to the UICC. These parameters are mandatory for every command, except GET RESPONSE and STATUS.</p> <p><data> Information which shall be written to the SIM in hexadecimal format</p> <p><pathid> String type containing the path of an elementary file on the UICC in hexadecimal format.</p> <p><sw1>, <sw2> Integer type; information from the UICC about the execution of the actual command. These parameters are delivered to the TE in both cases, on successful or failed execution of the command</p> <p><response> Response of a successful completion of the command previously issued in hexadecimal format. STATUS and GET RESPONSE returns data, which gives information about the current elementary datafield. This information includes the type of file and its size (refer to 3GPP TS 31.101). After READ BINARY, READ RECORD or RETRIEVE DATA command the requested data will be returned.</p>
<p><u>Notes</u></p>	<p>By using this command instead of generic UICC access command, +CGLA, the TE application has an easier but more limited access to the UICC database.</p>

5.28. +CUAD Command: UICC Application Discovery

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CUAD=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+CUAD	<u>Response</u> <response> OK
	or +CME ERROR: <err>
	<u>Parameters</u> <response> Content of the EFDIR. String type in hexadecimal format

5.29. +CRSM Command: Restricted SIM Access

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CRSM=?	<u>Response</u> OK
<i>Write command</i>	
<u>Syntax</u> AT+CRSM= <command> [,<fileid>[,<P1>, <P2>,<P3> [,<data> [,<pathid>]]]]	<u>Response</u> +CRSM: <sw1>,<sw2>[,<response>] OK
	or +CME ERROR: <err>
	<u>Parameters</u> <command> 176 READ BINARY 178 READ RECORD 192 GET RESPONSE 214 UPDATE BINARY 220 UPDATE RECORD 242 STATUS
	<fileid> Integer type; this is the identifier of an elementary data file on the SIM. Mandatory for every command except STATUS 28423 IMSI file (6F07) 28473 ACM file (6F39) 28481 PUKT file (6F41) 28482 SMS file (6F42)

HL7518 and HL7548

<P1>, <P2>, <P3> Integer type defining the request. These parameters are mandatory for every command, except GET RESPONSE and STATUS. The values are described in GSM 51.011

<data> Information which shall be written to the SIM (hexadecimal character format; refer +CSCS)

<sw1>, <sw2> Integer type containing SIM information

0x90 0x00	Normal entry of the command
0x9F 0xXX	Length XX of the response data
0x92 0x0X	Update successful but after using an internal retry routine X times
0x92 0x40	Memory problem
0x94 0x00	No EF selected
0x94 0x02	Out of range (invalid address)
0x94 0x04	File ID not found; pattern not found
0x94 0x08	File is inconsistent with the command
0x98 0x02	No CHV initialized
0x98 0x04	Access cond. Not fulfilled / unsuccessful CHV verify / authentication failed
0x98 0x08	In contradiction with CHV status
0x98 0x10	In contradiction with invalidation status
0x98 0x40	Unsucc. CHV-verif. Or UNBLOCK CHF / CHV blocked /UNBL.blocked
0x98 0x50	Increase can not be performed. Maximum value reached
0x61 0xXX	SW2 indicates the number of response bytes still available. Use Get Response to access this data.
0x62 0xXX	Warning - state unchanged
0x62 0x00	Warning - no information provided
0x62 0x81	Warning - part of returned data may be corrupt
0x62 0x82	Warning - end of file/record reached (bad cmd)
0x62 0x83	Warning - selected file invalidated
0x62 0x84	Warning - bad file control information format
0x63 0xXX	Warning - state unchanged
0x63 0x00	Warning - no information provided
0x63 0x81	Warning - file filled up with last write
0x63 0xCx	Warning - counter value is x
0x64 0xXX	Error - state unchanged
0x65 0xXX	Error - state changed
0x65 0x00	Error - no information provided
0x65 0x81	Error - memory failure 66 xx Security Error
0x66 0xXX	Security Error
0x67 0xXX	Incorrect parameter P3
0x68 0xXX	Check Error - CLA function not supported
0x68 0x00	Check Error - no information provided
0x68 0x81	Check Error - logical channel not supported
0x68 0x82	Check Error - secure messaging not supported
0x69 0xXX	Check Error - command not allowed
0x69 0x00	Check Error - no information provided
0x69 0x81	Check Error - command incompatible with file structure
0x69 0x82	Check Error - security status not satisfied
0x69 0x83	Check Error - authentication method blocked
0x69 0x84	Check Error - referenced data invalidated
0x69 0x85	Check Error - conditions of use not satisfied
0x69 0x86	Check Error - command not allowed (no current EF)
0x69 0x87	Check Error - expected SM data objects missing

HL7518 and HL7548	
	<p>0x69 0x88 Check Error - SM data objects incorrect 0x6A 0xXX Check Error - wrong parameters 0x6A 0x00 Check Error - no information provided 0x6A 0x80 Check Error - incorrect parameters in data field 0x6A 0x81 Check Error - function not supported 0x6A 0x82 Check Error - file not found 0x6A 0x83 Check Error - record not found 0x6A 0x84 Check Error - not enough memory space in the file 0x6A 0x85 Check Error - Lc available on with TLV structure 0x6A 0x86 Check Error - available on parameters P1-P2 0x6A 0x87 Check Error - Lc available on with P1-P2 0x6A 0x88 Check Error - referenced data not found 0x6B 0xXX Incorrect parameter P1 or P2 0x6C 0xXX Check Error - wrong length - xx is the correct length 0x6D 0xXX Unknown instruction code given in the command 0x6E 0xXX Wrong instruction class given in the command 0x6F 0xXX Technical problem with no diagnostic given</p> <p><response> Response of successful completion of the command previously issued in hexadecimal character format; refer to +CSCS. STATUS and GET RESPONSE returns data, which gives information about the current elementary datafield. This information includes the type of file and its size (refer to GSM 51.011 [28]). After READ BINARY or READ RECORD commands, the requested data will be returned. <response> is not returned after a successful UPDATE BINARY or UPDATE RECORD command.</p> <p><pathid> String type that contains the path of an elementary file on the SIM/USIM in hexadecimal format as defined in ETSI TS 102 221 (e.g. "7F205F70" in SIM and USIM case).</p>
<u>Notes</u>	By using this command instead of generic SIM access command, +CSIM, the DTE application has an easier but more limited access to the SIM database.

5.30. +CEAP Command: EAP Authentication

HL7518 and HL7548	
<i>Write command</i>	
<p><u>Syntax</u> AT+CEAP= <dfname>, <EAPMethod>, <EAP packet data>[,<DFeap>]</p>	<p><u>Response</u> +CEAP: <EAPsessionid>,<EAP packet response> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <dfname> String type in hexadecimal format. All selectable applications are represented in the UICC by an AID coded on 1 to 16 bytes.</p> <p><EAPMethod> String type in hexadecimal format. The value range for 1-byte format and for 8 bytes expanded format is defined in RFC 3748.</p> <p><EAP packet data> String type in hexadecimal format</p>

HL7518 and HL7548	
	<p><DFeap> String type in hexadecimal format</p> <p><EAPsessionid> 1 – 4294967295 Identifier of the EAP session to be used in order to retrieve the EAP parameters with +CERP command.</p> <p><EAP packet response> String type in hexadecimal format</p>

5.31. +CERP Command: EAP Retrieve Parameters

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CERP= <EAPsessionid>, <EAPparameter></p>	<p><u>Response</u> +CERP: <EAP parameter response> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <EAPparameter> 1 Keys 2 Status 3 Identity 4 Pseudonym</p> <p><EAPsessionid> 1 – 4294967295 Identifier of the EAP session to be used in order to retrieve the EAP parameters corresponding to an active EAP session.</p> <p><EAP parameter response> String type in hexadecimal format</p>

5.32. +KTEMPMON Command: Temperature Monitor

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KTEMPMON= ?</p>	<p><u>Response</u> +KTEMPMON: (list of supported <mod>s),(list of supported <temperature>s),(list of supported <urcMode>s),(list of supported <action>s),(list of supported <hystTime>s),(list of supported <repGPIO>s) OK</p>

HL7518 and HL7548	
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KTEMPMON?</p>	<p><u>Response</u> +KTEMPMON: <mod>,<temperature>,<urcMode>,<action>,<hystTime>,<repGPIO> OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KTEMPMON= <mod>,<temperature> [,<urcMode> [,<action> [,<hystTime> [,<repGPIO>]]]]]</p>	<p><u>Response</u> +KTEMPMON: <level>,<value> OK</p> <p><u>Parameters</u></p> <p><mod> <u>0</u> Disable the module's internal temperature monitor <u>1</u> Enable the module's internal temperature monitor</p> <p><temperature> Temperature limit before the module acts as defined by <action>. Default value: <u>0</u></p> <p><urcMode> <u>0</u> Disables the presentation of the temperature monitor URC <u>1</u> Enables the presentation of the temperature monitor URC</p> <p><action> <u>0</u> No action <u>1</u> Automatic shut-down when the temperature is beyond <temperature> <u>2</u> The output pin <repGPIO> is tied HIGH when <temperature> is reached; when the temperature is normal the output pin <repGPIO> is tied LOW. Note that if this parameter is required, it is mandatory to set the <repGPIO> parameter.</p> <p><hyst_time> <u>0 – 255</u> Hysteresis time in seconds. Action will only happen if <temperature> is maintained for at least as long as this period. This parameter is mandatory if <action> is not zero. Default value: <u>30</u></p> <p><repGPIO> <u>1 – 8, 10, 11, 13 – 15, 21</u> Defines which GPIO is used as output pin. This parameter is mandatory only if <action>=2 is required. Note that <repGPIO>=21 is only available on the HL7518 and is reserved for internal SWI use only. Default value: <u>6</u></p>
<p><u>Notes</u></p>	<ul style="list-style-type: none"> • When the module's internal temperature reaches either operating or extreme levels; the unsolicited message is in the format: +KTEMPMEAS: <level>,<value> where: <ul style="list-style-type: none"> <level> is the threshold level: <ul style="list-style-type: none"> -2 Extreme temperature lower bound (-40°C) -1 Operating temperature lower bound (-20°C) 0 Normal temperature 1 Operating temperature upper bound (+55°C) 2 Extreme temperature upper bound (+85°C) <value> is the actual temperature expressed in degrees Celsius • Due to temperature measurement uncertainty, there is a tolerance of +/-2°C • Check available GPIOs with +KGPIOCFG when using this command • GPIO 21 on the HL7518 is reserved for internal Sierra Wireless use only

5.33. +KBND Command: Current Networks Band Indicator

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KBND=?	<u>Response</u> +KBND: (list of supported <bnd>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+KBND?	<u>Response</u> +KBND: <bnd> OK
	<u>Parameters</u> <bnd> Band in hexadecimal format 0x0000 Not available 0x00000800 BAND_LTE_2 (1900 MHz); for HL7548 only 0x00002000 BAND_LTE_4 (1700 MHz) 0x00004000 BAND_LTE_5 (850 MHz); for HL7548 only 0x00010000 BAND_LTE_13 (700 MHz); for HL7518 only 0x00020000 BAND_LTE_17 (700MHz); for HL7548 only
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> This command returns the LTE band that the module currently uses. A SIM card must be inserted to support this command.

5.34. +KSRAT Command: Set Radio Access Technology

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KSRAT=?	<u>Response</u> +KSRAT: (list of supported <mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+KSRAT?	<u>Response</u> +KSRAT: <mode> OK
<i>Write command</i>	
<u>Syntax</u> AT+KSRAT= <mode>	<u>Response</u> OK
	<u>Parameter</u> <mode> 5 LTE only

HL7518 and HL7548	
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> • This command works without a SIM card inserted in the modem. • <mode> is automatically stored in non-volatile memory. • The setting takes effect immediately.

5.35. +CTZU Command: Automatic Time Zone Update

HL7518 and HL7548							
<u>Test command</u>							
<u>Syntax</u> AT+CTZU=?	<u>Response</u> +CTZU: (list of supported <onoff>s) OK						
<u>Read command</u>							
<u>Syntax</u> AT+CTZU?	<u>Response</u> +CTZU: <onoff> OK						
<u>Write command</u>							
<u>Syntax</u> AT+CTZU =<onoff>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <table> <tr> <td><onoff></td> <td>0</td> <td>Disable automatic time zone update via NITZ</td> </tr> <tr> <td></td> <td>1</td> <td>Enable automatic time zone update via NITZ</td> </tr> </table>	<onoff>	0	Disable automatic time zone update via NITZ		1	Enable automatic time zone update via NITZ
<onoff>	0	Disable automatic time zone update via NITZ					
	1	Enable automatic time zone update via NITZ					
<u>Notes</u>	<ul style="list-style-type: none"> • <onoff> is saved in non-volatile memory over module reboot. • CTZU (onoff=1) is enabled by default for proper Verizon Administration (SIM provision, OMADM, etc.) 						

5.36. +CTZR Command: Time Zone Reporting

HL7518 and HL7548	
<u>Test command</u>	
<u>Syntax</u> AT+CTZR=?	<u>Response</u> +CTZR: (list of supported <onoff>s) OK

HL7518 and HL7548	
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CTZR?</p>	<p><u>Response</u> +CTZR: <onoff> OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CTZR =<onoff></p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <onoff> <u>0</u> Disable time zone change event reporting <u>1</u> Enable time zone change event reporting</p>
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +CTZV: <tz>,<time> XNITZINFO: <timzone_variance>,<time> +CTZDST: <dst></p> <p><u>Parameters</u> <tz> Integer value indicating the time zone</p> <p><time> String type value in format "YY/MM/dd,hh:mm:ss" wherein the characters indicate year, month, date, hour, minutes and seconds.</p> <p><dst> Daylight sabings time value <u>0</u> Disable time zone change event reporting and URC +XNITZINFO, +CTZDST <u>1</u> Enable time zone change event reporting and URC +XNITZINFO, +CTZDST</p> <p><timzone_variance> String of format "GMT+HH:MM" or "GMT-HH:MM" (for example, GMT+5:30)</p>
<p><u>Reference</u> [27.007] §8.41</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • The Time Zone reporting is not affected by the Automatic Time Zone setting command +CTZU. • If the reporting is enabled the MT returns the unsolicited result code +CTZV: <tz> whenever the time zone is changed. • <onoff> is saved in non-volatile memory per AT port over module reboot.

5.37. +XDATACHANNEL Command: Configure Data Channel

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+ XDATACHANNEL =?</p>	<p><u>Response</u> +XDATACHANNEL: (list of <mode>s),(list of <csd_gprs_flag>s),(list of <connect_flag>s),(list of supported <cid>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+ XDATACHANNEL =<mode>, <csd_gprs_flag>, <ctrl_tid_path>, <tid_path> [,<connect_flag> [,<cid>]]</p>	<p><u>Response</u> OK or +CME ERROR: <err></p> <p><u>Parameters</u></p> <p><mode> 0 Disable routing 1 Enable routing 2 Query current setting for the channel where the command is executed (other parameters will be ignored)</p> <p><csd_gprs_flag> 0 Configure channel for a CSD connection 1 Configure channel for a GPRS connection</p> <p><ctrl_tid_path> Terminal for which the data routing mechanism shall be enabled in string format (e.g.: "/mux/5")</p> <p><tid_path> Terminal to which a data call shall be routed in string format (e.g.: "/mux/5")</p> <p><connect_flag> 0 No reporting on the data channel (neither CONNECT nor NO CARRIER) 1 Reporting on the data channel enabled (CONNECT and NO CARRIER) 2 Reporting on the control channel enabled (CONNECT and NO CARRIER)</p> <p><cid> Numeric parameter which specifies a particular PDP context definition (see the +CGDCONT and +CGDSCONT commands)</p>
<p><u>Notes</u></p>	<ul style="list-style-type: none"> • The control channel must be in OPEN state when the +XDATACHANNEL command is sent. • +XDATACHANNEL settings will only apply while control channel DLC is OPEN and will be reset as soon as DLC is closed. • When this command is sent with <cid> parameter, then the data channel (<tid_path>) must be in OPEN state and the given <cid> should already be defined. • If the <cid> is deleted or undefined, the XDATACHANNEL settings pertaining to the <cid> are not retained. • Connection must be established (start and stop) through <ctrl_tid_path> for data to be properly routed. • +XDATACHANNEL query (mode=2) does not return the <cid> associated with the control channel, as the data routing of a control channel can be configured for multiple <cid>s.

5.38. +XCELLINFO Command: Provide Cell Information

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+XCELLINFO=?	<u>Response</u> +XCELLINFO: (range of <mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+XCELLINFO?	<u>Response</u> +XCELLINFO: <mode>,<type>,<MCC>,<MNC>,<LAC>,<CI>,<RxLev> [,<t_advance>] OK or +XCELLINFO: <mode>,<type>,<MCC>,<MNC>,<LAC>,<CI>,<scrambling_code>,<dl_frequency>,<rscp>,<ecn0>,<pathloss> OK or +XCELLINFO: <mode>,<type>,[[<Earfcn>,[<PhyCellID>,[<RSRPResult>,[<RSRQResult>]]]]] OK or +XCELLINFO:<mode><type><MCC>,<MNC>,<CI>,<PhyCellInd>,<TrackingAreaCode>,<RSRPResult>,<RSRQResult>,<TA> OK
<i>Write command</i>	
<u>Syntax</u> AT+XCELLINFO=<mode>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <mode> 0 Disable periodic reporting 1 Enable reporting 2 Currently not used (for backward compatibility) <type> 5 LTE serving cell 6 LTE neighbor cell <RxLev> See command +CGED <t_advance> Signal strength; only valid for the serving cell <MCC> 0 – 99 Mobile country code <MNC> 0 – 99 Mobile network code

HL7518 and HL7548	
	<p><CI> Cell identity. 28-bits integer type</p> <p><PhysCellId> 0 – 503 Physical cell ID</p> <p><TrackingAreaCode> Tracking area code, 16-bits integer type</p> <p><RSRPResult> 0 – 97 Reference signal received power</p> <p><RSRQResult> 0 – 34 Reference signal reference quality</p> <p><TA> 0 – 1282 Timing advance</p> <p><Earfcn> Carrier frequency of the neighbor cell designated by the EUTRA absolute radio frequency</p> <p><PhyCellID> 0 – 503 Physical cell ID of the neighbor cell</p> <p><RSRPResult> 1 – 97 Average RSRP of the neighbor cell</p> <p><RSRQResult> 0 – 34 Average RSRQ of the neighbor cell</p>
<i>Unsolicited Notification</i>	<p>Response for serving cell</p> <p>+XCELLINFO:<type><MCC>,<MNC>,<CI>,<PhyCellInd>,<TrackingAreaCode>,<RSRPResult>,<RSRQResult>,<TA></p> <p>Response for neighbor cell</p> <p>+XCELLINFO: <type>,[[<Earfcn>],[<PhyCellID>],[<RSRPResult>],[<RSRQResult>]]]]</p>

5.39. +KCCINFO Command: Camped Cell Information

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u></p> <p>AT+KCCINFO=?</p>	<p><u>Response</u></p> <p>+KCCINFO: (range of <mode>s)</p> <p>OK</p>
<i>Read command</i>	
<p><u>Syntax</u></p> <p>AT+KCCINFO?</p>	<p><u>Response</u></p> <p>+KCCINFO: <mode>,<CI>,<RAC>,<TAC></p> <p>OK</p>
<i>Write command</i>	
<p><u>Syntax</u></p> <p>AT+KCCINFO= <mode></p>	<p><u>Response</u></p> <p>OK</p> <p><u>Parameters</u></p> <p><mode> 0 Camped cell parameters change event notification is disabled</p> <p> 1 Camped cell parameters change event notification is enabled</p>

HL7518 and HL7548	
	<p><CI> 4-byte location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal)</p> <p><RAC> 1-byte routing area code in hexadecimal format. FF will be displayed if routing area identity information is invalid.</p> <p><TAC> 2-byte tracking area code in hexadecimal format (e.g. "00C3" equals 195 in decimal). FFFF will be displayed if tracking area identity information is invalid.</p>
<i>Unsolicited Notification</i>	<p><u>Response</u> +KCCINFOI: <CI>,<RAC>,<TAC></p>
<u>Notes</u>	<ul style="list-style-type: none"> • This command used to enable/disable the unsolicited response which informs about any change in camped cell parameters. • This command works with a SIM card inserted in the modem. • <mode> is automatically stored in non-volatile memory. • The setting takes effect immediately.

5.40. +KSLEEP Command: Power Management Control for UART

HL7518 and HL7548							
<i>Test command</i>							
<p><u>Syntax</u> AT+KSLEEP=?</p>	<p><u>Response</u> +KSLEEP: (list of supported <mngt>s) OK</p>						
<i>Read command</i>							
<p><u>Syntax</u> AT+KSLEEP?</p>	<p><u>Response</u> +KSLEEP: <mngt> OK</p>						
<i>Write command</i>							
<p><u>Syntax</u> AT+KSLEEP= <mngt></p>	<p><u>Response</u> OK</p> <p><u>Parameters</u></p> <table> <tr> <td><mngt></td> <td>1</td> <td>The UART decides by itself (internal timing) when it will go to sleep mode, and it will be woken up with a character</td> </tr> <tr> <td></td> <td>2</td> <td>The UART never goes in sleep mode regardless of the DTR state</td> </tr> </table>	<mngt>	1	The UART decides by itself (internal timing) when it will go to sleep mode, and it will be woken up with a character		2	The UART never goes in sleep mode regardless of the DTR state
<mngt>	1	The UART decides by itself (internal timing) when it will go to sleep mode, and it will be woken up with a character					
	2	The UART never goes in sleep mode regardless of the DTR state					
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • The current configuration is kept in non-volatile memory over module reboot. • This command only controls UART power management, and does not affect the USB AT command port. • This command can be used without a SIM. • When AT+KSLEEP=1 and the module is in sleep mode, the user needs to input a character to wake the module up. After which, AT commands can be input normally. 						

HL7518 and HL7548	
<u>Example</u>	<pre> AT+KSLEEP=? +KSLEEP: (1-2) OK AT+KSLEEP? +KSLEEP: 1 OK AT+KSLEEP=0 // Change settings to mode 0, return ERROR ERROR AT+KSLEEP? +KSLEEP: 1 OK AT+KSLEEP=2 // Change settings to mode 2 OK AT+KSLEEP? +KSLEEP: 2 OK </pre>

5.41. +HBHV Command: Configure General System Behavior

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+HBHV=?	<u>Response</u> +HBHV: (0,2,3),(0,1) +HBHV: 1,(0-2) ... OK
<i>Read command</i>	
<u>Syntax</u> AT+HBHV?	<u>Response</u> +HBHV: 0,<ppp_dun_mode> +HBHV: 1,<omadm_reg_mode>,<omadm_reg_state> +HBHV: 2,<pdp_unlock_mode> +HBHV: 3,<show_orig_apn> OK

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+HBHV=0, <ppp_dun_ mode></p> <p>AT+HBHV=1, <omadm_reg_ mode></p> <p>AT+HBHV=2, <pdp_unlock_ mode></p> <p>AT+HBHV=3, <show_orig_ apn></p>	<p><u>Response</u> OK</p> <p><u>Parameters</u></p> <p><ppp_dun_mode> PPP dial-up networking behavior</p> <p>0 PDP context is brought up after LCP negotiation</p> <p>1 PDP context is brought up before LCP negotiation</p> <p><omadm_reg_mode> OMADM client bootstrapping behavior</p> <p>0 Disables bootstrapping initiated by the client</p> <p>1 Enables bootstrapping initiated by the client on the next successful registration if the module's IMEI is used for the first time and no server initiated session has happened before</p> <p>2 Enables bootstrapping initiated by the client on the next successful registration regardless of the above-mentioned criteria.</p> <p><omadm_reg_state> Bootstrap registration state</p> <p>0 The client hasn't been bootstrapped yet (no server initiated session has happened before)</p> <p>1 The client has been bootstrapped before with a successful server initiated session</p> <p><pdp_unlock_mode> PDP unlock mode</p> <p>0 Protects the reserved PDP contexts (1, 2, 11-20) from being modified accidentally</p> <p>1 Unlocks the protection on the reserved PDP contexts</p> <p>Default value = 0 for the HL7548; default value = 1 for the HL7518</p> <p><show_orig_apn> Enables showing the original APN saved in flash (updated by AT+CGDCONT=...). This is effective for PDP context 1 (LTE default bearer) with PDP context reading (AT+CGDCONT?).</p> <p>0 Disabled, shows APN that is given by network (e.g. "Itemobile.apn.mnc720.mcc302.gprs", "vzwims.mnc480.mcc311.gprs")</p> <p>1 Enabled, shows the original APN saved in flash</p>
<p><u>Notes</u></p>	<ul style="list-style-type: none"> • <omadm_reg_mode> will automatically be changed from "2" to "1" after the server initialized session was successfully processed. • The HL7518 and HL7548's OMADM client uses customized bootstrapping defined in the OMADM specification, i.e. with Verizon OMADM server connection configurations preloaded. However, the module still needs to be bootstrapped before the OMADM client can work with the Verizon OMADM server. There are two mechanisms to complete this bootstrapping: <ol style="list-style-type: none"> 1. Bootstrapping initiated by the server – the IMEI/IMSI are pre-registered to Verizon's OMADM database and bootstrapping is initiated automatically by the OMADM server through a DM session 2. Bootstrapping initiated by the client – the module initiates a DM session to the Verizon OMADM server that performs the bootstrapping <p>The default option <omadm_reg_mode>=1 enables the module to perform bootstrapping automatically via mechanism 2.</p>

5.42. +CIREP Command: IMS Network Reporting

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CIREP=?</p>	<p><u>Response</u> +CIREP: (list of supported <reporting>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CIREP?</p>	<p><u>Response</u> +CIREP: <reporting>,<nwimsvops> OK</p> <p>or +CME ERROR: <err></p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CIREP= <reporting></p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <reporting> 0 Disable reporting 1 Enable reporting</p> <p><nwimsvops> Gives the last IMS Voice over PS session (IMSVOPS) supported indication received from network 0 IMSVOPS support indication is not received from network, or is negative 1 IMSVOPS support indication as received from network is possible</p> <p><srcch> SRVCC handover information 0 PS to CS SRVCC handover has started in the CS domain ("Handover Command" indicating SRVCC received) 1 PS to CS SRVCC handover successful ("Handover Complete" sent) 2 PS to CS SRVCC handover cancelled ("Handover Failure" sent) 3 PS to CS SRVCC handover, general non-specific failure</p>
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +CIREPI: <nwimsvops> +CIREPH: <srcch></p>
<p><u>Notes</u></p>	<ul style="list-style-type: none"> • <reporting> is saved in non-volatile memory per AT port over module reboot. • <srcch>=3, general non-specific failure, may be used, for example in the case of handover cancellation as specified in 3GPP TS 24.301 subclause 6.6.2.

5.43. +CIREG Command: Registration Information

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CIREG=?</p>	<p><u>Response</u> +CIREG: (list of supported <n>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CIREG?</p>	<p><u>Response</u> +CIREP: <n>,<reg_info>[,<ext_info>] OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CIREG=<n></p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <n> Enables or disables reporting of changes in the MT's IMS registration information 0 Disable reporting 1 Enable reporting (parameter <reg_info>) 2 Enable extended reporting (parameter <reg_info> and <ext_info>)</p> <p><reg_info> Indicates IMS registration status 0 Not registered 1 Registered</p> <p><ext_info> Numeric value in hexadecimal format. It is the sum of hexadecimal values, each representing a particular IMS capability of the MT. This parameter is not present if the IMS registration status is "not registered" 1 RTP-based transfer of voice 2 SMS using IMS functionality 5 Both RTP-based transfer of voice according to MMTEL and SMS using IMS functionality can be used</p>
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +CIREGU: <reg_info>[,<ext_info>]</p>
<p><u>Notes</u></p>	<p><n> is saved in non-volatile memory per AT port over module reboot.</p>

5.44. +GST Command: General System Status Information

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+GST=?</p>	<p><u>Response</u> +GST: (list of supported <mode>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+GST?</p>	<p><u>Response</u> ... (display all responses of <mode>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+GST=<mode></p>	<p><u>Response</u></p> <p>For <mode>=0: ... (display all responses of <mode>s) OK</p> <p>For <mode>=1: +GST: <rtc_time>,<up_time> OK</p> <p>For <mode>=2: +GST: <port device string> OK</p> <p><u>Parameters</u></p> <p><mode> 0 Display all status information 1 Display the RTC time in seconds since 1970 Jan 1, and system boot up time in seconds 2 Display module port device string (e.g. /USBCDC/0)</p> <p><rtc_time> RTC time in seconds since 1970 Jan 1</p> <p><up_time> System boot up time in seconds</p> <p><port device string> String type; unique AT port device string e.g. "/USBCDC/0" /USBCDC/0 → ACM0 AT port /USBCDC/2 → ACM2 AT port</p>

5.45. +CESQ Command: Extended Signal Quality

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CESQ=?	<u>Response</u> +CESQ: (list of supported <rxlev>s),(list of supported <ber>s),(list of supported <rscp>s), (list of supported <ecno>s),(list of supported <rsrq>s),(list of supported <rsrp>s) OK
<i>Execute command</i>	
<u>Syntax</u> AT+CESQ	<u>Response</u> +CESQ: <rxlev>,<ber>,<rscp>,<ecno>,<rsrq>,<rsrp> OK
	<u>Parameters</u>
	<rxlev> Integer type; received signal strength level (see 3GPP TS 45.008 [20] subclause 8.1.4)
	0 rssi < -110 dBm
	1 -110 dBm ≤ rssi < -109 dBm
	2 -109 dBm ≤ rssi < -108 dBm
	...
	61 -50 dBm ≤ rssi < -49 dBm
	62 -49 dBm ≤ rssi < -48 dBm
	63 -48 dBm ≤ rssi
	99 not known or not detectable
	<ber> Integer type; channel bit error rate (in percent)
	0 – 7 As RXQUAL values in the table in 3GPP TS 45.008 [20] subclause 8.2.4
	99 Not known or not detectable
	<rscp> Integer type; received signal code power (see 3GPP TS 25.133 [95] subclause 9.1.1.3 and 3GPP TS 25.123 [96] subclause 9.1.1.1.3)
	0 rscp < -120 dBm
	1 -120 dBm ≤ rscp < -119 dBm
	2 -119 dBm ≤ rscp < -118 dBm
	...
	94 -27 dBm ≤ rscp < -26 dBm
	95 -26 dBm ≤ rscp < -25 dBm
	96 -25 dBm ≤ rscp
	255 Not known or not detectable
	<ecno> Integer type; ratio of the received energy per PN chip to the total received power spectral density (see 3GPP TS 25.133 [95] subclause)
	0 Ec/lo < -24 dB
	1 -24 dB ≤ Ec/lo < -23.5 dB
	2 -23.5 dB ≤ Ec/lo < -23 dB
	...
	47 -1 dB ≤ Ec/lo < -0.5 dB
	48 -0.5 dB ≤ Ec/lo < 0 dB
	49 0 dB ≤ Ec/lo
	255 Not known or not detectable

HL7518 and HL7548	
	<p><rsrq> Integer type; reference signal received quality (see 3GPP TS 36.133 [96] subclause 9.1.7)</p> <p>0 rsrq < -19.5 dB</p> <p>1 -19.5 dB ≤ rsrq < -19 dB</p> <p>2 -19 dB ≤ rsrq < -18.5 dB</p> <p>...</p> <p>32 -4 dB ≤ rsrq < -3.5 dB</p> <p>33 -3.5 dB ≤ rsrq < -3 dB</p> <p>34 -3 dB ≤ rsrq</p> <p>255 Not known or not detectable</p> <p><rsrp> Integer type; reference signal received power (see 3GPP TS 36.133 [96] subclause 9.1.4)</p> <p>0 rsrp < -140 dBm</p> <p>1 -140 dBm ≤ rsrp < -139 dBm</p> <p>2 -139 dBm ≤ rsrp < -138 dBm</p> <p>...</p> <p>95 -46 dBm ≤ rsrp < -45 dBm</p> <p>96 -45 dBm ≤ rsrp < -44 dBm</p> <p>97 -44 dBm ≤ rsrp</p> <p>255 Not known or not detectable</p>
<u>Notes</u>	<ul style="list-style-type: none"> • If the current serving cell is not a GERAN cell, <rxlev> and <ber> are set to value 99. • If the current serving cell is not a UTRA FDD or UTRA TDD cell, <rsrp> is set to 255. • If the current serving cell is not a UTRA FDD cell, <ecno> is set to 255. • If the current serving cell is not an E-UTRA cell, <rsrq> and <rsrp> are set to 255.

5.46. +XCSQ Command: Radio Signal Strength and Quality with URC Support

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+XCSQ=?	<u>Response</u> +XCSQ: (list of supported <n>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+XCSQ?	<u>Response</u> +XCSQ: <n>,<rsqi>,<ber> OK

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+XCSQ=<n>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <n> 0 Disable radio signal strength and quality indication URC 1 Enable radio signal strength and quality indication URC <rssI> Radio signal strength indication 0 -113 dBm or less 1 – 30 -111 to -53 dBm 31 -51 dBm or greater <u>99</u> Not known or not detectable <ber> Received signal quality. Range of values = 0 – 34 according to specification 3GPP 36.133 section 9.1.7
<i>Unsolicited Notification</i>	<u>Response</u> +XCSQ: <rssI>,<ber>

5.47. +XCESQ Command: Extended Signal Quality with URC Support

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+XCESQ=?	<u>Response</u> +XCESQ: (list of supported <n>s),(list of supported <rxlev>s),(list of supported <ber>s),(list of supported <rscp>s),(list of supported <ecno>s),(list of supported <rsrq>s),(list of supported <rsrp>s),(list of supported <rssnr>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+XCESQ?	<u>Response</u> +XCESQ: <n>,<rxlev>,<ber>,<rscp>,<ecno>,<rsrq>,<rsrp>,<rssnr> OK
<i>Write command</i>	
<u>Syntax</u> AT+XCESQ=[<n>]	<u>Response</u> OK or +CME ERROR: <err>

HL7518 and HL7548

<u>Parameters</u>	
<rxlev>	Integer type; received signal strength level (see 3GPP TS 45.008 [20] subclause 8.1.4)
0	rssl < -110 dBm
1	-110 dBm ≤ rssi < -109 dBm
2	-109 dBm ≤ rssi < -108 dBm
...	
61	-50 dBm ≤ rssi < -49 dBm
62	-49 dBm ≤ rssi < -48 dBm
63	-48 dBm ≤ rssi
99	Not known or not detectable
<ber>	Integer type; channel bit error rate (in percent)
0 – 7	As RXQUAL values in the table in 3GPP TS 45.008 [20] subclause 8.2.4
99	Not known or not detectable
<rscp>	Integer type; received signal code power (see 3GPP TS 25.133 [95] subclause 9.1.1.3 and 3GPP TS 25.123 [96] subclause 9.1.1.3)
0	rscp < -120 dBm
1	-120 dBm ≤ rscp < -119 dBm
2	-119 dBm ≤ rscp < -118 dBm
...	
94	-27 dBm ≤ rscp < -26 dBm
95	-26 dBm ≤ rscp < -25 dBm
96	-25 dBm ≤ rscp
255	Not known or not detectable
<ecno>	Integer type; ratio of the received energy per PN chip to the total received power spectral density (see 3GPP TS 25.133 [95] subclause)
0	Ec/lo < -24 dB
1	-24 dB ≤ Ec/lo < -23.5 dB
2	-23.5 dB ≤ Ec/lo < -23 dB
...	
47	-1 dB ≤ Ec/lo < -0.5 dB
48	-0.5 dB ≤ Ec/lo < 0 dB
49	0 dB ≤ Ec/lo
255	Not known or not detectable
<rsrq>	Integer type; reference signal received quality (see 3GPP TS 36.133 [96] subclause 9.1.7)
0	rsrq < -19.5 dB
1	-19.5 dB ≤ rsrq < -19 dB
2	-19 dB ≤ rsrq < -18.5 dB
...	
32	-4 dB ≤ rsrq < -3.5 dB
33	-3.5 dB ≤ rsrq < -3 dB
34	-3 dB ≤ rsrq
255	Not known or not detectable
<rsrp>	Integer type; reference signal received power (see 3GPP TS 36.133 [96] subclause 9.1.4)
0	rsrp < -140 dBm
1	-140 dBm ≤ rsrp < -139 dBm
2	-139 dBm ≤ rsrp < -138 dBm

HL7518 and HL7548	
	... 95 -46 dBm ≤ rsrp < -45 dBm 96 -45 dBm ≤ rsrp < -44 dBm 97 -44 dBm ≤ rsrp 255 Not known or not detectable <rssnr> Integer type; radio signal strength noise ration value -100 RSSNR ≤ -50 dB -99 -50 dB < RSSNR ≤ -49.5 dB -98 -49.5 dB < RSSNR ≤ -49 dB ... -1 -1 dB < RSSNR ≤ -0.5 dB 0 -0.5 dB < RSSNR ≤ 0 dB 1 0 dB < RSSNR ≤ 0.5 dB ... 98 49 dB ≤ RSSNR < 49.5 dB 99 49.5 dB ≤ RSSNR < 50 dB 100 50 dB ≤ RSSNR 255 Not known or not detectable
<i>Unsolicited Notification</i>	<u>Response</u> +XCESQI: <rxlev>,<ber>,<rscp>,<ecno>,<rsrq>,<rsrp>,<rssnr>
<u>Notes</u>	<ul style="list-style-type: none"> • If the current serving cell is not a GERAN cell, <rxlev> and <ber> are set to value 99. • If the current serving cell is not a UTRA FDD or UTRA TDD cell, <rscp> and <ecno> are set to 255. • If the current serving cell is not an E-UTRA cell, <rsrq>, <rsrp> and <rssnr> are set to 255.

5.48. +CPWROFF Command: Switch MS Off

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CPWROFF=?	<u>Response</u> OK
<i>Execute/Write command</i> <u>Syntax</u> For HL7518: AT+CPWROFF For HL7548: AT+CPWROFF [=<mode>]	<u>Response</u> OK or +CME ERROR: <error> <u>Parameter</u> <mode> Power down mode. This parameter is only available in the HL7548. 1 Fast power down mode
<u>Notes</u>	<ul style="list-style-type: none"> • Not specifying a parameter value for the execute command will perform normal IMSI detach before powering down. • <mode>=1 will perform fast power down without an IMSI detach request being sent to the network (~1s faster than power down mode).

HL7548	
	<pre>AT+CFUN=1,1 // Reboot the module to take effect. The new mode is effective // with the USB bus re-enumerated. OK <<<< module reboots >>>></pre>

5.50. +WMUSBVCC Command: USB VCC Detection Setting

Note: For HL7548 only.

HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+WMUSBVCC=?	<u>Response</u> +WMUSBVCC: (list of supported <mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+WMUSBVCC?	<u>Response</u> +WMUSBVCC: <mode> OK
<i>Write command</i>	
<u>Syntax</u> AT+WMUSBVCC=<mode>	<u>Response</u> OK <u>Parameter</u> <mode> 0 USB detection if Vbus > 4.75V 1 USB detection if Vbus > 2.5V (e.g., for PC mini-card applications)
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> <mode> is saved to non-volatile memory over module reset. This command can be used without a SIM card.
<u>Examples</u>	<pre>AT+WMUSBVCC=? +WMUSBVCC: (0-1) OK AT+WMUSBVCC? +WMUSBVCC: 0 OK AT+WMUSBVCC=0 // Change setting to mode 0 OK AT+WMUSBVCC? +WMUSBVCC: 0 OK</pre>

HL7548	
	<pre> AT+WMUSBVCC=1 // Change setting to mode 1 OK AT+WMUSBVCC? +WMUSBVCC: 1 OK </pre>

5.51. +BOOTDWLCFG Command: Boot Configuration for Firmware Download

Note: For HL7548 only.

5.51.1. Description

This command configures the USB enumeration time out and USB link time out that are used in detecting a firmware download request.

The USB link time out refers to the time out for correct “AT” start frame to start the firmware download procedure.

The flow diagram below shows the sequence in detecting a firmware download request, which always happens when the module boots or reboots.

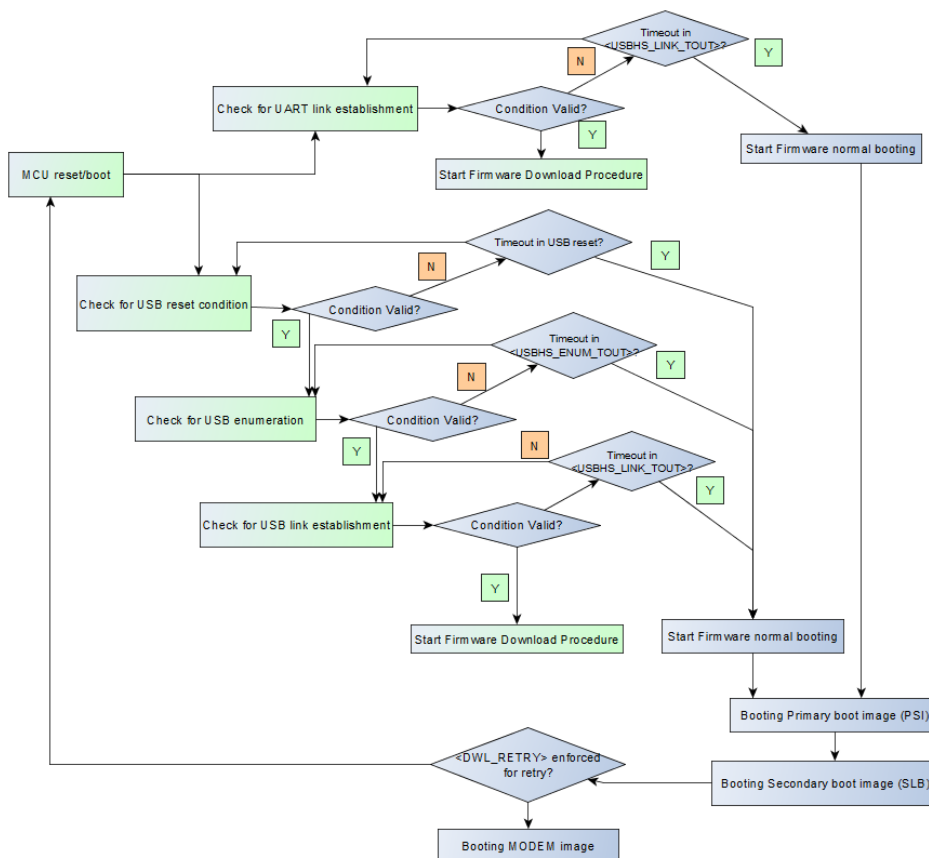


Figure 2. Firmware Download Request Detection Sequence

Basically, when the module boots, it polls the USB and UART channels in parallel for firmware download conditions.

For the USB channel, the module polls for the following conditions individually:

1. USB reset
2. USB enumeration
3. USB link establishment (“AT” start frame)

For the UART channel, the module polls for a USB link establishment (“AT” start frame) only.

If time out happens, the firmware download detection sequence breaks, and the module either boots normally or it reboots for another retry depending on the AT parameter <DWL_RETRY>.

Time out values are listed in the following table.

Table 1. Time Out Values

Time Out	Default Value	Configurable with +BOOTDWLCFG? (Possible Values)
UART link time out	150 milliseconds	No
USB reset time out	400 milliseconds	No
USB enumeration time out	3 seconds	Yes (3s, 30s, 60s, 90s)
USB link time out	1 second	Yes (1s, 30s, 60s, 90s)

If the primary boot image (PSI) is corrupted during firmware download, another set of time out values, extended timeout values, is used. The extended time out values are listed in the following table.

Table 2. Extended Time Out Values

Time Out	Value	Configurable
UART link time out	30 seconds	No
USB reset time out	3.5 seconds	No
USB enumeration time out	5 seconds	No
USB link time out	30 seconds	No

If the PSI is corrupted, the module will neither start normal booting nor reboot itself after time out. A successful firmware download is required to recover the module. Moreover, an external hardware reset will be required to start the firmware download again when the time out happens.

However, a PSI image is not usually corrupted because due to its small size (around 60kbytes in one flash block) and upgrade can be completed quickly in writing to the first NAND flash block.

5.51.2. Syntax

HL7548																									
<p><i>Test command</i></p> <p><u>Syntax</u> AT+ BOOTDWLCFG= ?</p>	<p><u>Response</u> +BOOTDWLCFG: (list of supported <USBHS_ENUM_TOUT>s),(list of supported <USBHS_LINK_TOUT>s),(list of supported <DWL_RETRY>s),(list of supported <SYS_REBOOT>s) OK</p>																								
<p><i>Read command</i></p> <p><u>Syntax</u> AT+ BOOTDWLCFG?</p>	<p><u>Response</u> +BOOTDWLCFG: <USBHS_ENUM_TOUT>,<USBHS_LINK_TOUT>,<DWL_RETRY> OK</p>																								
<p><i>Write command</i></p> <p><u>Syntax</u> AT+ BOOTDWLCFG= [<USBHS_ENUM _TOUT> [,<USBHS_LINK_ TOUT> [,<DWL_RETRY> [,<SYS_REBOOT >]]]</p>	<p><u>Response</u> OK</p> <p><u>Parameters</u></p> <p><USBHS_ENUM_TOUT> USB enumeration time out value</p> <table> <tr><td>0</td><td>3s</td></tr> <tr><td>1</td><td>30s</td></tr> <tr><td>2</td><td>60s</td></tr> <tr><td>3</td><td>90s</td></tr> </table> <p><USBHS_LINK_TOUT> USB link establishment time out value</p> <table> <tr><td>0</td><td>1s</td></tr> <tr><td>1</td><td>30s</td></tr> <tr><td>2</td><td>60s</td></tr> <tr><td>3</td><td>90s</td></tr> </table> <p><DWL_RETRY> Desired firmware download retry count when firmware download conditions are not met (i.e. the download program didn't start)</p> <table> <tr><td>0</td><td>No retry</td></tr> <tr><td>1 – 10</td><td>Number of retries</td></tr> </table> <p><SYS_REBOOT> System reboot options after executing this command</p> <table> <tr><td>0</td><td>Do not reboot</td></tr> <tr><td>1</td><td>Reboot immediately without network deregistration</td></tr> </table>	0	3s	1	30s	2	60s	3	90s	0	1s	1	30s	2	60s	3	90s	0	No retry	1 – 10	Number of retries	0	Do not reboot	1	Reboot immediately without network deregistration
0	3s																								
1	30s																								
2	60s																								
3	90s																								
0	1s																								
1	30s																								
2	60s																								
3	90s																								
0	No retry																								
1 – 10	Number of retries																								
0	Do not reboot																								
1	Reboot immediately without network deregistration																								
<p><u>Notes</u></p>	<ul style="list-style-type: none"> • USB time out happens when the USB cable is connected (VBUS level > 0.8V) and USB RESET happens within a 400ms time out. • <USBHS_ENUM_TOUT> and <USBHS_LINK_TOUT> are automatically reset to their default values, 0, in the following conditions: <ul style="list-style-type: none"> ▪ Cold boot or hardware reset. ▪ Download program received the reset command from the host to reboot the module. ▪ Successfully booted in the module firmware, which means time out values are reset when time out happens in a previous boot. <p>Basically, the conditions above are terminate conditions that time out values are effective only once.</p>																								

HL7548	
	<ul style="list-style-type: none"> • If <DWL_RETRY> is enabled (non-zero value), and firmware download conditions are not met (i.e. download program didn't start), the module reboots itself with the input parameters <USBHS_ENUM_TOUT> and <USBHS_LINK_TOUT> for the next "TRY" of USB enumeration and USB link establishment. One of the following conditions stops this firmware download retry loop: <ul style="list-style-type: none"> ▪ Cold boot or hardware reset. ▪ Retry count exhausted (if not configured to be 255/continually). ▪ Download program successfully started. • Any failures related to firmware download, that includes the following will have the module reboot itself with <USBHS_ENUM_TOUT>=3 and <USBHS_LINK_TOUT>=3, regardless of the setting <DWL_RETRY>: <ul style="list-style-type: none"> ▪ 10 seconds inactivity time out in download program. ▪ Boot failures due to corrupted firmware images, either detected by the primary boot image (PSI) or secondary boot image (SLB). ▪ Any exceptional failures in download program or boot-up images. <p>Five (5) extra seconds of delay happens before the reboot for the second and third conditions. A successful firmware download is required to recover the module.</p>
<u>Examples</u>	<pre> AT+BOOTDWLCFG=? +BOOTDWLCFG: (0-3),(0-3),(0-10),(0-1) OK //default values after boot-up AT+BOOTDWLCFG? +BOOTDWLCFG: 0,0,0 OK <USB enumeration time-out = 90s, USB link time-out = 90s> AT+BOOTDWLCFG=3,3,0,0 OK AT+BOOTDWLCFG? +BOOTDWLCFG: 3,3 OK AT+BOOTDWLCFG=3,3 or AT+CFUN=1,1 OK //module reboots for Firmware Download <USB enumeration time-out = 3s, USB link time-out = 30s, reboot automatically> AT+BOOTDWLCFG=0,1 OK //module reboots for Firmware Download </pre>

5.52. +KRIC Command: Ring Indicator Control

Note: For HL7518 only.

HL7518																							
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KRIC=?</p>	<p><u>Response</u> +KRIC: (list of supported <mask>es),(list of supported <shape>s) OK</p>																						
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KRIC?</p>	<p><u>Response</u> +KRIC: <mask>,<shape> OK</p>																						
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KRIC= <mask> [,<shape>]</p>	<p><u>Response</u> OK</p> <p><u>Parameters</u></p> <p><mask> Use of RI signal</p> <table> <tr> <td>0x00</td> <td>RI not used</td> <td></td> </tr> <tr> <td>0x01</td> <td>RI activated on incoming calls</td> <td>(+CRING, RING)</td> </tr> <tr> <td>0x02</td> <td>RI activated on SMS</td> <td>(+CMT, +CMTI)</td> </tr> <tr> <td>0x04</td> <td>RI activated on SMS-CB</td> <td>(+CBM, +CBMI)</td> </tr> <tr> <td>0x08</td> <td>RI activated on USSD</td> <td>(+CUSD)</td> </tr> <tr> <td>0x10</td> <td>RI activated on network state</td> <td>(+CIEV)</td> </tr> </table> <p><shape> Signal shape (only available for incoming calls)</p> <table> <tr> <td>0</td> <td>Repeat pulses. The total length of the pulse is equivalent to the transfer of the RING or CRING notification</td> </tr> <tr> <td>1</td> <td>Always active. The signal is set to active during the whole incoming call notification</td> </tr> </table>	0x00	RI not used		0x01	RI activated on incoming calls	(+CRING, RING)	0x02	RI activated on SMS	(+CMT, +CMTI)	0x04	RI activated on SMS-CB	(+CBM, +CBMI)	0x08	RI activated on USSD	(+CUSD)	0x10	RI activated on network state	(+CIEV)	0	Repeat pulses. The total length of the pulse is equivalent to the transfer of the RING or CRING notification	1	Always active. The signal is set to active during the whole incoming call notification
0x00	RI not used																						
0x01	RI activated on incoming calls	(+CRING, RING)																					
0x02	RI activated on SMS	(+CMT, +CMTI)																					
0x04	RI activated on SMS-CB	(+CBM, +CBMI)																					
0x08	RI activated on USSD	(+CUSD)																					
0x10	RI activated on network state	(+CIEV)																					
0	Repeat pulses. The total length of the pulse is equivalent to the transfer of the RING or CRING notification																						
1	Always active. The signal is set to active during the whole incoming call notification																						
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> The current configuration is kept in non-volatile memory after a reset. For SMS and other unsolicited messages, only one pulse is set regardless of <shape>. The width of the pulse is 1s. For repeated pulse on incoming calls, pulse width is 1s, and then rest for 4s, and then repeated. Do not use the command during an incoming call, SMS, SMSCB, USSD, etc. This command can be used without SIM. If <shape> is omitted, the previously saved value will be used. 																						
<p><u>Examples</u></p>	<p>AT+KRIC=? +KRIC: (0-31),(0-1) OK</p> <p>AT+KRIC? +KRIC: 15,0 OK</p> <p>AT+KRIC=1,1 // RI activated on incoming call and set to always active OK</p>																						

HL7518	
	AT+KRIC? +KRIC: 1,1 OK
	AT+KRIC=2 // RI activated on SMS OK
	AT+KRIC? +KRIC: 2,1 OK

5.53. +KSYNC Command: Application Synchronization Signal

Note: For HL7548 only.

HL7548	
<i>Test command</i> <u>Syntax</u> AT+KSYNC=?	<u>Response</u> +KSYNC: (list of supported <mode>s),(list of supported <IO>s),(range of <Duty Cycle>),(range of <Pulse Duration>) OK
<i>Read command</i> <u>Syntax</u> AT+KSYNC?	<u>Response</u> +KSYNC: <mode>,<IO>,<Duty Cycle>,<Pulse Duration> OK
<i>Write command</i> <u>Syntax</u> AT+KSYNC= <mode>[,<IO> [,<Duty Cycle> [,<Pulse Duration>]]]	<u>Response</u> OK <u>Parameters</u> <mode> Operation mode 0 Disable the generation of synchronization signal 1 Manage the generation of signal according to <Duty Cycle> and <Pulse Duration>. The waveform of the signal is controlled by these two parameters; network status will not affect the waveform 2 Manage the generation of signal according to CS network registration status; PERMANENTLY OFF Not registered/Initialization or registration denied/no SIM card 600 ms ON / 600ms OFF Not registered but searching 75 ms ON / 3s OFF Connected to the network <Duty Cycle> and <Pulse Duration> are not used in mode 2 <IO> 1 – 8, 10, 11, 15 GPIO used as output <Duty Cycle> 1 – 100 Duty cycle; only used in mode 1. Default value = <u>50</u> <Pulse Duration> 5 – 65535 Pulse duration in milliseconds; only used in mode 1. Default value = <u>1000</u>

HL7548	
<u>Notes</u>	<ul style="list-style-type: none"> Parameter settings are automatically saved in non-volatile memory. Refer to +KGPIOCFG for multiplexed functions of GPIOs. GPIOs may already be used by SIM detection or temperature monitoring. Check with other related commands such as +KSIMDET, +KTEMPMON prior to using this command. This command can be used without a SIM. This command will force the GPIO pins as output, regardless of AT+KGPIOCFG configuration. Only 1 GPIO signal can be generated at a time. The minimum LED ON/OFF cycle is 5ms due to the precision of the timer. This feature can only be used if <Pulse Duration>*<Duty Cycle> is less than 5ms. <mode>=2 is kept for compatibility with other HL series LTE-only products which do not support CS.
<u>Examples</u>	<pre>AT+KSYNC=1,1,50,2000 //Generate the signal, 50% duty cycle, and 2000 ms pulse //duration on GPIO1. OK AT+KSYNC=1,2,50,2000 //Generate the signal, 50% duty cycle, and 2000 ms pulse //duration on GPIO2. //Note that the previous signal on GPIO1 will be stopped. OK AT+KSYNC=0,2 //Disable the signal generation. OK AT+KSYNC=2,1 //Generate signal on GPIO1, according to the CS network //registration status. OK AT+KSYNC=3,1 //Generate signal on GPIO1, according to the PS network //registration status. OK</pre>

5.54. +KSREP Command: Mobile Start-Up Reporting

Note: For HL7548 only.

HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KSREP=?	<u>Response</u> +KSREP: (list of supported <mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+KSREP?	<u>Response</u> +KSREP: <mode>,<stat>,<PB ready> OK

HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KSREP= <mode></p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <mode> Unsolicited result code mode 0 Disable the start-up URC 1 Enable the start-up URC</p> <p><stat> Module status 0 Module is ready to receive commands for the TE. No access code is required 1 Module is waiting for an access code. (Use AT+CPIN? command to determine code) 2 SIM card is not present 3 Module is in "SIM lock" state 4 Unrecoverable error 5 Unknown state</p> <p><PB ready> Phone book status 0 Phone book is not ready 1 Phone book is ready for read and write</p>
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +KSUP: <stat></p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • The URC message +KSUP: <stat> will only be displayed once after reboot if <mode> is equal to 1. • If <mode> is equal to 0, +PBREADY and +SIM URC notifications will not be sent at the start up process. However, they will still be sent afterwards during normal modem operation. • This command can be used without SIM card. • The <mode> is saved into non-volatile memory.
<p><u>Example</u></p>	<p>1. SIM Card is inserted AT+KSREP? // The mode is 1. Module and phone book are ready +KSREP: 1,0,1 OK</p> <p>AT+KSREP=? // Test command +KSREP: (0-1) OK</p> <p>AT+KSREP=0 // Set mode to 0 OK</p> <p>AT+KSREP? // The mode is changed to 0 and save in non-volatile memory. +KSREP: 0,0,1 // The mode is 0. OK</p> <p>// Reboot the module AT+KSREP? // The mode is 0 which is restored from non-volatile memory. +KSREP: 0,0,1 OK</p>

HL7548

```
2. SIM card is not inserted.
// Reboot the module
+SIM: 0 // URC after reboot.
+KSUP: 2 // Start-up report shows that the SIM is not present.

AT+KSREP?
+KSREP: 1,2,0 // SIM not present and phone book not ready
OK

+SIM: 1 // Insert SIM card
+PBREADY // Phone Book is ready

AT+KSREP?
+KSREP: 1,0,1 // Start-up reporting is enabled. Module, phone book are ready
OK
```



6. Network Service Related Commands

6.1. +CAOC Command: Advice of Charge

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CAOC=?	<u>Response</u> +CAOC: (list of supported <mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CAOC?	<u>Response</u> +CAOC: <mode> OK
<i>Write command</i>	
<u>Syntax</u> AT+CAOC= [<mode>]	<u>Response</u> +CAOC: <ccm> OK or +CME ERROR: <err> <u>Parameters</u> <mode> 0 Query CCM value 1 Deactivate unsolicited notification (+CCCM) 2 Activate unsolicited notification <ccm> String type; three bytes of the current call meter value in hexadecimal format
<i>Unsolicited Notification</i>	<u>Response</u> +CCCM: <ccm>

6.2. +CUSD: Unstructured Supplementary Service Data

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CUSD=?	<u>Response</u> +CUSD: (list of supported <n>s) OK

HL7518 and HL7548	
<i>Read command</i>	
<u>Syntax</u> AT+<i>CUSD</i>?	<u>Response</u> +<i>CUSD</i>: <n> OK
<i>Write command</i>	
<u>Syntax</u> AT+<i>CUSD</i>=[<n> ,<str>,<dc>]]]	<u>Response</u> OK or +<i>CME ERROR</i>: <err> <u>Parameters</u> <n> Enables or disables the presentation of an unsolicited result code <u>0</u> Disable the result code presentation to the TE (default value if no parameter) 1 Enable the result code presentation to the TE 2 Cancel session (not applicable to read command response) <str> String type USSD-string (when <str> parameter is not given, network is not interrogated) <dc> Cell Broadcast Data Coding Scheme in integer format (default value: <u>0</u>) <m> 0 No further user action required (network initiated USSD-Notify, or no further information needed after mobile initiated operation) 1 Further user action required (network initiated USSD-Request, or further information needed after mobile initiated operation) 2 USSD terminated by network 3 Other local client has responded 4 Operation not supported 5 Network time out
<i>Unsolicited Notification</i>	<u>Response</u> +<i>CUSD</i>: <m>,<str>,<dc>]
<u>Notes</u>	<n> is saved in non-volatile memory per AT port over module reboot.

6.3. +CLCK Command: Facility Lock

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+<i>CLCK</i>=?	<u>Response</u> +<i>CLCK</i>: (list of supported <fac>s) OK or +<i>CME ERROR</i>: <err>

HL7518 and HL7548*Write command*Syntax

**AT+CLCK=<fac>,
<mode>
[,<passwd>
[,<class>]]**

Response

If <mode> = 2 and command is successful

OK

**+CLCK: <status>[,<class1>[<CR>,<LF>
+CLCK: <status>,class2...]]**

or

+CME ERROR: <err>

Parameters

<fac> Values reserved by the present document:

"PS" PH-SIM (lock Phone to SIM/UICC card installed in the currently selected card slot) (MT asks for the password when other than current SIM/UICC card is inserted; MT may remember certain previously used cards thus not requiring password when they are inserted)

"SC" SIM (lock SIM/UICC card) (SIM/UICC asks password in MT power-up and when this lock command issued)

"AO" BAO (Barr All Outgoing Calls)

"OI" BOIC (Barr Outgoing International Calls)

"OX" BOIC-exHC (Barr Outgoing International Calls except to Home Country)

"AI" BAIC (Barr All Incoming Calls)

"IR" BIC-Roam (Barr Incoming Calls when Roaming outside the home country)

"AB" All Barring services (applicable only for mode>=0)

"AG" All outgoing barring services (applicable only for <mode>=0)

"AC" All incoming barring services (applicable only for <mode>=0)

"FD" SIM card or active application in the UICC (GSM or USIM) fixed dialing memory feature (if PIN2 authentication has not been done during the current session, PIN2 is required as <passwd>)

"PN" Network Personalization

"PU" Network subset Personalization

"PP" Service Provider Personalization

"PC" Corporate Personalization

<mode> 0 Unlock
 1 Lock
 2 Query status

<status> 0 Not active
 1 Active

<passwd> String type; shall be the same as password specified for the facility from the ME user interface or with command Change Password +CPWD

<classx> Sum of integers each representing a class of information (default value = 7)

2 Data (refers to all bearer services; with <mode>=2 this may refer only to some bearer service if TA does not support values 16, 32, 64 and 128)

4 Fax (facsimile services)

8 Short message service

16 Data circuit sync

32 Data circuit async

64 Dedicated packet access

128 Dedicated PAD access

6.4. +CNUM Command: Subscriber Number

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CNUM=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+CNUM	<u>Response</u> +CNUM: [<alpha1>,<number1>,<type1>[,<speed>,<service>[,<itc>]] [<CR><LF> +CNUM: [<alpha2>,<number2>,<type2>[,<speed>,<service>[,<itc>]] [...]] OK or +CME ERROR: <err> <u>Parameters</u> <alpha> Optional alphanumeric string associated with <number>; used character set should be the one selected with command +CSCS <number> String type phone number of format specified by <typex> <typex> Type of address octet in integer format <speed> As defined in 27.007 sub clause 6.7, corresponding to +CBST setting <service> Service related to the phone number 0 Asynchronous modem 1 Synchronous modem 2 PAD Access (asynchronous) 3 Packet Access (synchronous) 5 Fax <itc> Information transfer capability 0 3.1kHz 1 UDI

6.5. +COLP Command: Connected Line Identification Presentation

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+COLP=?	<u>Response</u> +COLP: (list of supported <n>s) OK

HL7518 and HL7548	
<i>Read command</i>	
<u>Syntax</u> AT+COLP?	<u>Response</u> +COLP: <n>,<m> OK
<i>Execute command</i>	
<u>Syntax</u> AT+COLP=[<n>]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <n> 0 Disable result code presentation status to the TE 1 Enable result code presentation status to the TE <m> 0 COLP not provisioned 1 COLP provisioned 2 Unknown (e.g. no network, etc.)
<u>Notes</u>	<ul style="list-style-type: none"> If the connected line identity of the called party is enabled, (and called subscriber allows it), the intermediate result code +COLP: <number>, <type> [,<subaddr>, <satype> [, <alpha>]] is returned from TA to TE. <n> is saved in non-volatile memory per AT port over module reboot.

6.6. +COPN Command: Read Operator Name

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+COPN=?	<u>Response</u> OK
<i>Execute command</i>	
<u>Syntax</u> AT+COPN	<u>Response</u> +COPN: <numeric1>,<alpha1>[<CR><LF> +COPN: <numeric2>,<alpha2> [...] OK or +CME ERROR: <err> <u>Parameters</u> <numeric> String type; operator in numeric format (see +COPS) <alpha> String type; operator in long alphanumeric format (see +COPS)
<u>Notes</u>	If the matching PLMN name is not found then the numeric PLMN ID (MCCMNC) will be displayed.

6.7. +COPS Command: Operator Selection

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+COPS=?</p>	<p><u>Response</u> +COPS: [[list of supported (<stat>, long alphanumeric <oper>, short alphanumeric <oper>, numeric <oper>[,< AcT>,<plmn_list>)]s][,.(list of supported <mode>s),(list of supported <format>s)] OK</p> <p>or +CME ERROR: <err></p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+COPS?</p>	<p><u>Response</u> +COPS: <mode>[,<format>,<oper>[,<AcT>]] OK</p> <p>or +CME ERROR: <err></p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+COPS= [<mode> [,<format> [,<oper> [,< AcT>]]]]</p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u></p> <p><mode> 0 Automatic; in this case other fields are ignored and registration is done automatically by ME 1 Manual (other parameters like format and operator need to be passed) 2 Deregister from network 3 Sets <format> value. In this case <format> becomes a mandatory input 4 Manual/automatic; if manual selection fails then automatic mode is entered</p> <p><format> 0 Long alphanumeric; if network name is not available it displays a combination of MCC and MNC in string format 1 Short alphanumeric 2 Numeric</p> <p><oper> String type given in format <format>; this field may be up to 16-character long for long alphanumeric format, up to 8 characters for short alphanumeric format and 5 characters long for numeric format (MCC/MNC codes)</p> <p><stat> 0 Unknown networks 1 Network available 2 Current (registered) 3 Forbidden network</p> <p><AcT> 7 LTE</p>

HL7518 and HL7548	
	<p><plmn_list> 0 PLMN is present on the EHPLMN list 1 PLMN is present on the user-controlled PLMN list 2 PLMN is present on the operator-controlled PLMN list</p> <p>Note that this parameter only supports R7 Protocol Stack onwards.</p>
<u>Notes</u>	<ul style="list-style-type: none"> • This command forces an attempt to select and register the GSM, UMTS network. • Set command sets automatic network selection or selects network and a certain access technology AcT. • Read command returns current network. • Test command returns available networks and lists of supported <mode>s and <format>s. • This command is abortable. The port shall be freed for issuing another command. No network abort shall be triggered. • <mode>=0,1,2,4 and <oper> are saved in non-volatile memory over module reboot. • <format> is saved in non-volatile memory per AT port over module reboot.

6.8. +CPOL Command: Preferred PLMN List

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CPOL=?</p>	<p><u>Response</u> +CPOL: (list of supported <index>es),(list of supported <format>s) OK</p> <p>or</p> <p>+CME ERROR: <err></p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CPOL?</p>	<p><u>Response</u> +CPOL: <index1>,<format>,<oper1>[,<GSM_AcT1>,<GSM_Compact_AcT1>,<UTRAN_AcT1>][<CR><LF> +CPOL: <index2>,<format>,<oper2>[,<GSM_AcT2>,<GSM_Compact_AcT2>,<UTRAN_AcT2>] [...]] OK</p> <p>or</p> <p>+CME ERROR: <err></p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CPOL= [<index>] [,<format> [,<oper> [,<GSM_AcT>, <GSM_Compact_AcT>,<UTRAN_AcT>,<EUTRAN_AcT>]]]</p>	<p><u>Response</u> OK</p> <p>or</p> <p>+CME ERROR: <err></p> <p><u>Parameters</u> <index> Integer type; order number of operator in the SIM/USIM preferred operator list</p>

HL7518 and HL7548	
	<p><format> 0 Long format alphanumeric <oper> 1 Short format alphanumeric <oper> 2 Numeric <oper></p> <p><opern> String type; <format> indicates if the format is alphanumeric or numeric</p> <p><GSM_Act> 0 GSM access technology not selected 1 GSM access technology selected</p> <p><GSM_Comp_Act> 0 GSM compact access technology not selected 1 GSM compact access technology selected</p> <p><UTRA_Act> 0 UTRA access technology not selected 1 UTRA access technology selected</p> <p><EUTRA_Act> 0 UTRA access technology not selected 1 UTRA access technology selected</p>
<u>Notes</u>	<ul style="list-style-type: none"> • The read command can have "n" RAT values. • If matching PLMN name is not found, then numeric PLMN ID (MCCMNC) will be displayed. • <format> is saved in non-volatile memory over module reboot.

6.9. +CPWD Command: Change Password

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CPWD=?	<u>Response</u> +CPWD: list of supported (<fac>,<pwdlength>)s OK
<i>Write command</i>	
<u>Syntax</u> AT+CPWD= <fac>,<oldpwd>, <newpwd>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <fac> "PS" PH-SIM (lock Phone to SIM/UICC card installed in the currently selected card slot) (MT asks for the password when other than current SIM/UICC card is inserted; MT may remember certain previously used cards thus not requiring password when they are inserted) "SC" SIM (lock SIM/UICC card) (SIM/UICC asks password in MT power-up and when this lock command issued) "AO" BAO (Barr All Outgoing Calls) "OI" BOIC (Barr Outgoing International Calls) "OX" BOIC-exHC (Barr Outgoing International Calls except to Home Country) "AI" BAIC (Barr All Incoming Calls)

HL7518 and HL7548	
"IR"	BIC-Roam (Barr Incoming Calls when Roaming outside the home country)
"FD"	SIM card or active application in the UICC (GSM or USIM) fixed dialing memory feature (if PIN2 authentication has not been done during the current session, PIN2 is required as <passwd>)
"PN"	Network Personalization
"PU"	Network subset Personalization
"PP"	Service Provider Personalization
"PC"	Corporate Personalization
<oldpwd>	String type containing the old password
<newpwd>	String type containing the new password
<pwdlength>	Length of password

6.10. +CREG Command: Network Registration

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CREG=?	<u>Response</u> +CREG: (list of supported <n>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CREG?	<u>Response</u> +CREG: <n>,<stat>[,<lac>,<ci>[,<Act>]] OK
<i>Write command</i>	
<u>Syntax</u> AT+CREG=[<n>]	<u>Response</u> OK or +CME ERROR: <err>
	<u>Parameters</u> <n> 0 Disable network registration unsolicited result code 1 Enable network registration unsolicited result code +CREG: <stat> 2 Enable network registration and location information unsolicited result code +CREG: <stat>[,<lac>,<ci>[,<Act>]] <stat> 0 Not registered, ME is not currently searching a new operator to register to 1 Registered, home network 2 Not registered, but ME is currently searching a new operator to register to 3 Registration denied 4 Unknown 5 Registered, roaming <lac> String type; two-byte location area code in hexadecimal format (e.g. "00C3" equals 195 in decimal)

HL7518 and HL7548	
	<p><ci> String type; four-byte E-UTRAN cell ID in hexadecimal format</p> <p><Act> 7 E-UTRAN</p>
<i>Unsolicited Notification</i>	<p><u>Response</u> When <n>=1 and there is a change in the ME network registration status code: +CREG: <stat></p> <p>When <n>=2 and there is a change in the network cell: +CREG: <stat>[,<lac>,<ci>[,<Act>]]</p>
<u>Notes</u>	<n> is saved in non-volatile memory per AT port over module reboot.

6.11. +CSSN Command: Supplementary Service Notification

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u> AT+CSSN=?</p>	<p><u>Response</u> +CSSN: (list of supported <n>s), (list of supported <m>s) OK</p>
<i>Read command</i>	
<p><u>Syntax</u> AT+CSSN?</p>	<p><u>Response</u> +CSSN: <n>,<m> OK</p>
<i>Write command</i>	
<p><u>Syntax</u> AT+CSSN=[<n>[,<m>]]</p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <n> 0 Disable +CSSI result code presentation status to the TE 1 Enable +CSSI result code presentation status to the TE <m> 0 Disable +CSSU result code presentation status to the TE 1 Enable +CSSU result code presentation status to the TE</p>
<i>Unsolicited Notification</i>	<p><u>Response</u> +CSSI : <code1>[,<index>] +CSSU: <code2>[<index> [,<number>,<type>]]</p> <p><u>Parameters</u> <code1> 0 Unconditional call forwarding is active 1 Some of the conditional call forwarding are active 2 Call has been forwarded</p>

HL7518 and HL7548	
	<p>3 Call is waiting</p> <p>4 This is a CUG call (also <index> present)</p> <p>5 Outgoing calls are barred</p> <p>6 Incoming calls are barred</p> <p>7 CLIR suppression rejected</p> <p>8 Call has been deflected</p> <p><index> 0 – 9 Index</p> <p>10 No index (prefer to take from subscriber data)</p> <p><code2> 0 This is a forwarded call (MT call setup)</p> <p>1 This is a CUG call (<index> present) (MT call setup)</p> <p>6 Forward check SS message received (can be received whenever)</p> <p>8 Call has been connected with the other remote party in explicit call transfer operation (during an MT call setup)</p> <p>9 This is a deflected call (MT call setup)</p> <p>10 Additional incoming call forwarded</p> <p><number> String type phone of format specified by <type></p> <p><type> Type of address octet in Integer format</p>
Notes	<n> and <m> are saved in non-volatile memory per AT port over module reboot.

6.12. +CPLS Command: Select Preferred PLMN List

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CPLS=?</p>	<p><u>Response</u> +CPLS: (list of supported <cpls_list>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CPLS?</p>	<p><u>Response</u> +CPLS: <cpls_list> OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CPLS= [<cpls_list>]</p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameter</u> <cpls_list> 0 User controlled PLMN selector with access technology EFPLMNwAcT, but iff not found in the SIM/UICC, then the PLMN preferred list is EFPLMNsel</p> <p>1 Operator controlled PLMN selector with access technology EFOPLMNwAcT</p> <p>2 HPLMN selector with access technology EFHPLMNwAcT</p>

6.14. +CEMODE Command: UE Modes of Operation for EPS

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CEMODE=?	<u>Response</u> +CEMODE: (list of supported <mode> s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CEMODE?	<u>Response</u> +CEMODE: <mode> OK
<i>Write command</i>	
<u>Syntax</u> AT+CEMODE= [<mode>]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameter</u> <mode> Indicates mode of operation <u>0</u> PS mode 2 of operation 1 CS/PS mode 1 of operation 2 CS/PS mode 2 of operation 3 PS mode 1 of operation
<u>Notes</u>	<mode> is saved in non-volatile memory over module reboot.

>> 7. Phone Book Management

7.1. +CPBF Command: Find Phonebook Entries

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CPBF=?</p>	<p><u>Response</u> +CPBF: [<nlength>],[<tlength>],[<glength>],[<slength>],[<elength>] OK</p> <p>or</p> <p>+CME ERROR: <err></p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CPBF= <findtext></p>	<p><u>Response</u> [+CPBF:<index1>,<number>,<type>,<text>,<hidden>],[<group>],[<adnumber>] [,<adtype>],[<secondtext>],[<email>]] OK</p> <p>or</p> <p>+CME ERROR: <err></p> <p><u>Parameters</u> <index1>, <index2>, <index> Integer type values in the range of location numbers of phonebook memory</p> <p><number> String type phone number of format <type></p> <p><type> Type of address octet in integer format</p> <p><text> String type field of maximum length <tlength>; character set as specified by command +CSCS</p> <p><group> String type field of maximum length <glength>; character set as specified by command +CSCS</p> <p><adnumber> String type phone number of format <adtype></p> <p><adtype> Type of address octet in integer format</p> <p><secondtext> String type field of maximum length <slength>; character set as specified by command +CSCS</p> <p><email> String type field of maximum length <elength>; character set as specified by command +CSCS</p> <p><nlength> Integer type value indicating the maximum length of field <number></p> <p><tlength> Integer type value indicating the maximum length of field <text></p>

HL7518 and HL7548	
	<p><glength> Integer type value indicating the maximum length of field <group></p> <p><slength> Integer type value indicating the maximum length of field <secondtext></p> <p><elength> Integer type value indicating the maximum length of field <email></p> <p><hidden> Indicates if the entry is hidden or not 0 Phonebook entry not hidden 1 Phonebook entry hidden</p>
<u>Notes</u>	Execution command returns phonebook entries (from the current phonebook memory storage selected with +CPBS).

7.2. +CPBR Command: Read Current Phonebook Entries

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CPBR=?</p>	<p><u>Response</u> +CPBR: (list of supported <index>es),[<nlength>],[<tlength>],[<glength>],[<alength>],[<slength>],[<elength>] OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CPBR= <index1> [,<index2>]</p>	<p><u>Response</u> [+CPBR: <index1>,<number>,<type>,<text>[,<hidden>][,<group>][,<adnumber>][,<adtype>][,<secondtext>][,<email>]]][...] OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <index1>, <index2>, <index> Integer type values in the range of location numbers of phonebook memory</p> <p><number> String type phone number of format <type></p> <p><type> Type of address octet in integer format</p> <p><text> String type field of maximum length <tlength></p> <p><hidden> Indicates if the entry is hidden or not – only available if a UICC with an active USIM application is present 0 Phonebook entry not hidden 1 Phonebook entry hidden</p> <p><group> String type field of maximum length <glength></p>

HL7518 and HL7548	
	<p><adnumber> String type phone number of format <adtype></p> <p><adtype> Type of address octet in integer format</p> <p><secondtext> String type field of maximum length <slength></p> <p><email> String type field of maximum length <elength></p> <p><nlength> Integer type value indicating the maximum length of field <number></p> <p><tlength> Integer type value indicating the maximum length of field <text></p> <p><glength> Integer type value indicating the maximum length of field <group></p> <p><alength> Integer type value indicating the maximum length of field <adnumber></p> <p><slength> Integer type value indicating the maximum length of field <secondtext></p> <p><elength> Integer type value indicating the maximum length of field <email></p>
<u>Notes</u>	<ul style="list-style-type: none"> Optional parameters <nlength>, <tlength>, <glength>, <alength>, <slength>, <elength> are only applicable for 3G UICC. Execution command returns phonebook entries in location number range <index1>...<index2> from the current phonebook memory storage selected with +CPBS.

7.3. +CPBS Command: Select Phonebook Memory Storage

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CPBS=?</p>	<p><u>Response</u> +CPBS: (list of supported <storage>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CPBS?</p>	<p><u>Response</u> +CPBS: <storage>[,<used>,<total>] OK</p> <p>or +CME ERROR:<err></p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CPBS= <storage> [,<password>]</p>	<p><u>Response</u> OK</p> <p>or +CME ERROR:<err></p>

HL7518 and HL7548	
	<p><u>Parameters</u></p> <p><storage> "FD" SIM/USIM fixdialling phonebook "LD" SIM/UICC last dialling phonebook (LD phonebook can't be deleted) "ON" SIM (or MT) own numbers (MSISDNs) list (reading of this storage may be available through +CNUM also) "SM" SIM/UICC phonebook (default) "BL" Blacklist phonebook (delete only) "EN" SIM emergency-call-codes phonebook (read only) "AP" Selected application phonebook "BN" SIM barred-dialling-number (EF_BDN) phonebook (only valid with PIN2) "SN" SIM service-dialling-number (EF_SDN) phonebook (read only)</p> <p><password> String type value representing the PIN2-code required when selecting PIN2 code locked <storage>s above</p> <p><used> Integer type value indicating the number of used locations in the selected memory</p> <p><total> Integer type value indicating the total number of locations in the selected memory</p>
<u>Notes</u>	Set command selects phonebook memory storage <storage>, which is used by other phonebook commands.

7.4. +CPBW Command: Write Phonebook Entry

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u> AT+CPBW=?</p>	<p><u>Response</u> +CPBW: (list of supported <index>es),[<nlength>],(list of supported <type>s),[<tlength>],[<glength>],[<alength>],[<slength>],[<elength> OK</p>
<i>Read command</i>	
<p><u>Syntax</u> AT+CPBW?</p>	<p><u>Response</u> +CPBW: <written_index> OK</p> <p>or +CPBW:-1 OK</p>

7.5. +PBREADY URC: Phonebook Ready

+PBREADY URC will be displayed when the phone book is ready for read and write operation on boot-up or upon insertion of a valid SIM card.

>> 8. SMS Commands

For other information regarding HL7518 and HL7548 SMS commands, refer to section 1.5 SMS Commands.

8.1. Parameters Definition

The following parameters are used in the subsequent clauses which describe all commands. The formats of integer and string types referenced here are defined in V.25ter.

The default values are for command parameters, not for result code parameters.

8.1.1. Message Storage Parameters

- <index> Integer type; value in the range of location numbers supported by the associated memory
- <mem1> String type; memory from which messages are read and/or deleted (by commands +CMGL, +CMGR and +CMGD); defined values are as follows:
- "BM" Broadcast message storage
 - "ME" ME message storage
 - "MT" Any of the storages associated with ME
 - "SM" (U)SIM message storage; default value
 - "TA" TA message storage
 - "SR" Status report storage
- <mem2> String type; memory to which writing and sending operations are made (commands Send Message from Storage +CMSS and Write Message to Memory +CMGW); refer <mem1> for defined values. Default value is "SM".
- <mem3> String type; preferred memory to which received SMSs are to be stored (unless forwarded directly to TE; refer command New Message Indications +CNMI); refer <mem1> for defined values; received CBMs are always stored in "BM" (or some manufacturer specific storage) unless directly forwarded to TE; received status reports are always stored in "SR" (or some manufacturer specific storage) unless directly forwarded to TE. Default value is "SM".
- <stat> Status of message in memory. Integer type in PDU mode, or string type in text mode. Available values are as follows:
- | | | |
|---|-----------------------|---|
| 0 | " <u>REC UNREAD</u> " | Received unread message (i.e. new message) |
| 1 | "REC READ" | Received read message |
| 2 | "STO UNSENT" | Stored unsent message (only applicable to SMSs) |
| 3 | "STO SENT" | Stored sent message (only applicable to SMSs) |
| 4 | "ALL" | All messages (only applicable to +CMGL command) |
- <total1> Integer type; total number of message locations in <mem1>
- <total2> Integer type; total number of message locations in <mem2>
- <total3> Integer type; total number of message locations in <mem3>
- <used1> Integer type; number of messages currently in <mem1>

<used2> Integer type; number of messages currently in <mem2>

<used3> Integer type; number of messages currently in <mem3>

8.1.2. Message Data Parameters

<ackpdu> RP-User-Data element of RP-ACK PDU; format is same as for <pdu> in case of SMS, but without SC address field and parameter shall be bounded by double quote characters like a normal string type parameter.

<alpha> String type alphanumeric representation of <da> or <oa> corresponding to the entry found in MT phonebook; implementation of this feature is manufacturer specific; used character set should be the one selected with command +CSCS.

<cdata> Command data in text mode responses; ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)).

<ct> Command type in integer format (default value = 0).

<da> Address value in string format. BCD numbers (or GSM 7-bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS). Type of address is given by <toda>.

<data> In the case of user data in text mode responses; format:

- if <dc> indicates that GSM 7-bit default alphabet is used and <fo> indicates that user data header indication is not set
 - if TE character set other than "HEX" (refer to command +CSCS); ME/TA converts GSM alphabet into current TE character set
 - if TE character set is "HEX": ME/TA converts each 7-bit character of GSM 7-bit default alphabet into two IRA character long hexadecimal number (e.g. character II (GSM 7-bit default alphabet 23) is presented as 17 (IRA 49 and 55))
- if <dc> indicates that 8-bit or UCS2 data coding scheme is used, or <fo> indicates that user data header indication is set: ME/TA converts each 8-bit octet into two IRA character long hexadecimal number (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65))

In the case of CBS: CBM Content of Message in text mode responses; format:

- if <dc> indicates that GSM 7-bit default alphabet is used
 - if TE character set other than "HEX" (refer to command +CSCS); ME/TA converts GSM alphabet into current TE character set
 - if TE character set is "HEX"; ME/TA converts each 7-bit character of the GSM 7-bit default alphabet into two IRA character long hexadecimal number
- if <dc> indicates that 8-bit or UCS2 data coding scheme is used; ME/TA converts each 8-bit octet into two IRA character long hexadecimal number

<length> Integer type value indicating the length of the actual TP data unit in octets in PDU mode. This is 140 characters long according to 8-bit GSM coding scheme.

In text mode, the maximum length of an SMS depends on the used coding scheme (160 characters if 7-bit).

<mid> CBM Message Identifier in integer format

<mn> TP-Message-Number in integer format

<mr> Message reference in integer format

<oa>	Originating address address value field in string format; BCD numbers (or GSM 7-bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS); type of address given by <tooa>
<page>	CBM Page Parameter bits 4-7 in integer format
<pages>	CBM Page Parameter bits 0-3 in integer format
<pdu>	GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format In the case of CBS, TPDU in hexadecimal format
<pid>	Protocol identifier in integer format. Default value is 0
<ra>	Recipient address address value in string format; BCD numbers (or GSM 7-bit default alphabet characters) are converted to characters of the currently selected TE character set (refer to command +CSCS); type of address is given by <tora>
<sca>	String value enclosed in quotes indicating the service center address. Note that BCD numbers are converted to characters; type of address is given by <tosca>
<scts>	Service centre time stamp in time-string format (refer to <dt>)
<sn>	CBM Serial Number in integer format
<st>	Status in integer format
<toda>	Type of address octet in integer format. Default value is <u>145</u> if the first character of <da> is "+"; otherwise, default value is 129
<tooa>	Originating address type of address octet in integer format (refer to <toda> for the default value)
<tora>	Recipient address type of address octet in integer format (refer to <toda> for the default value)
<tosca>	SC address type of address octet in integer format (refer to <toda> for the default value)
<vp>	Depending on SMS-SUBMIT <fo> setting: TP-Validity-Period either in integer format (default value = <u>167</u>) or in time-string format (refer to <dt>)
<vp>	Validity period in either integer format (default value = 167) or in time-string format depending on <fo> settings
<dc>	SMS Data Coding Scheme (default value = <u>0</u>), or Cell Broadcast Data Coding Scheme in integer format
<dt>	Discharge time in time-string format "yy/MM/dd,hh:mm:ss+zz" where the characters indicate year, month, day, hour, minutes, seconds and time zone. For example, May 6, 1994, 10:10 pm GMT+2 hours is equals to "94/05/06,22:10:00+08"
<fo>	First octet of SMS-DELIVER, SMS-SUBMIT (default value = 17), SMS-STATUS-REPORT, or SMS-COMMAND (default value = 2) in integer format depending on command or result code

8.2. +CMGD Command: Delete Message

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CMGD=?	<u>Response</u> +CMGD: (list of supported <index>es)[,(list of supported <delflag>s)] OK

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CMGD= <index> [,<delflag>]	<u>Response</u> OK or +CMS ERROR: <err> <u>Parameters</u> <delflag> Integer indicating multiple message deletion request 0 (or omitted) Delete the message specified in <index> 1 Delete all read messages from preferred message storage, leaving unread messages and stored mobile originated messages (whether sent or not) untouched 2 Delete all read messages from preferred message storage and sent mobile originated messages, leaving unread messages and unsent mobile originated messages untouched 3 Delete all read messages from preferred message storage, sent and unsent mobile originated messages leaving unread messages untouched 4 Delete all messages from preferred message storage including unread messages
<u>Notes</u>	Execution command deletes message from preferred message storage <mem1>, location <index>. If <delflag> is present and not set to 0 then the ME shall ignore <index> and follow the rules for <delflag> shown above.

8.3. +CMGF Command: Set Message Format

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CMGF=?	<u>Response</u> +CMGF: (list of supported <mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CMGF?	<u>Response</u> +CMGF: <mode> OK
<i>Write command</i>	
<u>Syntax</u> AT+CMGF= [<mode>]	<u>Response</u> OK or +CMS ERROR: err> <u>Parameters</u> <mode> 0 PDU mode (default when implemented) 1 Text mode
<u>Notes</u>	<mode> is saved in non-volatile memory per AT port over module reboot

8.4. +CMGL Command: List Messages

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CMGL=?	<u>Response</u> +CMGL: (list of supported <stat>s) OK
<i>Execute command</i>	
<u>Syntax</u> AT+CMGL [=<stat>]	<u>Response</u> If in text mode, command is successful and SMS-SUBMITs and/or SMS-DELIVERs: +CMGL: <index>,<stat>,<oa/da>,[<alpha>], [<scts>][,<tooa/toda>,<length>] <CR><LF><data>[<CR><LF> +CMGL: <index>,<stat>,<da/oa>,[<alpha>], [<scts>][,<tooa/toda>,<length>] <CR><LF><data> [...] If in text mode, command is successful and SMS-STATUS-REPORTs: +CMGL: <index>,<stat>,<fo>,<mr>,[<ra>], [<tora>], <scts>,<d-t>,<st>[<CR><LF> +CMGL: <index>,<stat>,<fo>,<mr>,[<ra>], [<tora>],<scts>,<d_t>,<st>[...] If in text mode, command is successful and SMS-COMMANDs: +CMGL: <index>,<stat>,<fo>,<ct> [<CR><LF> +CMGL: <index>,<stat>,<fo>,<ct>[...] If in text mode, command is successful and CBM storage: +CMGL : <index>,<stat>,<sn>,<mid>,<page>,<pages> <CR><LF><data>[<CR><LF> +CMGL : <index>,<stat>,<sn>,<mid>,<page>,<pages><CR><LF><data>[...] If in PDU mode and command is successful: +CMGR: <stat>,[<alpha>],<length><CR><LF><pdu> or +CMS ERROR: <err> <u>Parameters</u> For parameter information and values, refer to section 8.1 Parameters Definition.

8.5. +CMGR Command: Read Message

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CMGR=?	<u>Response</u> OK

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CMGR= <index>	<u>Response</u> If text mode (+CMGF=1), command is successful, and SMS-DELIVER: +CMGR: <stat>,<oa>,[<alpha>],<scts>[,<tooa>,<fo>,<pid>,<dcs>,<sca>,<tosca>,<length>]<CR><LF><data> if text mode (+CMGF=1), command is successful, and SMS-SUBMIT: +CMGR: <stat>,<da>,[<alpha>][,<toda>,<fo>,<pid>,<dcs>,[<vp>],<sca>,<tosca>,<length>]<CR><LF><data> if text mode (+CMGF=1), command is successful, and SMS-STATUS-REPORT: +CMGR: <stat>,<fo>,<mr>,[<ra>], [<tora>],<scts>,<d_t>,<st> if text mode (+CMGF=1), command is successful, and SMS-COMMAND: +CMGR: <stat>,<fo>,<ct>[,<pid>,[<mn>],[<da>],[<toda>],<length><CR><LF><cdata>] if text mode (+CMGF=1), command is successful, and CBM storage: +CMGR: <stat>,<sn>,<mid>,<dcs>,<page>,<pages><CR><LF><data> if PDU mode (+CMGF=0) and command is successful: +CMGR: <stat>,[<alpha>],<length><CR><LF><pdu> or +CMS ERROR: <err> <u>Parameters</u> For parameter information and values, refer to section 8.1 Parameters Definition.

8.6. +CMGS Command: Send Message

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CMGS=?	<u>Response</u> OK
<i>Write command</i>	
<u>Syntax</u> If text mode (+CMGF=1): AT+CMGS=<da> [,<toda>]<CR> text is entered <ctrl-Z/ESC> If PDU mode (+CMGF=0): AT+CMGS= <length><CR> PDU is given <ctrl-Z/ESC>	<u>Response</u> If text mode (+CMGF=1) and sending is successful: [+CMGS: <mr>[,<scts>]] OK if PDU mode (+CMGF=0) and sending is successful: [+CMGS: <mr>] OK or +CMS ERROR: <err>

HL7518 and HL7548	
	<p><u>Parameters</u> For parameter information and values, refer to section 8.1 Parameters Definition.</p>
<u>Notes</u>	<ul style="list-style-type: none"> The TA shall send a four-character sequence <CR><LF><greater_than><space> (IRA 13, 10, 62, 32) after command line is terminated with <CR>; after that PDU can be given from TE to ME/TA. The PDU shall be hexadecimal format (similarly as specified for <pdu>) and given in one line; ME/TA converts this coding into the actual octets of PDU. When the length octet of the SMSC address (given in the PDU) equals zero, the SMSC address set with command Service Centre Address +CSCA is used; in this case the SMSC Type-of-Address octet shall not be present in the PDU, i.e. TPDU starts right after SMSC length octet. Sending can be cancelled by giving <ESC> character. <ctrl-Z> must be used to indicate the ending of PDU. +CMGS: <mr>[,<scts>] is not available in +CMGS intermediate response as SMS is sent over IMS using 3GPP2 SMS PDU format and protocol.

8.7. +CMGW Command: Write Message to Memory

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u> AT+CMGW=?</p>	<p><u>Response</u> OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> If text mode (+CMGF=1): AT+CMGW[= <oa/da> ,<tooa/toda> ,<stat>]]<CR> text is entered <ctrl-Z/ESC></p> <p>If PDU mode (+CMGF=0): AT+CMGW= <length>[,<stat>] <CR> PDU is given <ctrl-Z/ESC></p>	<p><u>Response</u> +CMGW: <index> OK</p> <p>or +CMS ERROR: <err></p> <p><u>Parameters</u> For parameter information and values, refer to section 8.1 Parameters Definition.</p>
<u>Notes</u>	<ul style="list-style-type: none"> Execution command stores a message to memory storage <mem2>, and memory location <index> of the stored message is returned. By default, message status will be set to 'stored unsent', but parameter <stat> also allows other status values to be given. (ME/TA manufacturer may choose to use different default <stat> values for different message types.) Entering of PDU is done similarly as specified in command +CMGS.

8.8. +CMSS Command: Send Message from Storage

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CMSS=?	<u>Response</u> OK
<i>Write command</i>	
<u>Syntax</u> AT+CMSS= <index>[,<da> [,<tda>]]	<u>Response</u> If text mode (+CMGF=1) and sending is unsuccessful: +CMSS: <mr>[,<scts>] If PDU mode (+CMGF=0) and sending is successful: +CMSS: <mr> OK or +CMS ERROR: <err> <u>Parameters</u> For parameter information and values, refer to section 8.1 Parameters Definition.
<u>Notes</u>	<ul style="list-style-type: none"> • Execution command sends message with location value <index> from message storage <mem2> to the network (SMS-SUBMIT or SMS-COMMAND). If new recipient address <da> is given for SMS-SUBMIT, it shall be used instead of the one stored with the message. • Reference value <mr> is returned to the TE on successful message delivery. Optionally (when +CSMS <service> value is 1 and network supports the feature), <scts> is returned in text mode.

8.9. +CNMI Command: New Message Indication

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CNMI=?	<u>Response</u> +CNMI: (list of supported <mode>s), (list of supported <mt>s), (list of supported <bm>s), (list of supported <ds>es), (list of supported <bfr>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CNMI?	<u>Response</u> +CNMI: <mode>,<mt>,<bm>,<ds>,<bfr> OK

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> +CNMI=[<mode> [,<mt>,<bm> [,<ds>,<bfr>]]]]]</p>	<p><u>Response</u> OK</p> <p>or +CMS ERROR: <err></p> <p><u>Parameters</u></p> <p><mode> 0 Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.</p> <p>1 Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved. Otherwise forward them directly to the TE.</p> <p>2 Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.</p> <p><mt> 0 No indications are routed to the TE.</p> <p>1 Result code is sent when ME does not have any other display device other than the AT interface</p> <p>2 Acknowledgement command must be sent when +CSMS <service> = 1 and ME does not have any other display device other than the AT interface</p> <p>3 Acknowledgement command must be sent when +CSMS <service> = 1</p> <p><bm> 0 No CBM indications are routed to the TE.</p> <p>1 If CBM is stored into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CBMI: <mem>,<index></p> <p>2 New CBMs are routed directly to the TE using unsolicited result code: +CBM: <length><CR><LF><pdu> (PDU mode enabled); or +CBM: <sn>,<mid>,<dc>,<page>,<pages><CR><LF><data> (text mode enabled)</p> <p>3 Class 3 CBMs are routed directly to TE using unsolicited result codes defined in <bm>=2. If CBM storage is supported, messages of other classes result in indication as defined in <bm>=1</p> <p><ds> 0 No SMS-STATUS-REPORTs are routed to the TE.</p> <p>1 SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS: <length><CR><LF><pdu> (PDU mode enabled) or +CDS: <fo>,<mr>,<ra>,<tora>,<scts>,<dt>,<st> (text mode enabled)</p> <p>4 If SMS-STATUS-REPORT is stored in ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CDSI: <mem>,<index></p> <p><bfr> 0 TA buffer of unsolicited result codes defined within this command is flushed to the TE when <mode> = 1 – 3 is entered</p> <p>1 TA buffer of unsolicited result codes defined within this command is cleared when <mode> = 1 – 3 is entered</p>
<u>Notes</u>	<mode>, <mt>, <bm> and <ds> are saved in non-volatile memory over module reboot; URC is available on the port that executes the command.

8.10. +CSCB Command: Select Cell Broadcast Message Type

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CSCB=?	<u>Response</u> +CSCB: (list of supported <mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CSCB?	<u>Response</u> +CSCB: <mode>,<mids>,<dcss> OK
<i>Write command</i>	
<u>Syntax</u> AT+CSCB= [<mode> [,<mids>]]	<u>Response</u> OK or +CMS ERROR: <err> <u>Parameters</u> <mode> <u>0</u> Accepts messages that are defined in <mids> and <dcss> 1 Does not accept messages that are defined in <mids> and <dcss> <mids> String type; combinations of CBM message IDs (e.g. "0, 1, 5, 320-478, 922"). Default value is an empty string. The number of ranges in <mids> parameter string is limited to 6. Note that intervals are not allowed. <dcss> String type; all different possible combinations of CBM data coding schemes. Default value is an empty string.

8.11. +CSCA Command: Service Center Address

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CSCA=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+CSCA?	<u>Response</u> +CSCA: <sca>,<tosca> OK

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CSCA=<sca> [,<tosca>]	<u>Response</u> OK or +CMS ERROR: <err>
	<u>Parameters</u> For parameter information and values, refer to section 8.1 Parameters Definition.

8.12. +CSMP Command: Set Text Mode Parameters

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CSMP=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+CSMP?	<u>Response</u> +CSMP: <fo>,<vp>,<pid>,<dc> OK
<i>Write command</i>	
<u>Syntax</u> AT+CSMP=[<fo> [,<vp>[,<pid> [,<dc>]]]]	<u>Response</u> OK <u>Parameters</u> For parameter information and values, refer to section 8.1 Parameters Definition.

8.13. +CSMS Command: Select Message Service

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CSMS=?	<u>Response</u> +CSMS: (list of supported <service>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CSMS?	<u>Response</u> +CSMS: <service>,<mt>,<mo>,<bm> OK

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CPMS= <mem1> [,<mem2> [,<mem3>]]	<u>Response</u> +CPMS: <used1>,<total1>,<used2>,<total2>,<used3>,<total3> OK or +CMS ERROR: <err> <u>Parameters</u> For parameter information and values, refer to section 8.1 Parameters Definition.
<u>Notes</u>	<mem1>, <mem2> and <mem3> are saved in non-volatile memory over module reboot.

8.15. +CSDH Command: Show Text Mode Parameters

HL7518 and HL7548							
<i>Test command</i>							
<u>Syntax</u> AT+CSDH=?	<u>Response</u> +CSDH: (list of supported <show>s) OK						
<i>Read command</i>							
<u>Syntax</u> AT+CSDH?	<u>Response</u> +CSDH: <show> OK						
<i>Write command</i>							
<u>Syntax</u> AT+CSDH= [<show>]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameter</u> <table border="0"> <tr> <td><show></td> <td><u>0</u></td> <td>Do not show header values defined in commands +CSCA and +CSMP (<sca>, <tosca>, <fo>, <vp>, <pid> and <dc>) nor <length>, <toda> or <tooa> in +CMGL, +CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in text mode; for SMS-COMMANDs in +CMGR result code, do not show <pid>, <mn>, <da>, <toda>, <length> or <cdata></td> </tr> <tr> <td></td> <td>1</td> <td>Show values in result codes</td> </tr> </table>	<show>	<u>0</u>	Do not show header values defined in commands +CSCA and +CSMP (<sca>, <tosca>, <fo>, <vp>, <pid> and <dc>) nor <length>, <toda> or <tooa> in +CMGL, +CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in text mode; for SMS-COMMANDs in +CMGR result code, do not show <pid>, <mn>, <da>, <toda>, <length> or <cdata>		1	Show values in result codes
<show>	<u>0</u>	Do not show header values defined in commands +CSCA and +CSMP (<sca>, <tosca>, <fo>, <vp>, <pid> and <dc>) nor <length>, <toda> or <tooa> in +CMGL, +CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in text mode; for SMS-COMMANDs in +CMGR result code, do not show <pid>, <mn>, <da>, <toda>, <length> or <cdata>					
	1	Show values in result codes					

8.16. +XCMGS3GPP2 Command: Send 3GPP2 SMS Message

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+ XCMGS3GPP2=?	<u>Response</u> OK
<i>Write command</i> <u>Syntax</u> AT+ XCMGS3GPP2= <length> <message_type> <CR> PDU is given <ctrl-Z/ESC>	<u>Response</u> If sending is successful: OK If sending fails: +CMS ERROR: <err> <u>Parameter</u> <length> Indicates the number of total octets coded in the PDU to be given <message_type> 0 Invalid 1 Point to Point 2 Acknowledge 3 Broadcast
<u>Notes</u>	<ul style="list-style-type: none"> • Entered text should be formatted as follows: <ul style="list-style-type: none"> ▪ PDU should be in hexadecimal format and given in one continuous line; the ME/TA converts this coding into the actual octets of PDU. ▪ Sending can be called by giving the <ESC> character during input. ▪ <ctrl-Z> must be used to indicate the ending of PDU. • AT+CMGF has no impact on this command. • This command returns error when SMS over IP network option is not set.

8.17. +XCMT3GPP2 Command: Enable or Disable the 3GPP2 MT SMS URC

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+XCMT3GPP2 =?	<u>Response</u> +XCMT3GPP2: (list of supported <n>s) OK

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+XCMT3GPP2 =<n></p>	<p><u>Response</u> OK</p> <p>or +CMS ERROR: <err></p> <p><u>Parameter</u> <length> Indicates the number of total octets coded in the PDU to be given</p> <p><n> Type of 3GPP2 message 0 Disable URC 1 Enable URC</p>
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +XCMT3GPP2: <length><CR><LF><PDU data></p> <p><u>Parameters</u> <length> Indicates the number of total octets coded in the PDU to be given</p> <p><PDU data> PDU data in 3GPP2 format</p>
<p><u>Notes</u></p>	<p>If XCMT3GPP2 URC is enabled, then unsolicited result codes are buffered in the TA when the TA-TE link is reserved (e.g. in online data mode) and flushed to the TE after reservation. Otherwise, they are forwarded directly to the TE.</p>

9. Packet Domain Commands

For details about PDP context use, refer to section 1.4 PDP Context Usage.

9.1. +CGATT Command: PS Attach or Detach

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGATT=?	<u>Response</u> +CGATT: (list of supported <state>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CGATT?	<u>Response</u> +CGATT: <state> OK
<i>Write command</i>	
<u>Syntax</u> AT+CGATT= [<state>]	<u>Response</u> OK or ERROR <u>Parameters</u> <state> State of PS attachment <u>0</u> Detached <u>1</u> Attached

9.2. +CGACT Command: Activate or Deactivate PDP Context

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGACT=?	<u>Response</u> +CGACT: (list of supported <state>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CGACT?	<u>Response</u> +CGACT: <cid>, <state> OK

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CGACT= [<state> [,<cid> [,<cid> [...]]]	<u>Response</u> OK or ERROR <u>Parameters</u> <state> State of PDP context activation 0 Deactivated 1 Activated <cid> Numeric parameter which specifies a particular PDP context definition.
<u>Notes</u>	The number of PDP contexts that can be activated simultaneously depends on the subscriber's account. For example, Verizon APN VZWINTERNET can only be activated in one PDP context.

9.3. +CGANS Command: PDP Context Activation Manual Response

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGANS=?	<u>Response</u> +CGANS: (list of supported <response>s), (list of supported <L2P>s) OK
<i>Execute command</i>	
<u>Syntax</u> AT+CGANS= [<response> [,<L2P> ,<cid>]]]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <response> 0 Reject the request (default value if omitted) 1 Accept and request that the PDP context be activated <L2P> String parameter indicating the layer 2 protocol to be used (see +CGDATA) <cid> Numeric parameter that specifies a particular PDP context definition (see +CGDCONT and +CGDSCONT). Parameter <response> allows the TE to accept or reject the request.

HL7518 and HL7548	
<u>Notes</u>	<ul style="list-style-type: none"> Commands following the +CGANS command in the AT command line shall not be processed by the MT. If the <L2P> parameter value is unacceptable to the MT, the MT shall return an ERROR or +CME ERROR response. Otherwise, the MT issues the intermediate result code CONNECT and enters V.250 online data state. If no <cid> is given or if there is no matching context definition, the MT will attempt to activate the context using the values for PDP type and PDP address provided by the network, together with any other relevant information known to the MT. The other context parameters will be set to their default values. If the activation is successful, data transfer may proceed. Note that this is not the same as if the MT issues a +CGDATA (or +CGACT) command after receiving a +CRING unsolicited result code. +CGDATA (or +CGACT) does not command the MT to acknowledge the network request but rather to make a new request for context activation. The network request would be ignored.

9.4. +CGCMOD Command: Modify PDP Context

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGCMOD=?	<u>Response</u> +CGCMOD: (list of <cid>s associated with active contexts) OK
<i>Execute command</i>	
<u>Syntax</u> AT+CGCMOD= [<cid>[,<cid> [...]]]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameter</u> <cid> Numeric parameter which specifies a particular PDP context definition (see +CGDCONT and +CGDSCONT)

9.5. +CGTFT Command: Traffic Flow Template

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGTFT=?	<u>Response</u> +CGTFT: <PDP_type> , (list of supported <packet filter identifier>s), (list of supported <evaluation precedence index>s), (list of supported <source address and subnet mask>s), (list of supported <protocol number (ipv4) / next header (ipv6)>s), (list of supported <destination port range>s), (list of supported <source port range>s), (list of supported <ipsec security parameter index (spi)>s), (list of supported <type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>s), (list of supported <flow label (ipv6)>s), (list of supported <direction>s)

HL7518 and HL7548	
	[<CR><LF>+CGTFT: <PDP_type>, (list of supported <packet filter identifier>s), (list of supported <evaluation precedence index>s), (list of supported <source address and subnet mask>s), (list of supported <protocol number (ipv4) / next header (ipv6)>s), (list of supported <destination port range>s), (list of supported <source port range>s), (list of supported <ipsec security parameter index (spi)>s), (list of supported <type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>s), (list of supported <flow label (ipv6)>s), (list of supported <direction>s)[...]]
Read command	
Syntax AT+CGTFT?	Response +CGTFT: <cid>, <packet filter identifier>, <evaluation precedence index>, <source address and subnet mask>, <protocol number (ipv4) / next header (ipv6)>, <destination port range>, <source port range>, <ipsec security parameter index (spi)>, <type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>, <flow label (ipv6)>, <direction> [<CR><LF>+CGTFT: <cid>, <packet filter identifier>, <evaluation precedence index>, <source address and subnet mask>, <protocol number (ipv4) / next header (ipv6)>, <destination port range>, <source port range>, <ipsec security parameter index (spi)>, <type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask>, <flow label (ipv6)>, <direction> [...]]
Execute command	
Syntax AT+CGTFT= [<cid>],[<packet filter identifier>, <evaluation precedence index> [,<source address and subnet mask> [,<protocol number (ipv4) / next header (ipv6)> [,<destination port range> [,<source port range> [,<ipsec security parameter index (spi)> [,<type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask> [,<flow label (ipv6)>, <direction>]]]]]]]]	Response OK or ERROR Parameter <cid> Numeric parameter which specifies a particular PDP context definition (see +CGDCONT and +CGDSCONT) <packet filter identifier> Numeric parameter with value range from 1 to 16 <evaluation precedence index> Numeric parameter with value range from 0 to 255 <source address and subnet mask> String type given as a dot-separated numeric (0 – 255) parameter of the form "a1.a2.a3.a4.m1.m2.m3.m4" for IPv4 or "a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13. a14.a15.a16.m1.m2.m3.m4.m5.m6.m7.m8.m9.m10.m11.m12.m13.m14.m15.m16" for IPv6 <protocol number (ipv4) / next header (ipv6)> Numeric parameter with value range from 0 to 255 <destination port range> String type given as a dot-separated numeric (0 – 65535) parameter on the form 'f.t.' <source port range> String type given as a dot-separated numeric (0 – 65535) parameter on the form 'f.t.' <ipsec security parameter index (spi)> Numeric value in hexadecimal format with value range from 00000000 to FFFFFFFF <type of service (tos) (ipv4) and mask / traffic class (ipv6) and mask> String type given as a dot-separated numeric (0 – 255) parameter on the form 't.m.'

HL7518 and HL7548	
	<p><flow label (ipv6)> Numeric value in hexadecimal format with value range from 00000 to FFFFF. Valid for IPv6 only</p> <p><direction> Specifies the transmission direction in which the packet filter shall be applied</p> <p>1 Uplink</p> <p>2 Downlink</p> <p>3 Birectional (up and downlink; default if omitted)</p>
<u>Notes</u>	<ul style="list-style-type: none"> Some of the listed attributes above may coexist in a Packet Filter while others mutually exclude each other. For the list of possible combinations, refer to 3GPP TS 23.060. IPv6 is not supported in the HL7548.

9.6. +CGCLASS Command: GPRS Mobile Station Class

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u> AT+CGCLASS=?</p>	<p><u>Response</u> +CGCLASS: (list of supported <class>es) OK</p>
<i>Read command</i>	
<p><u>Syntax</u> AT+CGCLASS?</p>	<p><u>Response</u> +CGCLASS: <class> OK</p>
<i>Write command</i>	
<p><u>Syntax</u> AT+CGCLASS= [<class>]</p>	<p><u>Response</u> OK</p> <p>or ERROR</p> <p><u>Parameters</u> <class> Mode of operation "A" Class A "B" Class B "CG" Class C in GPRS mode "CC" Class C in circuit switched mode</p>
<u>Notes</u>	<class> is saved in non-volatile memory over module reboot.

9.7. +CGDCONT Command: Define PDP Context

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CGDCONT=?</p>	<p><u>Response</u> +CGDCONT: (range of supported <cid>s), <PDP_type>,,(list of supported <d_comp>s), (list of supported <h_comp>s), (list of supported <IPv4Addr Alloc>s), (list of supported <emergency_indication>s), (list of supported <PCSCF_discovery>s), (list of supported <IM_CN_Signalling_Flag_Ind>s)</p> <p>[<CR><LF>+CGDCONT: (range of supported <cid>s), <PDP_type>,,(list of supported <d_comp>s), (list of supported <h_comp>s), (list of supported <IPv4Addr Alloc>s), (list of supported <emergency_indication>s), (list of supported <PCSCF_discovery>s), (list of supported <IM_CN_Signalling_Flag_Ind>s)</p> <p>[...] OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CGDCONT?</p>	<p><u>Response</u> [+CGDCONT: <cid>, <PDP_type>, <APN>, <PDP_addr>, <d_comp>, <h_comp> [, <IPv4AddrAlloc>[, <emergency_indication>[, <PCSCF_discovery> [, <IM_CN_Signalling_Flag_Ind>]]]]]</p> <p>[<CR><LF>+CGDCONT: <cid>, <PDP_type>, <APN>, <PDP_addr>, <d_comp>, <h_comp> [, <IPv4AddrAlloc>[, <emergency_indication>[, <PCSCF_discovery> [, <IM_CN_Signalling_Flag_Ind>]]]]]</p> <p>[...] OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CGDCONT= [<cid> [, <PDP_type> [, <APN> [, <PDP_addr> [, <d_comp> [, <h_comp> [, <IPv4AddrAlloc >[, <emergency_ indication> [, <PCSCF_ discovery> [, <IM_CN_ Signalling_Flag_ Ind>]]]]]]]]]</p>	<p><u>Response</u> OK</p> <p>or ERROR</p> <p><u>Parameters</u> <cid> PDP Context Identifier. A numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands. The range of the permitted values (minimum value = 1) is returned by the test command.</p> <p><PDP_type> Packet Data Protocol type "IP" Internet Protocol "IPV6" Internet Protocol, version 6 (not supported in the HL7548) "IPV4V6" Virtual <PDP_type> introduced to handle dual IP stack UE capability (not supported in the HL7548)</p> <p><APN> Access Point Name String parameter which is a logical name that is used to select the GGSN or the external packet data network. If the value is null or omitted, then the subscription value will be requested.</p>

HL7518 and HL7548	
	<p><PDP_address> String parameter that identifies the MT in the address space applicable to the PDP. If the value is null or omitted then a value may be provided by the TE during the PDP startup procedure or, failing that, a dynamic address will be requested. The read command will continue to return the null string even if an address has been allocated during the PDP startup procedure. The allocated address may be read using the command +CGPADDR command.</p> <p>Note that IPv6 address obtained on LTE will be prefixed with a constant 8-byte address "FE.80.00.00.00.00.00.00" if the network has not provided any.</p> <p><d_comp> PDP data compression (applicable for SNDTCP only)</p> <p>0 Off (default if value if omitted)</p> <p>1 On (manufacturer preferred compression)</p> <p>2 V.42 bis</p> <p><h_comp> PDP header compression</p> <p>0 Off (default if value if omitted)</p> <p>1 On (manufacturer preferred compression)</p> <p>2 RFC1144 (applicable for SNDTCP only)</p> <p>3 RFC2507</p> <p>4 RFC3095 (applicable for PDCP only)</p> <p><IPv4AddrAlloc> Numeric parameter that controls how MT/TA requests to get IPv4 address information</p> <p>0 IPv4 address allocated through NAS signalling</p> <p>1 IPv4 address allocated through DHCP</p> <p><emergency_indication> Indicates whether the PDP context is for emergency bearer services or not</p> <p>0 PDP context is not for emergency bearer services</p> <p>1 PDP context is for emergency bearer services</p> <p><P-CSCF_discovery> Numeric parameter that influences how the MT/TA requests get the P-CSCF address</p> <p>0 Preference of P-CSCF address discovery not influences by +CGDCONT</p> <p>1 Preference of P-CSCF address discovery through NAS signalling</p> <p><IM_CN_Signalling_Flag_Ind> Numeric parameter used to indicate whether the PDP context is for IM CN subsystem related signaling only or not</p> <p>0 UE indicates that the PDP context is not for IM CN subsystem-related signaling only</p> <p>1 UE indicates that the PDP context is for IM CN subsystem-related signaling only</p>
Notes	<ul style="list-style-type: none"> • If the command is used only with the one parameter <cid>, it means that the corresponding PDP context becomes undefined. • The APN Control List (ACL) will only be checked if a USIM is inserted. Before performing context definition, it will check if the ACL-service is enabled and activated. If yes, all APNs from ACL of EF-ACL of the USIM will be read out and compared with the requested APN. <ul style="list-style-type: none"> ▪ If the requested APN is listed in the ACL, the context definition will be performed. ▪ If the requested APN is empty ("") and ACL contains "network provided APN", the context definition will also be requested. ▪ If the APN is not listed in the ACL the command returns error. ▪ If the ACL-service is not enabled or not activated in the USIM or a GSM-SIM is inserted the context definition will be performed without any checks. • Parameters are saved in non-volatile memory over module reboot. • IPv6 is not supported in the HL7548.

HL7518 and HL7548

- Generally, the maximum number of PDP contexts that can be defined is 11 (<cid> = 1 to 2 plus any 9 entries), but for the HL7518 with +HBHV: 2,0 (CID input protection), the maximum number of PDP contexts that can be defined is 10. Refer to section 1.4 PDP Context Usage for details.

9.8. +CGDSCONT Command: Define Secondary PDP Context

HL7518 and HL7548*Test command*Syntax

AT+CGDSCONT=?

Response

+CGDSCONT: (range of <cid>s),(list of <cid>s for defined primary contexts), <PDP_type>,,(list of supported <d_comp>s),(list of supported <h_comp>s),(list of supported <IM_CN_Signalling_Flag_Ind>s)
 [<CR><LF>+CGDSCONT: (range of <cid>s),(list of <cid>s for defined primary contexts), <PDP_type>,,(list of supported <d_comp>s),(list of supported <h_comp>s),(list of supported <IM_CN_Signalling_Flag_Ind>s)
 [...]]
 OK

*Read command*Syntax

AT+CGDSCONT?

Response

[+CGDSCONT: <cid>, <p_cid>, <d_comp>, <h_comp>
[,<IM_CN_Signalling_Flag_Ind>]]
 [<CR><LF>+CGDSCONT: <cid>, <p_cid>, <d_comp>,<h_comp>
[,<IM_CN_Signalling_Flag_Ind>]]
 [...]]
 OK

*Write command*Syntax

AT+CGDSCONT=
[<cid>,<p_cid>
[,<d_comp>
[,<h_comp>
[,<IM_CN_Signalling_Flag_Ind>]]]

Response

OK
 or
ERROR

Parameter

<cid> PDP Context Identifier. A numeric parameter that specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands. The range of the permitted values (minimum value = 1) is returned by the test command.

<p_cid> Primary PDP Context Identifier. Numeric parameter that specifies a particular PDP context definition which has been specified by +CGDSCONT. The parameter is local to the TE-MT interface. The list of permitted values is returned by the test command.

<d_comp> PDP data compression (applicable for SMDCP only)

- 0 Off (default value if omitted)
- 1 On (manufacturer preferred compression)
- 2 V.42 bis

HL7518 and HL7548	
	<p><h_comp> PDP header compression</p> <p>0 Off (default value if omitted)</p> <p>1 On (manufacturer preferred compression)</p> <p>2 RFC1144 (applicable for SMDCP only)</p> <p>3 RFC2507</p> <p>4 RFC3095 (applicable for PDCP only)</p> <p><IM_CN_Signalling_Flag_Ind> Numeric parameter used to indicate whether the PDP context is for IM CN subsystem related signaling only or not</p> <p>0 UE indicates that the PDP context is not for IM CN subsystem-related signaling only</p> <p>1 UE indicates that the PDP context is for IM CN subsystem-related signaling only</p>

9.9. +CGDATA Command: Enter Data State

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u></p> <p>AT+CGDATA=?</p>	<p><u>Response</u></p> <p>+CGDATA: (list of supported <L2P>s)</p> <p>OK</p>
<i>Execute command</i>	
<p><u>Syntax</u></p> <p>AT+CGDATA = [<L2P> [,<cid> [,<cid> [...]]]</p>	<p><u>Response</u></p> <p>CONNECT (followed by data transfer)</p> <p>or</p> <p>CME ERROR: <err></p> <p><u>Parameter</u></p> <p><L2P> String parameter that indicates the layer 2 protocol to be used between the TE and MT</p> <p>PPP Point-to-point protocol for a PDP such as IP</p> <p>M-OPT-PPP MS supports manufacturing specific protocol</p> <p>M-HEX MS supports manufacturing specific protocol</p> <p>M-RAW_IP MS supports manufacturing specific protocol</p> <p><cid> Numeric parameter which specifies a particular PDP context definition (see +CGDCONT and +CGDSCONT)</p>

9.10. +CGED Command: GPRS Cell Environment

HL7518 and HL7548																
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CGED=?</p>	<p><u>Response</u> +CGED: (list of supported <mode>s) OK</p>															
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CGED?</p>	<p><u>Response</u> +CGED: <mode> OK</p>															
<p><i>Execute command</i></p> <p><u>Syntax</u> AT+CGED= [<mode>]</p>	<p><u>Response</u> If UMTS is not supported: +CGED: Service-Cell: <MCC>,<MNC>,<LAC>,<CI>,<BSIC>,<AcT> Equivalent PLMNs : <MCC>,<MNC> <MCC>,<MNC> <arfcn>,<RxLevServ>,<RfChannels>,<Arfcn_ded>,<RxLevFull>,<RxLevSub>,<RxQualFull>,<RxQualSub>,<GSM-<ciphering>,<GPRS Ciphering Algorithm: GEA<gprs_ciphering>,<ms_txpwr>,<rx_acc_min>,<cbq>,<cba>,<c2_valid>,<cr_offset>,<tmp_offset>,<penalty_t>,<c1>,<c2>,<ch_type>,<ch_mode>,<txpwr>,<dtx_used>,<dtr_used>,<t3212>,<acc>,<t_adv>,<bs_pa_mfrms>,<dsc>,<rll>,<amr_acs>,<amr_cod_ul>,<amr_cod_dl>,<amr_c_i>,<BEP GMSK: <mean_bep_gmsk>,<cv_bep_gmsk>,<BEP 8PSK: <mean_bep_8psk>,<cv_bep_8psk>,<Neighbour Cell <n>:<MCC>,<MNC>,<LAC>,<CI>,<BSIC>,<arfcn>,<RxLev><C1_nc>,<C2_nc></p> <hr style="border: 1px solid red;"/> <p><i>Note:</i> <i>Neighbour cell content may be repeated up to 6 times.</i></p> <hr style="border: 1px solid red;"/> <p>GPRS Parameters: <GPRS_sup>,<RAC>,<Split_Pg_Cycle>,<NCO>,<NOM>,<T3192>,<Acc_Burst_type>,<DRX_Timer_Max>,<PBCCH>,<Ext_Measure_Order> <PSI1_r_per>,<si13_location>,<packet_psi_status>,<packet_si_status>,<ext_upl_tbf_supported>,<ccn_active>,<pfc_feat_supported> Coding Scheme: dl_sc: <dl_sc>,ul_sc: <ul_sc> <Count_LR>,<Count_HR>,<C_R_Hyst>,<C31>,<C32>,<Prior_Acc_Thr> OK</p> <p>or CME ERROR: <err></p> <p><u>Parameters</u></p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;"><mode></td> <td style="width: 5%; text-align: center;">0</td> <td style="width: 15%;">One shot dump</td> <td style="width: 65%;"></td> </tr> <tr> <td></td> <td style="text-align: center;">1</td> <td>Periodic refreshed dump</td> <td></td> </tr> <tr> <td></td> <td style="text-align: center;">2</td> <td>Stop periodic dump</td> <td></td> </tr> </table> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;"><MCC></td> <td style="width: 20%;">0 – 999</td> <td style="width: 65%;">3-digit mobile country code</td> </tr> </table>	<mode>	0	One shot dump			1	Periodic refreshed dump			2	Stop periodic dump		<MCC>	0 – 999	3-digit mobile country code
<mode>	0	One shot dump														
	1	Periodic refreshed dump														
	2	Stop periodic dump														
<MCC>	0 – 999	3-digit mobile country code														

HL7518 and HL7548

<MNC>	0 – 99	2-digit mobile network code
<LAC>	0h – FFFFh	2-octet location area code
<CI>	0h – FFFFh	2-octet cell identity
<BSIC>	0h – 3Fh	6-bit base station identify code
<AcT>	0	GSM
	1	GPRS
	2	EGPRS
	3	EGPRS_PCR
	4	EGPRS_EPCR
	5	UMTS (unused)
	6	DTM
	7	EGPRS_DTM
	8	Undefined
<arfcn>	0 – 1023	Absolute radio frequency channel number
<RfChannels>	Number of frequencies in MA	
	0	N.A.
	0x01	Single RF
<Arfcn_ded>	Single ARFCN of dedicated channel of first ARFCN of MA	
<RxLevFull>	0h – 3Fh	Received signal strength on serving cell, measured on all slots
<RxLevSub>	0h – 3Fh	Received signal strength on serving cell, measured on a subset of slots
<RxQualFull>	0 – 7	Received signal quality on serving cell, measured on all slots
<RxQualSub>	0 – 7	Received signal quality on serving cell, measured on a subset of slots
<ms_txpwr>	0 – 31	Maximum TX power level an MS may use when accessing the system until otherwise commanded
<rx_acc_min>	0 – 63	RXLEV-ACCESS-MIN
<cbq>	0 – 1	CELL_BAR_QUALIFY
<cba>	0 – 1	CELL_BAR_ACCESS
<cs_valid>	True if all parameter for calculation of c2 are available	
<cr_offset>	0 – 63	6-bit CELL_RESELECT_OFFSET
<tmp_offset>	0 – 7 (mapped to 0 – 70)	TEMPORARY_OFFSET
<penalty_t>	0 – 31	Penalty time

HL7518 and HL7548

<c1> Value of c1

<c2> Value of c2

<ch_type> Channel type of the current connection

0	INVALID_CHN_TYPE
1	TCH_F
2	TCH_F
3	SDCCH_4
4	SDCCH_8
5	TCH_H_H
6	TCH_F_M

<ch_mode> Channel mode of the current connection. Value = 0 – 255 (mapped to an internal value as detailed below)

0	MODE_SIG_ONLY
1	MODE_SPEECH_F
2	MODE_SPEECH_H
3	MODE_DATA_96_F
4	MODE_DATA_48_F
5	MODE_DATA_48_H
6	MODE_DATA_24_F
7	MODE_DATA_24_H
8	MODE_SPEECH_F_V2
9	MODE_SPEECH_F_V3
10	MODE_SPEECH_H_V2
11	MODE_SPEECH_H_V3
12	MODE_DATA_144_F

<txpwr> 0 – 31 5-bit transmit power level of the current connection

<dtx_used> 0 – 1 DTX used

<dtr_used> 0 – 1 DTX used

<t3212> 0 – 255 8-bit T3212 timeout value field coded as the binary representation of the timeout value for periodic updating in decihours

<acc> 0 – 65535 Access control class (RACH Control Parameters)

<t_adv> FFh Timing Advance (not used)

<bs_pa_mfrms> 0 – 7 (mapped to 2 – 9) BS_PA_MFRMS (multiframes period for transmission of PAGING REQUEST)

<amr_acs> AMR active codec

<amr_cod_dl> AMR codec used in DL

<amr_cod_ul> AMR codec used in UL

<amr_ci_i> AMR C/I in dB/2

<mean_bep_8psk> 0 – 31 MEAN_BEP_8PSK

HL7518 and HL7548

```

<cv_bep_8psk> 0 – 7 CV_BEP_8PSK

<mean_bep_gmsk> 0 – 31 MEAN_BEP_GMSK

<cv_bep_gmsk> 0 – 7 CV_BEP_GMSK

GPRS Parameters:
<GPRS_sup> 0 – 255 GPRS supported (in serving cell)

<RAC> 0 – 1 Routing Area Code

<Split_Pg_Cycle> 0 – 1 SPGC_CCH_SUP split pg_cycle on cch by network

<NCO> 0 – 3 NETWORK_CONTROL_ORDER (GPRS_Cell_Options)

<NOM> 0 – 3 NETWORK OPERATION MODE (GPRS_Cell_Options)

<T3192> 0 – 7 (mapped to 0 – 1500msec) Wait for release time of the TBF after
reception of the final block
0 500 msec
1 1000 msec
2 1500 msec
3 0 msec
4 80 msec
5 120 msec
7 200 msec

<Acc_Burst_type> 0 8-bit access burst
                  1 11-bit access burst

<DRX_Timer_Max> 0 – 7 DRX_TIMER_MAX

<PBCCH> PBCCH present

<Ext_Measure_Order> 0 – 3 EXT_MEASUREMENT_ORDER

<PSI1_r_per> 0 – 15 (mapped to 1 – 16) PSI1_REPEAT_PERIOD

<si14_location> "BCCH_NORM"
                 "BCCH_EXT"
                 "NO_BCCH_TYPE"

<packet_psi_status> 0 – 1

<packet_si_status> 0 – 1

<ext_upl_tbf_supported> 0 – 1

<ccn_active> 0 – 1

<pfc_feat_supported> 0 – 1

```

HL7518 and HL7548	
	<p><dl_sc>, <ul_sc> Current modulation and coding scheme of downlink <dl_sc> or uplink <ul_sc></p> <p>NB_CS_1 NB_CS_2 NB_CS_3 NB_CS_4 NB_MCS_1 NB_MCS_2 NB_MCS_3 NB_MCS_4 NB_MCS_5 NB_MCS_6 NB_MCS_7 NB_MCS_8 NB_MCS_9 NB_MCS_5_7 NB_MCS_6_9 AB_8 AB_11 AB_11_E</p> <p><Count_LR> 0 – 63 PSI_COUNT_LR</p> <p><Count_HR> 0 – 15 (mapped to 1 – 16) PSI_COUNT_HR</p> <p><C_R_Hyst> 0 – 7 CELL-RESELECT-HYSTERESIS</p> <p><C1> Integer value of c1</p> <p><C2> Integer value of c2</p> <p><C31> Integer value of c31</p> <p><C32> Integer value of c32</p> <p><Prior_Acc_Thr> 0 – 7 Priority_ACCESS_THR</p>
<u>Notes</u>	This command returns a dump of the cell environment, either as a one-shot dump or as a periodic refreshed dump (5 seconds each), dependent on the command parameter <mode>.

9.11. +CGEREP Command: Packet Domain Event Reporting

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGEREP=?	<p><u>Response</u> +CGEREP: (list of supported <mode>s),(list of supported <bfr>s) OK</p>

HL7518 and HL7548	
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CGEREP?</p>	<p><u>Response</u> +CGEREP: <mode>, <bfr> OK</p> <p>or ERROR</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CGEREP= [<mode>[,<bfr>]]</p>	<p><u>Response</u> OK</p> <p>or ERROR</p> <p><u>Parameters</u></p> <p><mode> <u>0</u> Buffer unsolicited result codes in the MT; if MT result code buffer is full, the oldest ones can be discarded. No codes are forwarded to the TE.</p> <p> 1 Discard unsolicited result codes when MT-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE</p> <p> 2 Buffer unsolicited result codes in the MT when MT-TE link is reserved (e.g. in on-line data mode) and flush them to the TE when MT-TE link becomes available; otherwise forward them directly to the TE</p> <p><bfr> <u>0</u> MT buffer of unsolicited result codes defined within this command is cleared when <mode> 1 or 2 is entered</p> <p> 1 MT buffer of unsolicited result codes defined within this command is flushed to the TE when <mode> 1 or 2 is entered (OK response shall be given before flushing the codes)</p>
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u></p> <p>+CGEV: NW DETACH The network has forces a PS detach</p> <p>+CGEV: NW CLASS <class> The network has forced a change of MT class</p> <p>+CGEV: ME CLASS <class> The mobile termination has forced a change of MT class</p> <p>+CGEV: ME PDN ACT <cid>[,<reason>] The mobile termination has activated a context</p> <p>+CGEV: NW ACT <p_cid>, <cid>, <event_type> The network has activated a context</p> <p>+CGEV: ME ACT <p_cid>, <cid>, <event_type> The network has responded to an ME initiated context activation</p> <p>+CGEV: NW PDN DEACT <cid> The network has deactivated a context</p> <p>+CGEV: ME PDN DEACT <cid> The mobile termination has deactivated a context</p> <p>+CGEV: NW DEACT <p_cid>, <cid>, <event_type> The network has deactivated a context</p> <p>+CGEV: ME DEACT <p_cid>, <cid>, <event_type> The network has responded to an ME initiated context deactivation request</p> <p>+CGEV: NW MODIFY <cid>, <change_reason>, <event_type> The network has modified a context</p> <p>+CGEV: ME MODIFY <cid>, <change_reason>, <event_type> The mobile termination has modified a context</p>

HL7518 and HL7548	
	<p><u>Parameters</u></p> <p><reason> 0 IPv4 only allowed 1 IPv6 only allowed (not supported in the HL7548) 2 Single address bearers only allowed 3 Single address bearers only allowed and MT initiated context activation for a second address type bearer was not successful</p> <p><event_type> 0 Informational event 1 Information request, acknowledgement required</p> <p><change_reason> 0 TFT only changed 1 QoS only changed 2 Both TFT and QoS changed</p>
<u>Notes</u>	<mode> is saved in non-volatile memory over module reboot; URC is available on the port that executes the command.

9.12. +CGAUTO Command: Automatic Response

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u> AT+CGAUTO=?</p>	<p><u>Response</u> +CGAUTO: (list of supported <n>s) OK</p>
<i>Read command</i>	
<p><u>Syntax</u> AT+CGAUTO?</p>	<p><u>Response</u> +CGAUTO: <n> OK</p>
<i>Read command</i>	
<p><u>Syntax</u> AT+CGAUTO= [<n>]</p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameter</u></p> <p><n> 0 Turn off automatic response for packet domain only 1 Turn on automatic response for packet domain only 2 Modem compatibility mode, packet domain only 3 Modem compatibility mode, packet domain and circuit switched calls 4 Turn on automatic negative response for packet domain only</p>
<u>Notes</u>	<ul style="list-style-type: none"> When the +CGAUTO=1 command is received, the MT shall attempt to perform a PS attach if it is not already attached. <n> is saved in non-volatile memory over module reboot

9.13. +CGPADDR Command: Show PDP Address

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CGPADDR=?</p>	<p><u>Response</u> +CGPADDR: (list of supported <cid>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CGPADDR= [<cid> ,<cid> [,...]]</p>	<p><u>Response</u> +CGPADDR: <cid>[,<PDP_addr_1>[,<PDP_addr_2>]] [<CR><LF> +CGPADDR: <cid>[,<PDP_addr_1>[,<PDP_addr_2>]]][...]] OK</p> <p><u>Parameters</u></p> <p><cid> a numeric parameter which specifies a particular PDP context definition (see the +CGDCONT and +CGDSCONT commands). If no <cid> is specified the addresses for all defined contexts are returned.</p> <p><PDP_addr_1>, <PDP_addr_2> String that identifies the MT in the address space applicable to the PDP. The address may be static or dynamic. For a static address, it will be the one set by the +CGDCONT and +CGDSCONT commands when the context was defined.</p> <p>For a dynamic address, it will be the one assigned during the last PDP context activation that used the context definition referred to by <cid>.</p> <p>Both <PDP_addr_1> and <PDP_addr_2> are omitted if none are available.</p> <p>Both <PDP_addr_1> and <PDP_addr_2> are included when both Ipv4 and Ipv6 addresses are assigned, with <PDP_addr_1> containing the IPv4 address and <PDP_addr_2> containing the IPv6 address.</p> <p>The string is given as dot-separated numeric (0 – 255) parameter of the form: a1.a2.a3.a4 for IPv4 and a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16 for IPv6.</p>
<u>Notes</u>	IPv6 is not supported in the HL7548.

9.14. +CGQMIN Command: Quality of Service Profile (Minimum)

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CGQMIN=?</p>	<p><u>Response</u> +CGQMIN: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s), (list of supported <peak>s), (list of supported <mean>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CGQMIN?</p>	<p><u>Response</u> +CGQMIN: <cid>, <precedence>, <delay>, <reliability>, <peak>, <mean> OK</p>

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CGQMIN= [<cid> [,<precedence> [,<delay> [,<reliability.> [,<peak> [,<mean>]]]]]]	<u>Response</u> OK or ERROR <u>Parameters</u> <cid> Numeric parameter that specifies a particular PDP context definition. Refer to the defined values under the +CGDCONT command. <precedence> Numeric parameter for the precedence class <delay> Numeric parameter for the delay class <reliability> Numeric parameter for the reliability class <peak> Numeric parameter for the peak throughput class <mean> Numeric parameter for the mean throughput class
<u>Notes</u>	If a value is omitted for a particular class then the value is considered to be unspecified.

9.15. +CGEQMIN Command: 3G Quality of Service Profile (Minimum)

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGEQMIN=?	<u>Response</u> +CGEQMIN: <PDP_type> , (list of supported <Traffic_class>es), (list of supported <Maximum_bitrate_UL>s), (list of supported <Maximum_bitrate_DL>s), (list of supported <Guaranteed_bitrate_UL>s), (list of supported <Guaranteed_bitrate_DL>s), (list of supported <Delivery_order>s), (list of supported <Maximum_SDU_size>s), (list of supported <SDU_error_ratio>s), (list of supported <Residual_bit_error_ratio>s), (list of supported <Delivery_of_erroneous_SDUs>s), (list of supported <Transfer_delay>s), (list of supported <Traffic_handling_priority>s) [(list of supported <Source_statistics_descriptor>s), (list of supported <Signalling_indication>s)] [<CR><LF> +CGEQMIN: <PDP_type> , (list of supported <Traffic_class>es), (list of supported <Maximum_bitrate_UL>s), (list of supported <Maximum_bitrate_DL>s), (list of supported <Guaranteed_bitrate_UL>s), (list of supported <Guaranteed_bitrate_DL>s), (list of supported <Delivery_order>s), (list of supported <Maximum_SDU_size>s), (list of supported <SDU_error_ratio>s), (list of supported <Residual_bit_error_ratio>s), (list of supported <Delivery_of_erroneous_SDUs>s), (list of supported <Transfer_delay>s), (list of supported <Traffic_handling_priority>s) [(list of supported <Source_statistics_descriptor>s), (list of supported <Signalling_indication>s)] [...] ERROR

HL7518 and HL7548	
	<p><Residual_bit_error_ratio> String parameter that indicates the target value for the undetected bit error ratio in the delivered SDUs. If no error detection is requested, Residual bit error ratio indicates the bit error ratio in the delivered SDUs. The value is specified as 'mEe'.</p> <p><Delivery_of_erroneous_SDUs> Numeric parameter that indicates whether SDUs detected as erroneous shall be delivered or not</p> <p>0 No 1 Yes 2 No detect</p> <p><Transfer_delay> Numeric parameter that indicates the targeted time between request to transfer an SDU at one SAP to its delivery at the other SAP, in milliseconds</p> <p><Traffic_handling_priority> Numeric parameter that specifies the relative importance for handling of all SDUs belonging to the UMTS bearer compared to the SDUs of other bearers</p> <p><Source_Statistics_Descriptor> Supported in R7 P S a numeric parameter that specifies characteristics of the source of the submitted SDUs for a PDP context. This parameter should be provided if the Traffic class is specified as conversational or streaming</p> <p>0 Characteristics of SDUs is unknown 1 Characteristics of SDUs correspond to a speech source</p> <p><Signalling_Indication> Supported in R7 P S a numeric parameter used to indicate content of submitted SDUs for a PDP context. This parameter should be provided if the Traffic class is specified as interactive</p> <p>0 PDP context is not optimized 1 PDP context is optimized</p> <p><PDP_type> Refer to +CGDCONT and +CGDSCONT commands.</p>
<u>Notes</u>	If a value is omitted for a particular class then the value is considered to be unspecified.

9.16. +CGQREQ Command: Request Quality of Service Profile

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGQREQ=?	<u>Response</u> +CGQREQ: <PDP_type> , (list of supported <precedence> s), (list of supported <delay> s), (list of supported <reliability> s), (list of supported <peak> s), (list of supported <mean> s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CGQREQ?	<u>Response</u> +CGQREQ: <cid> , <precedence> , <delay> , <reliability> , <peak> , <mean> OK

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CGQREQ = [<cid> [,<precedence> [,<delay> [,<reliability> [,<peak> [,<mean>]]]]]]	<u>Response</u> OK or ERROR <u>Parameters</u> <cid> Numeric parameter that specifies a particular PDP context definition. <precedence> Numeric parameter that specifies the precedence class <delay> Numeric parameter that specifies the delay class <reliability> Numeric parameter that specifies the reliability class <peak> Numeric parameter that specifies the peak throughput class <mean> Numeric parameter that specifies the mean throughput class.
<u>Notes</u>	<ul style="list-style-type: none"> This command allows the TE to specify a Quality of Service Profile that is used when the MT sends an Activate PDP Context Request message to the network If a value is omitted for a particular class then the value is considered to be unspecified

9.17. +CGEQREQ Command: 3G Request Quality of Service Profile

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGEQREQ=?	<u>Response</u> +CGEQREQ: <PDP_type> , (list of supported <Traffic_class>es), (list of supported <Maximum_bitrate_UL>s), (list of supported <Maximum_bitrate_DL>s), (list of supported <Guaranteed_bitrate_UL>s), (list of supported <Guaranteed_bitrate_DL>s), (list of supported <Delivery_order>s), (list of supported <Maximum_SDU_size>s), (list of supported <SDU_error_ratio>s), (list of supported <Residual_bit_error_ratio>s), (list of supported <Delivery_of_erroneous_SDUs>s), (list of supported <Transfer_delay>s), (list of supported <Traffic_handling_priority>s) [(list of supported <Source_statistics_descriptor>s), (list of supported <Signalling_indication>s)] [<CR><LF>+CGEQREQ: <PDP_type>, (list of supported <Traffic_class>es), (list of supported <Maximum_bitrate_UL>s), (list of supported <Maximum_bitrate_DL>s), (list of supported <Guaranteed_bitrate_UL>s), (list of supported <Guaranteed_bitrate_DL>s), (list of supported <Delivery_order>s), (list of supported <Maximum_SDU_size>s), (list of supported <SDU_error_ratio>s), (list of supported <Residual_bit_error_ratio>s), (list of supported <Delivery_of_erroneous_SDUs>s), (list of supported <Transfer_delay>s), (list of supported <Traffic_handling_priority>s) [(list of supported <Source_statistics_descriptor>s), (list of supported <Signalling_indication>s)][...]

HL7518 and HL7548	
	<p><Residual_bit_error_ratio> String parameter that indicates the target value for the undetected bit error ratio in the delivered SDUs. If no error detection is requested, Residual bit error ratio indicates the bit error ratio in the delivered SDUs. The value is specified as 'mEe'.</p> <p><Delivery_of_erroneous_SDUs> Numeric parameter that indicates whether SDUs detected as erroneous shall be delivered or not</p> <p>0 No 1 Yes 2 No detect</p> <p><Transfer_delay> Numeric parameter that indicates the targeted time between request to transfer an SDU at one SAP to its delivery at the other SAP, in milliseconds</p> <p><Traffic_handling_priority> Numeric parameter that specifies the relative importance for handling of all SDUs belonging to the UMTS bearer compared to the SDUs of other bearers</p> <p><Source_Statistics_Descriptor> Supported in R7 P S a numeric parameter that specifies characteristics of the source of the submitted SDUs for a PDP context. This parameter should be provided if the Traffic class is specified as conversational or streaming</p> <p>0 Characteristics of SDUs is unknown 1 Charactersitics of SDUs correspond to a speech source</p> <p><Signalling_Indication> Supported in R7 P S a numeric parameter used to indicate content of submitted SDUs for a PDP context. This parameter should be provided if the Traffic class is specified as interactive</p> <p>0 PDP context is not optimized 1 PDP context is optimized</p> <p><PDP_type> Refer to +CGDCONT and +CGDSCONT commands.</p>
<u>Notes</u>	If a value is omitted for a particular class then the value is considered to be unspecified.

9.18. +CGEQNEG Command: 3G Negotiated Quality of Service Profile

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGEQNEG=?	<u>Response</u> +CGEQNEG: (list of <cid>s associated with active contexts)
<i>Write command</i>	
<u>Syntax</u> AT+CGEQNEG= [<cid>,<cid> [,...]]	<u>Response</u> +CGEQNEG: <cid>,<Traffic class>,<Maximum bitrate UL>, <Maximum bitrate DL>,<Guaranteed bitrate UL>,<Guaranteed bitrate DL>, <Delivery order>,<Maximum SDU size>,<SDU error ratio>,<Residual bit error ratio>, <Delivery of erroneous SDUs>,<Transfer delay>,<Traffic handling priority> [<CR><LF>+CGEQNEG: <cid>,<Traffic class>,<Maximum bitrate UL>, <Maximum bitrate DL>,<Guaranteed bitrate UL>,<Guaranteed bitrate DL>, <Delivery order>,<Maximum SDU size>,<SDU error ratio>,<Residual bit error ratio>, <Delivery of erroneous SDUs>,<Transfer delay>,<Traffic handling priority>[,...]]

HL7518 and HL7548

Parameters

<cid> numeric parameter which specifies a particular PDP context definition (see +CGDCONT and +CGDSCONT commands)

<Traffic_class> UMTS bearer service application type

- 0 Conversational
- 1 Streaming
- 2 Interactive
- 3 Background

<Maximum_bitrate_UL> Numeric parameter that indicates the maximum number of kbits/s delivered to UMTS (up-link traffic) at a SAP.

<Maximum_bitrate_DL> Numeric parameter that indicates the maximum number of kbits/s delivered by UMTS (down-link traffic) at a SAP.

<Guaranteed_bitrate_UL> Numeric parameter that indicates the guaranteed number of kbits/s delivered to UMTS (up-link traffic) at a SAP (provided that there is data to deliver).

<Guaranteed_bitrate_DL> Numeric parameter that indicates the guaranteed number of kbits/s delivered by UMTS (down-link traffic) at a SAP (provided that there is data to deliver).

<Delivery_order> Numeric parameter that indicates whether the UMTS bearer shall provide in-sequence SDU delivery or not

- 0 No
- 1 Yes

<Maximum_SDU_size> Numeric parameter that indicates the maximum allowed SDU size in octets

<SDU_error_ratio> String parameter that indicates the target value for the fraction of SDUs lost or detected as erroneous. SDU error ratio is defined only for conforming traffic. The value is specified as 'mEe'.

<Residual_bit_error_ratio> String parameter that indicates the target value for the undetected bit error ratio in the delivered SDUs. If no error detection is requested, Residual bit error ratio indicates the bit error ratio in the delivered SDUs. The value is specified as 'mEe'.

<Delivery_of_erroneous_SDUs> Numeric parameter that indicates whether SDUs detected as erroneous shall be delivered or not

- 0 No
- 1 Yes
- 2 No detect

<Transfer_delay> Numeric parameter that indicates the targeted time between request to transfer an SDU at one SAP to its delivery at the other SAP, in milliseconds

<Traffic_handling_priority> Numeric parameter that specifies the relative importance for handling of all SDUs belonging to the UMTS bearer compared to the SDUs of other bearers

Notes

If a value is omitted for a particular class then the value is considered to be unspecified.

9.19. +CGREG Command: GPRS Network Registration Status

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+CGREG=?</p>	<p><u>Response</u> +CGREG: (list of supported <n>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+CGREG?</p>	<p><u>Response</u> +CGREG: <n>,<stat>[,<lac>,<ci>[,<AcT>,<rac>]] OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+CGREG= [<n>]</p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u></p> <p><n> 0 Disable network registration unsolicited result code 1 Enable network registration unsolicited result code +CGREG: <stat> 2 Enable network registration and location information unsolicited result code +CGREG: <stat>[,<lac>,<ci>[,<AcT>,<rac>]]</p> <p><stat> 0 Not registered, home network 1 Registered, home network 2 Not registered, but ME is currently searching for a new operator to register to 3 Registration denied 4 Unknown 5 Registered, roaming 8 Attached for emergency bearer services only (only applicable when <AcT>=2, 4, 5, 6)</p> <p><lac> String type; two-byte location area code in hexadecimal format</p> <p><ci> String type; four-byte E-UTRAN cell ID in hexadecimal format</p> <p><AcT> 7 E-UTRAN</p> <p><rac> String type; one-byte routing area code in hexadecimal format</p>
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +CGREG: <stat> +CGREG: <stat>[,<lac>,<ci>[,<AcT>,<rac>]]</p>
<p><u>Notes</u></p>	<p><n> is saved in non-volatile memory per AT port over module reboot</p>

9.20. +CGSMS Command: Select Service for MO SMS Messages

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CGSMS=?	<u>Response</u> +CGSMS: (list of currently available <service>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CGSMS?	<u>Response</u> +CGSMS: <service> OK
<i>Write command</i>	
<u>Syntax</u> AT+CGSMS= [<service>]	<u>Response</u> OK or ERROR <u>Parameter</u> <service> Indicates the service or service preference to be used 0 Packet Domain <u>1</u> Circuit switched 2 Packet Domain preferred (use circuit switched if GPRS is not available) 3 Circuit switched preferred (use packet domain if circuit switched is not available)
<u>Note</u>	+CGSMS is ignored for sending SMS over IMS as used in the Verizon network.

9.21. +CRLP Command: Select Radio Link Protocol

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+CRLP=?	<u>Response</u> +CRLP: (list of supported <iws>es),(list of supported <mws>es),(list of supported <T1>s),(list of supported <N2>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+CRLP?	<u>Response</u> +CRLP: <iws>,<mws>,<T1>,<N2> OK

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+CRLP=[<iws> [<mws>,<T1> [<N2>]]]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <iws> IWF to MS window size <mws> MS to IWF window size <T1> Acknowledgement timer (in units of 10 ms) <N2> Retransmission attempts

9.22. +XDNS Command: Dynamic DNS Request

HL7518 and HL7548									
<i>Test command</i>									
<u>Syntax</u> AT+XDNS=?	<u>Response</u> +XDNS: (list of supported <cid>s),(list of supported <mode>s) OK								
<i>Read command</i>									
<u>Syntax</u> AT+XDNS?	<u>Response</u> +XDNS: <cid>, <primary DNS>, <secondary DNS> [+XDNS: <cid>, <primary DNS>, <secondary DNS> [...]] OK								
<i>Write command</i>									
<u>Syntax</u> AT+XDNS=<cid>, <mode>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <cid> Context ID <mode> <table border="0"> <tr> <td>0</td> <td>Disable dynamic DNS request</td> </tr> <tr> <td>1</td> <td>Enable dynamic DNS request (IPv4)</td> </tr> <tr> <td>2</td> <td>Enable dynamic DNS request (IPv6)</td> </tr> <tr> <td>3</td> <td>Enable dynamic DNS request (IPv4v6)</td> </tr> </table>	0	Disable dynamic DNS request	1	Enable dynamic DNS request (IPv4)	2	Enable dynamic DNS request (IPv6)	3	Enable dynamic DNS request (IPv4v6)
0	Disable dynamic DNS request								
1	Enable dynamic DNS request (IPv4)								
2	Enable dynamic DNS request (IPv6)								
3	Enable dynamic DNS request (IPv4v6)								

HL7518 and HL7548	
	<p><primary DNS>, <secondary DNS> Strings representing the DNS addresses and given as dot-separated numeric (0 – 255) parameters in the form of: a1.a2.a3.a4 for IPv4, a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16 for IPv6 and a1.a2.a3.a4.a5.a6.a7.a8.a9.a10.a11.a12.a13.a14.a15.a16.a17.a18.a19.a20 for IPv4v6. (a1 to a4 here represents IPV4 and a5 to a20 represents IPv6) The DNS address is by default "0.0.0.0" which is not a valid address. Note that IPv6 address obtained on LTE will be prefixed with a constant 8-byte address "FE.80.00.00.00.00.00.00" if the network has not provided any.</p>
<u>Notes</u>	IPv6 is not supported in the HL7548.

9.23. +XCEDATA Command: Establish ECM Data Connection

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+XCEDATA=?	<u>Response</u> +XCEDATA: (list of supported <cid>s),(list of supported <ECM_id>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+XCEDATA?	<u>Response</u> +XCEDATA: [(mapped <cid> and <ECM_id> pair),][(mapped <cid> and <ECM_id> pair),] [(mapped <cid> and <ECM_id> pair)] OK
<i>Write command</i>	
<u>Syntax</u> AT+XCEDATA= <cid>,<ECM_id>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <cid> Numeric parameter which specifies a particular PDP context definition (see +CGDCONT and +CGDSCONT commands). Range of values is from 1 – 20. <ECM_id> Numeric parameter which specifies one of the three CDC EDM interfaces. These interfaces are supported as part of the datacard feature. Range of values is from 0 – 2.
<u>Notes</u>	This command is only available if CDC ECM is enabled.

9.25. +WPPP Command: PDP Context Authentication Configuration

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+WPPP=?</p>	<p><u>Response</u> +WPPP: (list of supported <Auth>s),[(list of supported <cid>s)] OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+WPPP?</p>	<p><u>Response</u> +WPPP: <Auth>,<cid>,<username>,<password> OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+WPPP= <Auth>,<cid>,<username>,<password></p>	<p><u>Response</u> OK</p> <p>or +CME ERROR <err></p> <p><u>Parameters</u></p> <p><Auth> Type of authentication supported</p> <p><u>0</u> None</p> <p><u>1</u> PAP</p> <p><u>2</u> CHAP</p> <p><cid> 1 – 20 PDP context identifier used in +CGDCONT. If omitted, the configuration is set for all PDP contexts.</p> <p><username> Login for the APN. String type, up to 30 characters</p> <p><password> Password for the APN. String type, up to 30 characters</p>
<p><u>Notes</u></p>	<ul style="list-style-type: none"> • +WPPP is available when SIM has been inserted and the pin code is entered. • Parameters are saved in non-volatile memory.
<p><u>Examples</u></p>	<p>AT+WPPP=? +WPPP: (0-2),(1-20) OK</p> <p>AT+WPPP=1,1,"myusername","mypassword" OK</p> <p>AT+WPPP? +WPPP: 1,1,"myusername","mypassword" OK</p>

>> 10. SIM Application Toolkit AT Commands

Note: All commands listed in this section are for the HL7548 only.

10.1. +STKPRO Command: Display List of Supported Proactive Commands

HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+STKPRO=?	<u>Response</u> +STKPRO: (01,05,16,17,18,19,20,21,32,33,34,35,36,37,38,40,52,53,64) OK
<i>Unsolicited Notification</i>	<u>Response</u> +STKPRO: <proactive_cmd>... Details of which are as follows: <ul style="list-style-type: none"> • +STKPRO: 01, <type> • +STKPRO: 05, <event_list> • +STKPRO: 16, <number>, <subaddr>, <type>, <alpha_1>, <icon_id1>, <alpha_2>, <icon_id2> • +STKPRO: 17, <ss_data>, <alpha>, <icon_id>, <ref_number> • +STKPRO: 18, <dcs>, <hex_string>, <alpha>, <icon_id>, <ref_number> • +STKPRO: 19, <alpha>, <icon_id>, <ref_number> • +STKPRO: 20, <alpha>, <icon_id>, <dtmf_string> • +STKPRO: 21, <URL>, <alpha>, <icon_id> • +STKPRO: 32, <tone>, <unit>, <interval>, <alpha>, <icon_id> • +STKPRO: 33, <type>, <dcs>, <hex_string>, <icon_id> • +STKPRO: 34, <type>, <dcs>, <hex_string>, <icon_id> • +STKPRO: 35, <type>, <dcs>, <hex_string>, <max_rsp_len>, <min_rsp_len>, <defaulttext>, <icon_id> • +STKPRO: 36, <type>, <alpha>, <item_id>, <total_items>, <item_text>, <next_action>, <default_item>, <icon_id>, <icon_id_list_element> • +STKPRO: 37, <type>, <alpha>, <item_id>, <total_items>, <item_text>, <next_action>, <icon_id>, <icon_id_list_element> • +STKPRO: 38, <type> • +STKPRO: 40, <dcs>, <hex_string>, <icon_id> • +STKPRO: 52, <type>, <alpha>, <icon_id> • +STKPRO: 53, <language> • +STKPRO: 64, <cmd_qualifier>, <alpha_id>, <icon_reference>, <dialing_number>, <reconnect_interval>, <reconnect_unit>, <idle_interval>, <idle_unit>, <bearer_type>, <bearer_parameter>, <buffer_size>, <login_dcs>, <login_text>, <password_dcs>, <password_text>, <transport_level>, <transport_port>, <sub_address>, <destination_address_type>, <destination_address>

HL7548Parameters

<alpha>, **<alpha_1>**, **<alpha_2>**, **<item_text>**, **<default text>** Text string

<dsc> Data coding scheme

<default_item> Default items (s. item_id)

<event_list> 04 User activity event
 05 Idle screen available event
 07 Language selection
 08 Browser termination event

<hex_string> String containing data in hexadecimal format

<icon_id>, **<icon_id1>**, **<icon_id2>**, **<icon_id_list_element>** List containing icon IDs. For example, **<icon_id1>**, **<icon_id2>**

<interval> Time duration in number of units

<item_id> Item identifier (identifier of item chosen, refer to GSM 11.14)

<language> 2-byte string indicating the language

<max rsp len> Maximum response length

<min rsp len> Minimum response length

<next_action> Next action

<number> Called party number

<proactive_cmd> 01 Refresh
 05 Set up event list
 16 Set up call
 17 Send SS
 18 Send USSD
 19 Send SMS
 20 Send DTMF
 21 Launch browser
 32 Play tone
 33 Display text
 34 Get inkey
 35 Get input
 36 Select item
 37 Set up menu
 38 Language setting
 40 Set up idle mode text
 52 Run AT command info
 53 Language notification
 64 Open channel
 129 End of the proactive session

HL7548	
<ref_number>	Reference number
<subaddr>	Called party subaddress
<ss_data>	Data string
<type>	Integer as command qualifier; possible value "4" means language
<tone>	<ul style="list-style-type: none"> 01 Dial tone 02 Call subscriber busy 03 Congestion 04 Radio path acknowledge 05 Radio path not available 06 Error/special information 07 Call waiting tone 08 Ringing tone 10 General beep 11 Positive acknowledgement tone 12 Negative acknowledgement or error tone
<total items>	Total items
<unit>	<ul style="list-style-type: none"> 0 Minutes 1 Seconds 2 Tenth of a second
<URL>	URL to be loaded
<reconnect_interval>	1 – 255 Duration for reconnect tries. The interval specifies the time interval of the duration in multiples of the time unit used. The value "0" indicated a non-existing duration object.
<reconnect_unit>	Used with <reconnect_interval> <ul style="list-style-type: none"> 0 Minutes 1 Seconds 2 Tenth of a second
<idle_interval>	1 – 255 Defines the duration when an idle connection is released automatically. If not present, the terminal will never release a connection automatically. A value of "0" indicates a non-existing duration object.
<idle_unit>	Used with <idle_interval> <ul style="list-style-type: none"> 0 Minutes 1 Seconds 2 Tenth of a second
<bearer_type>	<ul style="list-style-type: none"> 1 Circuit switched 2 Packet switched <u>3</u> Default 255 Invalid
<bearer_parameter>	Hex string that gived detailed information about the bearer type

HL7548																
	<p><buffer_size> Buffer the terminal shall allocate for channel data. The terminal may allocate less or more than this.</p> <p><login_dcs> Data coding scheme of the text string. Text strings may be coded in 7-bit, 8-bit or UCS2 (16-bit) for user authentication data if requested by the bearer connection.</p> <p><login_text> Specifies user authentication data is requested by the bearer connection. Coding based on <login_dcs>.</p> <p><password_dcs> Data coding scheme of the text string. Text strings may be coded in 7-bit, 8-bit or UCS2 (16-bit) for user authentication data if requested by the bearer connection.</p> <p><password_text> Specifies user authentication data if requested by the bearer connection. Coding based on <password_dcs>.</p> <p><transport_level> Transport layer protocol of the UICC/terminal connection</p> <table border="0"> <tr><td>1</td><td>UDP</td></tr> <tr><td>2</td><td>TCP</td></tr> <tr><td>255</td><td>Invalid; no transport protocol specified</td></tr> </table> <p><transport_port> Integer that specifies the transport port</p> <p><sub_address> Called party subaddress (for CS bearers only)</p> <p><dsc> Data coding scheme</p> <table border="0"> <tr><td><destination_address_type></td><td>33</td><td>IPv4 IP address</td></tr> <tr><td></td><td>87</td><td>IPv6 IP address; not supported in the HL7548</td></tr> <tr><td></td><td>255</td><td>Invalid; unknown address type</td></tr> </table> <p><destination_address> Hex string that specified the destination point of the connection</p>	1	UDP	2	TCP	255	Invalid; no transport protocol specified	<destination_address_type>	33	IPv4 IP address		87	IPv6 IP address; not supported in the HL7548		255	Invalid; unknown address type
1	UDP															
2	TCP															
255	Invalid; no transport protocol specified															
<destination_address_type>	33	IPv4 IP address														
	87	IPv6 IP address; not supported in the HL7548														
	255	Invalid; unknown address type														

10.2. +STKTR Command: Enter Response

HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+STKTR=?</p>	<p><u>Response</u> +STKTR: (01,05,16,17,18,19,20,21,32,33,34,35,36,37,38,40,52,53,64) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+STKTR=1,0</p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p>

HL7548	
<p><i>Execute command</i></p> <p><u>Syntax</u> AT+STKTR= <proactive_cmd> [,<result> ,<add_result> [,<last_cmd> [,<dc> [,<hexstring>]]</p>	<p><u>Response</u> Response depends on the proactive command</p> <ul style="list-style-type: none"> • +STKTR: 01, <result>, [<add_result>] • +STKTR: 05, <result> • +STKTR: 16, <result>, [<add_result>] • +STKTR: 17, <result>, <add_result> • +STKTR: 18, <result>, <add_result> • +STKTR: 19, <result>, <add_result> • +STKTR: 20, <result>,<add_result>] • +STKTR: 21, <result> • +STKTR: 32, <result>, <add_result> • +STKTR: 33, <result>, <add_result> • +STKTR: 34, <result>, <add_result>,0,<dc>,<hex_string> • +STKTR: 35, <result>, <add_result>,0,<dc>,<hex_string> • +STKTR: 36, <result>, <add_result>,0,<dc>,<hex_string> <hr/> <p><i>Note:</i> <i>The "0" stands for the parameter <last_cmd> which is obsolete but not yet removed.</i></p> <hr/> <ul style="list-style-type: none"> • +STKTR: 37, <result>, <add_result> • +STKTR: 38, <language as integer, e.g.28261> • +STKTR: 40, <result>, <add_result> • +STKTR: 52, <result>, <add_result> • +STKTR: 53, <result>, <add_result> <hr/> <p><i>Note:</i> <i>For general results (<result>) 32, 33, 38, 52, 53, 55, 56, 57 and 58, it is mandatory for the ME to provide a specific cause value as additional information. For others, additional information will be ignored.</i></p> <hr/> <ul style="list-style-type: none"> • +STKTR: 64, <result>,<add_result>,<last_cmd>,<buffer_size>, <open_channel_id>,<link_status>,<channel_status_state>, <bearer_description_type>,<bearer_description_params>, <address_type>,<address>] <p><u>Parameters</u></p> <p><add_result> Additional result</p> <p><dc> Data coding scheme</p> <p><hex_string> String in hexadecimal format</p> <p><last_cmd> Last command</p> <p><proactive_cmd> Decimal code that indicates the proactive command (refer to +STKPRO)</p> <p><result> 0 Command performed successfully 1 Command performed with partial comprehension 2 Command performed with missing information 3 Refresh performed with additional EFS read 4 Command performed successfully, but requested icon could not be displayed</p>

HL7548	
	<p>5 Command performed but modified by call control by SIM</p> <p>6 Command performed successfully, limited service</p> <p>7 Command performed with modification</p> <p>16 Proactive SIM session terminated by the user</p> <p>17 Backward move in the proactive SIM session requested by the user</p> <p>18 No response from user</p> <p>19 Help information required by the user</p> <p>20 USSD or SS transaction terminated by the user</p> <p>32 ME currently unable to process command</p> <p>33 Network currently unable to process the command</p> <p>34 User did not accept call set-up request</p> <p>35 User cleared down call before connection or network release</p> <p>36 Action in contradiction with the current timer state</p> <p>37 Interaction with call control by SIM, temporary problem</p> <p>38 Launch browser generic error code</p> <p>48 Command beyond ME's capabilities</p> <p>49 Command type not understood by ME</p> <p>50 Command data not understood by ME</p> <p>51 Command number not known by ME</p> <p>52 SS return error</p> <p>53 SMS RP ERROR</p> <p>54 Error, required values are missing</p> <p>55 USSD return error</p> <p>56 Multiple card command error (if class "a" is supported)</p> <p>57 Interaction with call control by SIM or MO, short message control by SIM</p> <p>58 Bearer independent protocol error (if class "e" is supported)</p> <p><buffer size> Size of the allocated buffer</p> <p><open_channel_id> 1 – 7 Channel ID 0 Invalid</p> <p><link_status> Specifies whether link is established or packet data service is activated 1 Enabled 0 Disabled</p> <p><channel_status_state> Link state 00 No further information can be given</p> <p><bearer_description_type> Bearer type which can be used to decode the bearer description value 01 Circuit switched UTA_SIM_TK_BEARER 02 Packet switched UTA_SIM_TK_BEARER (GPRS) 03 Terminal default UTA_SIM_TK_BEARER 255 Invalid bearer value; indicates an unknown bearer type which is not supported by the interface version</p> <p><bearer_description_params> Hexadecimal string; gives detailed information dependent on the bearer type</p> <p><address_type> Type of address 33 IPv4 IP address 87 IPv6 IP address; not supported in the HL7548</p>

10.4. +STKPROF Command: Terminal Profile Data

HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+STKPROF=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+STKPROF?	<u>Response</u> +STKPROF: <length>,<data> OK
<i>Write command</i>	
<u>Syntax</u> AT+STKPROF= <length>,<data>	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <length> Integer type; length of characters sent to TE in <data>. When set to "0", forces a reset to the default terminal profile stored in the ME <data> Terminal profile data in hexadecimal format

10.5. +STKCC Notification: SIM – APPL – TK Call Control

HL7548									
<i>Unsolicited Notification</i>	<u>Response</u> +STKCC: <cc_command>... Details of which are as follows: <ul style="list-style-type: none"> • +STKCC: 1,<res_val>,<alpha>,<number> • +STKCC: 2,<res_val>,<alpha>,<ss_code> • +STKCC: 3,<res_val>,<alpha>,<ussd_code> • +STKCC: 4,<res_val>,<alpha>,<ton_npi>,<sc_addr>,<ton_npi>,<dest_addr> <u>Parameters</u> <cc_command> <table style="margin-left: 20px;"> <tr><td>1</td><td>Set up call</td></tr> <tr><td>2</td><td>Send SS</td></tr> <tr><td>3</td><td>Send USSD</td></tr> <tr><td>4</td><td>Send SM</td></tr> </table> <res_val> Call control result value <alpha> Text string	1	Set up call	2	Send SS	3	Send USSD	4	Send SM
1	Set up call								
2	Send SS								
3	Send USSD								
4	Send SM								

HL7548	
	<p><number> Called party number</p> <p><ton_npi> Type of number and numbering plan</p> <p><sc_addr> Service centre address</p> <p><dest_addr> Destination address</p>

10.6. +STKCNF Notification: SIM – APPL – TK Proactive Session Status

HL7548	
<i>Unsolicited Notification</i>	<p><u>Response</u> +STKCNF: <proactive_cmd>,<result>,<add_result>,<sw1></p> <p><u>Parameters</u> <proactive_cmd> Decimal code that indicates the command that was finished (refer to +STKPRO)</p> <p><result> General result code</p> <p><add_result> Additional result code</p> <p><sw1> 0 Command to SIM was suppressed because of multiple terminal response or wrong client. For other responses, refer to GSM 11.11</p>

10.7. *PSSTKI Command: SIM Toolkit Interface Configuration

HL7548	
<i>Test command</i>	
<p><u>Syntax</u> AT*PSSTKI=?</p>	<p><u>Response</u> *PSSTKI: (List of supported <mode>s) OK</p>
<i>Read command</i>	
<p><u>Syntax</u> AT*PSSTKI?</p>	<p><u>Response</u> *PSSTKI: <mode> OK</p>

HL7548													
<p><i>Write command</i></p> <p><u>Syntax</u> AT*PSSTKI= <mode></p>	<p><u>Response</u> OK</p> <p><u>Parameter</u> <mode></p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%; text-align: right;">0</td> <td style="width: 10%;"></td> <td>No unsolicited result code will be sent to TE. TE won't send proactive command to the module.</td> </tr> <tr> <td style="text-align: right;">1</td> <td></td> <td>Manual mode. Any unsolicited result code will be sent to TE. TE has to acknowledge the +STKPRO notification.</td> </tr> <tr> <td style="text-align: right;">2</td> <td></td> <td>Auto acknowledge mode. Module answers to STK without TE; any unsolicited result code will be sent to TE.</td> </tr> <tr> <td style="text-align: right;">3</td> <td></td> <td>Auto acknowledge mode without sending unsolicited result code to TE.</td> </tr> </table>	0		No unsolicited result code will be sent to TE. TE won't send proactive command to the module.	1		Manual mode. Any unsolicited result code will be sent to TE. TE has to acknowledge the +STKPRO notification.	2		Auto acknowledge mode. Module answers to STK without TE; any unsolicited result code will be sent to TE.	3		Auto acknowledge mode without sending unsolicited result code to TE.
0		No unsolicited result code will be sent to TE. TE won't send proactive command to the module.											
1		Manual mode. Any unsolicited result code will be sent to TE. TE has to acknowledge the +STKPRO notification.											
2		Auto acknowledge mode. Module answers to STK without TE; any unsolicited result code will be sent to TE.											
3		Auto acknowledge mode without sending unsolicited result code to TE.											
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • The aim of this AT command is to configure the AT interface for SIM ToolKit support • This command is only supported when SIM card is present • The setting of <mode> will be kept after module reboots • If <mode>=0 (STK is deactivated) is set, the HL7548 will automatically restart before the new mode takes effect • <mode>=2 and <mode>=3 are only possible for a subset of STK proactive commands with user interaction: <ul style="list-style-type: none"> ▪ Where basic Yes/No responses are expected <ul style="list-style-type: none"> ▪ SEND SMS ▪ SEND SS ▪ SEND USSD ▪ SET UP CALL ▪ Where MMI action is needed and Yes/No responses are expected when done (for the display part) <ul style="list-style-type: none"> ▪ SET UP IDLE MODE TEXT ▪ DISPLAY TEXT ▪ PLAY TONE ▪ REFRESH 												
<p><u>Examples</u></p>	<pre><SIM card with STK application is inserted> AT*PSSTKI? // read current setting *PSSTKI: 0 OK AT*PSSTKI=? // check supported setting *PSSTKI: (0-3) OK At*psstki=1 // set STK manual mode OK +STKPRO: 33,0,4,"4D6F62696C65204F4B",0 at+stktr=33,0 OK At*psstki=0 // deactivate STK OK +SIM: 1 // module resets +KSUP: 0 +PBREADY</pre>												

HL7548

```

<Example: Manual Mode - proactive command SET UP MENU>
At*psstki=1           // activate STK manual mode
OK

// SET UP MENU
+STKPRO: 37,0,"GemXplore CASE",1,5,"User interaction",33,0,0
+STKPRO: 37,0,"GemXplore CASE",2,5,"Mobile interaction",33,0,0
+STKPRO: 37,0,"GemXplore CASE",3,5,"Network interaction",33,0,0
+STKPRO: 37,0,"GemXplore CASE",4,5,"Card interaction",33,0,0
+STKPRO: 37,0,"GemXplore CASE",128,5,"Common STK features",33,0,0

at+stktr=37,0         // Terminal Response for SET UP MENU successful
OK

+STKCNF: 37,0,255,145 // [ACK] SET UP MENU successful, session on-going
at+stkenv=211,2,0     // Select menu item #2

+STKCNF: 129, 0, 255, 144 // [ACK] session end
OK

<Example: Manual Mode - proactive command SELECT ITEM>
+STKPRO: 36,0,"Choose an item :",1,5,"Play tone",0,0,0,0
+STKPRO: 36,0,"Choose an item :",2,5,"Provide local info",0,0,0,0
+STKPRO: 36,0,"Choose an item :",3,5,"Refresh",0,0,0,0
+STKPRO: 36,0,"Choose an item :",4,5,"Timer management",0,0,0,0
+STKPRO: 36,0,"Choose an item :",5,5,"Launch browser",0,0,0,0

at+stktr=36,0,0,0,0,"03" // Terminal Response SELECT ITEM #3
OK

+STKCNF: 36,0,255,145 // [ACK] SELECT ITEM successful
+STKPRO: 36,0,"Choose an item :",1,2,"Init and file change",0,0,0,0
+STKPRO: 36,0,"Choose an item :",2,2,"Reset",0,0,0,0

at+stktr=36,0,0,0,0,"02" // Terminal Response SELECT ITEM #2
OK

+STKCNF: 36,0,255,145 // [ACK] SELECT ITEM successful

<Example: Manual Mode - proactive command REFRESH>
+STKPRO: 01,4,,0,,0 // proactive command: REFRESH - SIM reset
at+stktr=01,0       // Terminal Response for REFRESH
OK

+SIM: 0             // SIM reset
+STKCNF: 144, 0     // [ACK] Reset completed
+SIM: 1
+STKPRO: 33,0,4,"4D6F62696C65204F4B",0
+PBREADY

<Example: Automatic Mode - proactive command REFRESH>
At*psstki=2         // set STK automatic mode
OK

```

HL7548

```

//Proactive command REFRESH is received
+STKPRO: 01,4,,0,, 0 // proactive command: REFRESH - SIM reset
+SIM: 0 // SIM reset
+STKCNF: 144, 0 // [ACK] Reset completed
+SIM: 1
+STKPRO: 33,0,4,"4D6F62696C65204F4B",0
+PBREADY

<Example: Silent Mode - proactive command REFRESH>
At*psstki=3 // set STK silent mode
OK

+SIM: 0 // SIM reset
+SIM: 1
+PBREADY

<SIM card is not inserted>
at+cpin?
+CME ERROR: 10

AT*PSSTKI? // read current setting
+CME ERROR: 10

AT*PSSTKI=? // check supported setting
+CME ERROR: 10

AT*PSSTKI=1 // deactivate STK
+CME ERROR: 10

```



11. Protocol Specific Commands

11.1. Preliminary Comments

Sierra Wireless has developed a set of proprietary AT Commands to simplify data exchanges with different protocols:

- TCP
- UDP
- FTP
- HTTP
- HTTPS

11.2. IP Address Format in AT Commands

Unless specified elsewhere, the following format is used for IP address field in AT commands described in this chapter when using the HL7518 or the HL7548:

- IPv4 address: Consists of dot-separated decimal (0 – 255) parameters of the form a1.a2.a3.a4
- IPv6 address: Consists of colon-separated hexadecimal (0 – ffff) parameters of the form a1:a2:a3:a4:a5:a6:a7:a8 with abbreviations

11.3. Session ID

Protocol specific AT commands share the same range of session IDs. A session ID <session_id> is a unique number and ranges from 1 to 32.

11.4. Connection of PDP Contexts

A PDP connection will be started when a session becomes active (e.g. +KTCPCTX) and will only be stopped if all sessions are closed or all sessions request to stop the connection. In case of session errors, the PDP connection deactivation behavior can be configured by +KIPOPT with <option_id>=3. The default setting after the module boot-up is that a PDP connection is requested to stop only when a session is closed by an Internet AT command (e.g. +KTCPCLOSE).

11.5. Buffer Length of AT Commands

In AT command mode, the maximum length of an AT command is 1023 characters; any AT command input longer than this limit will produce an error response. If the maximum length of a parameter is not specified in this manual, it may vary but still bound by this limit.

In AT data mode, the terminal receive buffer size is limited to 32000 bytes; the terminal driver will stop the receive flow at 16000 bytes if hardware handshaking is used.

11.6. Parameter Format of AT Commands

Double quotation marks are optional in the parameter input of protocol specific AT commands.

If the AT command does not meet the following conditions, the AT parser will regard it as an error and will not go to the corresponding AT command handler. It will immediately return +CME ERROR: 3. This means that it will not process any action further or return any specific error code.

- If double quotation marks are used to enclose parameters, double quotation marks must appear at both the head and tail of the parameter.
- The total number of parameter input (including empty parameters) in the AT commands must be within the minimum and maximum required number of parameters.

11.7. Connection Configuration

11.7.1. +KCNXCFG Command: GPRS Connection Configuration

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KCNXCFG=?</p>	<p><u>Response</u> +KCNXCFG: (list of possible <cnx conf>s),"GPRS", (range of possible length of <apn>), (range of possible length of <login>), (range of possible length of <password>), <af>,<ip>,<dns1>,<dns2>,<ip_v6>,<dns1_v6>,<dns2_v6> OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KCNXCFG?</p>	<p><u>Response</u> +KCNXCFG: <cnx conf>, "GPRS", <apn>,<login>,<password>,<af>,<ip>,<dns1>,<dns2>,<ip_v6>,<dns1_v6>,<dns2_v6>],<state> [...] OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KCNXCFG= <cnx conf>, "GPRS",<apn> [,<login>] [,<password>] [,<af> [,<ip>] [,<dns1>] [,<dns2>]]]] [,<ip_v6>] [,<dns1_v6>] [,<dns2_v6>]]]]]]</p>	<p><u>Response</u> OK</p> <p><u>Parameters</u> <cnx conf> 1 – 5 (PDP context configuration) a numeric parameter which specifies a particular PDP context configuration</p> <p><apn> (Access Point Name) a string parameter (max size 63 bytes), logical name used to select the GGSN or the external packet data network.</p> <p><login> string type (max size 24 bytes), indicates the user name of the cnx</p> <p><password> string type (max size 24 bytes), indicates the password of the cnx</p>

HL7518 and HL7548	
	<p><af> Address family used for the connection.</p> <p><u>IPV4</u> IPv4 only IPV6 IPv6 only IPV4V6 IPv4 and IPv6</p> <p><ip> String type. If the mobile is supposed to work with a dynamic address, the value should be "0.0.0.0" or an empty string.</p> <p><dns1>, <dns2> String type. If the mobile is supposed to work with dynamic DNS addresses, the value should be "0.0.0.0" or an empty string.</p> <p><ip_v6> IPV6 String type. If the mobile is supposed to work with a dynamic address, the value should be "::" or an empty string.</p> <p><dns1_v6>, <dns2_v6> IPV6 String type. If the mobile is supposed to work with dynamic DNS addresses, the value should be "::" or an empty string.</p> <p><state> Connection state</p> <p>0 Disconnected 1 Connecting 2 Connected 3 Idle, down counting for disconnection 4 Disconnecting</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • This AT command is used to configure the bearer to be used for the future IP Services • By default, the IP and DNS address are dynamic (those values would be affected by the network during the PDP connection) • This connection will be used by the module to access to the IP services described on the following chapters. The AT+KCNXCFG command is only defined to set the current parameters. The defined connection will be automatically opened when needed by the IP services. (e.g. UDP service) • The use of IPV4 and/or IPV6 addresses is configured by PDP context configuration • <cnx cfg> values 1 to 5 corresponds to PDP context ID 1 to 5 respectively, e.g. <cnx cfg>=3 corresponds to CID=3 in +CGDCONT/+CGACT. • When the connection is up, the read command returns the actual values used by the connection interface.

11.7.2. +KCNXTIMER Command: Connection Timer Configuration

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KCNXTIMER =?</p>	<p><u>Response</u> +KCNXTIMER: (list of supported <cnx cnf>s),(list of supported <tim1>s),(list of supported <nbtrial>s),(list of supported <tim2>s) ,(list of supported <idletime>s) OK</p>

HL7518 and HL7548	
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KCNXTIMER ?</p>	<p><u>Response</u> +KCNXTIMER: <cnx cnf>,<tim1>,<nbtrial>,<tim2>,<idletime> [...] OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KCNXTIMER =<cnx cnf>[, <tim1>][, <nbtrial>],[<tim2>],[<idletime>]]]]</p>	<p><u>Response</u> OK</p> <p><u>Parameters</u> <cnx cnf> 1 – 5 (PDP context configuration) a numeric parameter which specifies a particular PDP context configuration</p> <p><tim1> 1 – 120s (default value = <u>30s</u>) If module fails to activate the PDP context, a timer of <tim1> will be started. When this timer expires, it will try to activate the PDP context again.</p> <p><nbtrial> Attempt times from 1 – 4 (default value = <u>2</u>) Module will try to activate the PDP context with max <nbtrial></p> <p><tim2> 0 – 300s (default value = <u>60s</u>) 0 Deactivated (connection will not close by itself) For client sockets, module will try to connect to the server within <tim2>s; if <tim2> expires, it will give up the connection.</p> <p><idletime> 0 – 1800s (default value = <u>30s</u>) When all sessions are closed, the idle timer starts with the idle time. When this timer expires, it will try to deactivate the PDP context. Before the timer expires, connecting any session will stop this timer and the PDP context is reused.</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u> This command will only have impact on TCP, UDP and FTP specific commands.</p>

11.7.3. +KCNXPROFILE Command: Current Profile Connection Configuration

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+ KCNXPROFILE =?</p>	<p><u>Response</u> +KCNXPROFILE: (list of possible <cnx cnf>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+ KCNXPROFILE?</p>	<p><u>Response</u> +KCNXPROFILE: <cnx cnf> OK</p>

HL7518 and HL7548	
<i>Write command</i>	
<u>Syntax</u> AT+KCNXPROFILE= <cnx cnf>	<u>Response</u> OK <u>Parameters</u> <cnx cnf> 1 – 5 PDP context configuration – a numeric parameter which specifies a particular PDP context configuration
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> This command sets the default PDP context configuration ID for +KTCP_CFG, +KUDPCFG and +KFTPCFG, if <cnx cnf> parameter is not given in these commands.

11.7.4. +KCGPADDR Command: Display PDP Address

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KCGPADDR =?	<u>Response</u> +KCGPADDR: (list of possible <cnx_cnf>s) OK
<i>Write command</i>	
<u>Syntax</u> For all <cnx_cnf>s: AT+KCGPADDR For specific <cnx_cnf>s: AT+KCGPADDR= <cnx_cnf>	<u>Response</u> +KCGPADDR: <cnx_cnf>, <PDP_addr_1> [[+KCGPADDR: <cnx_cnf>, <PDP_addr_2>] ...] OK <u>Parameters</u> <cnx_cnf> 1 – 5 PDP context configuration – a numeric parameter which specifies a particular PDP context configuration <PDP_addr> A string that identifies the MT in the address space applicable to the PDP
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> • This AT command can be used after +KTCP_CFG, +KUDPCFG, etc. to display the local IP address of the module. • For IPv6, more than one PDP addresses corresponding to the interface may be displayed.

11.7.5. +KCNX_IND Notification: Connection Status Notification

HL7518 and HL7548	
<i>Unsolicited Notification</i>	<p><u>Response</u></p> <p>+KCNX_IND: <cnx cnf>,<status>,<af> (for <status> = 0, 1) +KCNX_IND: <cnx cnf>,<status>,<attempt>,<nbtrial>,<tim1> (for <status> = 2) +KCNX_IND: <cnx cnf>,<status> (for <status> = 3, 6) +KCNX_IND: <cnx cnf>,<status>,<attempt> (for <status> = 4) +KCNX_IND: <cnx cnf>,<status>,<idletime> (for <status> = 5)</p> <p><u>Parameters</u></p> <p><cnx cnf> 1 – 5 (PDP context configuration) a numeric parameter which specifies a particular PDP context configuration</p> <p><status> PDP connection status</p> <p>0 Disconnected due to network 1 Connected 2 Failed to connect, <tim1> timer is started if <attempt> is less than <nbtrial> 3 Closed 4 Connecting 5 Idle time down counting started for disconnection 6 Idle time down counting canceled</p> <p><af> 0 IPV4 1 IPV6</p> <p><tim1> Refer to +KCNXTIMER</p> <p><attempt> Current attempt of bringing up of PDP connection</p> <p><nbtrial> Refer to +KCNXTIMER</p> <p><idletime> Refer to +KCNXTIMER</p>
<u>Reference</u> Sierra Wireless Proprietary	

11.7.6. +KCNXUP Command: Bring the PDP Connection Up

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KCNXUP=?	<u>Response</u> +KCNXUP: (list of possible <cnx_cnf>s) OK

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KCNXUP= <cnx_cnf></p>	<p><u>Response</u> OK</p> <p><u>Parameters</u>, <cnx_cnf> 1 – 5 PDP context configuration – a numeric parameter which specifies a particular PDP context configuration</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • This command activates the PDP context and reserves the activated PDP connection (i.e. keeps the PDP connection up even after the last session is closed). • If this command is not used, the PDP context will be brought down after the last session is closed unless +KCNXDOWN is used.

11.7.7. +KCNXDOWN Command: Bring the PDP Connection Down

HL7518 and HL7548					
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KCNXDOWN =?</p>	<p><u>Response</u> +KCNXDOWN: (list of possible <cnx_cnf>s),(list of possible <mode>s) OK</p>				
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KCNXDOWN =<cnx_cnf> [,<mode>]</p>	<p><u>Response</u> OK</p> <p><u>Parameters</u>, <cnx_cnf> 1 – 5 PDP context configuration – a numeric parameter which specifies a particular PDP context configuration</p> <p><mode></p> <table border="0"> <tr> <td style="padding-right: 20px;">0</td> <td>Cancels the reservation of the activated PDP connection previously configured by +KCNXUP</td> </tr> <tr> <td>1</td> <td>Similar to 0, but deactivates the PDP connection even if the active session exists</td> </tr> </table>	0	Cancels the reservation of the activated PDP connection previously configured by +KCNXUP	1	Similar to 0, but deactivates the PDP connection even if the active session exists
0	Cancels the reservation of the activated PDP connection previously configured by +KCNXUP				
1	Similar to 0, but deactivates the PDP connection even if the active session exists				
<p><u>Reference</u> Sierra Wireless Proprietary</p>					

11.8. Common Configuration

11.8.1. +KPATTERN Command: Custom End of Data Pattern

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KPATTERN =?</p>	<p><u>Response</u> OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KPATTERN?</p>	<p><u>Response</u> +KPATTERN: <EOF pattern> OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KPATTERN = <EOF pattern></p>	<p><u>Response</u> OK +CME ERROR <err></p> <p><u>Parameters</u> <EOF pattern> String type (max size 128 bytes). This is a pattern used to notify the end of data (or file) during data or file transfer. This string doesn't have to be human-readable (Not printable characters are allowed)</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • The default value of the pattern is: "--EOF--Pattern--". • It is the responsibility of the user to select an appropriate pattern according to the data transferred. (i.e. Numeric pattern for text files and Readable string for binary files). • The <EOF pattern> pattern is detected within 100ms or higher timeout and without following data. The timeout value is equal to <wait_time> of +KIPOPT. • The received data is stored with buffer size <send size v4> or <send size v6> so that the <EOF pattern> with size larger than it is not detected. The user application should ensure that the value of <send size v4> or <send size v6> is larger than the size of <EOF pattern>.

11.8.2. +KURCCFG Command: Enable or Disable the URC from Protocol Commands

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KURCCFG=?</p>	<p><u>Response</u> +KURCCFG: (list of supported <protopopt>s),(list of supported <noti_act>s),(list of supported <indi_act>s) OK</p>

HL7518 and HL7548	
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KURCCFG?</p>	<p><u>Response</u> +KURCCFG: list of supported (<protoopt>,<noti_act>,<indi_act>) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KURCCFG= <protoopt>, <noti_act> [,<indi_act>]</p>	<p><u>Response</u> OK</p> <p><u>Parameters</u></p> <p><protoopt> Protocol option to enable/disable URC "TCPC" TCP client session "TCPS" TCP server session "UDPC" UDP client session "UDPS" UDP server session "FTP" FTP client session "HTTP" HTTP client session (not supported) "HTTPS" HTTPS client session (not supported) "TCP" Both TCP client and TCP server sessions "UDP" Both UDP client and UDP server sessions</p> <p><noti_act> <u>1</u> Enable URC (like +KTCP_NOTIF, +KFTP_ERROR, etc.) 0 Disable URC</p> <p><indi_act> <u>1</u> Enable URC (like +KTCP_SRVREQ, +KTCP_IND, +KTCP_DATA, +KUDP_DATA, +KUDP_RCV, +KFTP_IND, etc.) 0 Disable URC</p>
<p><u>Examples</u></p>	<p>To disable URC: AT+KURCCFG="TCP",0 OK</p> <p>Test and read command: AT+KURCCFG=? +KURCCFG: ("TCPC","TCPS","UDPC","UDPS","FTP","HTTP","HTTPS","TCP","UDP"), (0,-1),(0-1) OK</p> <p>AT+KURCCFG? +KURCCFG: "TCPC",1,1 +KURCCFG: "TCPS",1,1 +KURCCFG: "UDPC",1,1 +KURCCFG: "UDPS",1,1 +KURCCFG: "FTP",1,1 +KURCCFG: "HTTP",1,1 +KURCCFG: "HTTPS",1,1 OK</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • If set to "disable", URCs are discarded and not stored. • Can be used in 07.10 multiplexer.

11.8.3. +KIOPT Command: General Options Configuration

HL7518 and HL7548											
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KIOPT=?</p>	<p><u>Response</u> +KIOPT: 0,<UDP>,(1-100),(8-1472),(8-1452) +KIOPT: 0,<TCP-based>,(0-100),(0,8-1460),(0,8-1440) +KIOPT: 1,(0-1) +KIOPT: 2,(0-255) +KIOPT: 3,(0-1),(0-1) +KIOPT: 4,(0-1) OK</p>										
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KIOPT?</p>	<p><u>Response</u> +KIOPT: 0,<proto>,<wait time>,<send size v4>,<send size v6>] [...] +KIOPT: 1,<http_chunked> +KIOPT: 2,<http_max_redirect> +KIOPT: 3,<stop_on_error>,<stop_on_peer> +KIOPT: 4,<ssl_ver> OK</p>										
<p><i>Write command</i></p> <p><u>Syntax</u> If <option_id>=0 AT+KIOPT= <option_id>,<proto>,<wait time> [,<send size v4>] [,<send size v6>]]</p> <p>If <option_id>=3 AT+KIOPT= <option_id>,<stop_on_error>,<stop_on_peer></p>	<p><u>Response</u> OK +CME ERROR<err></p> <p><u>Parameters</u> <option_id> Option ID</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20px;">0</td> <td>Wait time, send size threshold configuration</td> </tr> <tr> <td>1</td> <td>HTTP chunked transfer encoding (not supported)</td> </tr> <tr> <td>2</td> <td>HTTP maximum redirection (not supported)</td> </tr> <tr> <td>3</td> <td>PDP connection deactivated behavior</td> </tr> <tr> <td>4</td> <td>SSL version for use in KHTTPS (not supported)</td> </tr> </table> <p><proto> Protocol, string type</p> <p>"TCPC" TCP client session</p> <p>"TCPS" TCP server session</p> <p>"UDPC" UDP client session</p> <p>"UDPS" UDP server session</p> <p>"FTP" FTP client session</p> <p>"HTTP" HTTP client session (not supported)</p> <p>"HTTPS" HTTP server session (not supported)</p> <p>"TCP" Both client and server TCP sessions</p> <p>"UDP" Both client and server UDP sessions</p> <p><wait time> Timeout for configuring the packet segmentation on the IP network side; it specifies the timeout after which the buffered data will be sent to the peer irrespective of data packet size. Value is in 100 ms units.</p>	0	Wait time, send size threshold configuration	1	HTTP chunked transfer encoding (not supported)	2	HTTP maximum redirection (not supported)	3	PDP connection deactivated behavior	4	SSL version for use in KHTTPS (not supported)
0	Wait time, send size threshold configuration										
1	HTTP chunked transfer encoding (not supported)										
2	HTTP maximum redirection (not supported)										
3	PDP connection deactivated behavior										
4	SSL version for use in KHTTPS (not supported)										

HL7518 and HL7548	
	<p>Range: For UDP: 1 – 100, default value = <u>2</u> For TCP: 0 – 100, default value = <u>1</u>. Note that value = 0 has the same effect as having value = 1 due to the limitation from +KPATTERN detection timing</p> <p><send size v4> Data packet size for IPv4 sessions. This parameter specifies the data packet size that needs to be sent to the peer. Range: For UDP: 8 – 1472, default value = <u>1020</u> For TCP: 0, 8 – 1460, default value = <u>0</u> (disabled)</p> <p><send size v6> Data packet size for IPv6 sessions. This parameter specifies the data packet size that needs to be sent to the peer. Range: For UDP: 8 – 1452, default value = <u>1020</u> For TCP: 0, 8 – 1440, default value = <u>0</u> (disabled). Note that value = 0 uses a wait time of 100 ms.</p> <p><stop_on_error> PDP connection deactivation behavior when a session is closed due to any error <u>0</u> Do not request to stop the connection 1 Request to stop the connection</p> <p><stop_on_peer> PDP connection deactivation behavior when a session is closed by a peer/server <u>0</u> Do not request to stop the connection 1 Request to stop the connection</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> The default setting of <option_id>=3 is (<stop_on_error>=0, <stop_on_peer>=0) after module boot-up; this means that a PDP connection is requested to stop only when a session is closed by an Internet AT command (e.g. +KTCPCLOSE). Thresholds <send size v4> and <send size v6> control the maximum size of data received from the AT terminal to be buffered within timeout <wait time>. When the threshold is reached or after timeout, the buffered data are sent to the socket layer for transmission. For UDP: data are sent as a UDP packet For TCP based protocol: data are copied to socket first-in-first-out buffer for transmission but packet segmentation is not guaranteed to be <send size> For TCP based protocol, when <send size v4> and <send size v6> are disabled (=0), threshold = 4000 is used internally. The maximum transmission unit (MTU) is 1500 bytes. <send size v4> and <send size v6> impacts the detection of <EOF pattern>. Refer to the notes of +KPATTERN for more information.

11.9. SSL Configuration

11.9.1. +KSSLCRYPTO Command: Cipher Suite Configuration

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KSSLCRYPTO=?</p>	<p><u>Response</u> +KSSLCRYPTO: <profile_id>,<mkey_Algo>,<auth_algo>,<enc_algo>,<mac_algo>,<tls_ver>,<auth>,<tls_ver>,<auth> OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KSSLCRYPTO?</p>	<p><u>Response</u> + KSSLCRYPTO: <profile_id>,<mkey_algo>,<auth_algo>,<enc_algo>,<mac_algo>,<tls_ver>,<auth> [...]</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KSSLCRYPTO= <profile_id>,<mkey_Algo>,<auth_algo>,<enc_algo>,<mac_algo>,<tls_ver>,<auth></p>	<p><u>Response</u> OK</p> <p><u>Parameters</u> <profile_id> Index of a set of parameters for configuring one SSL profile</p> <p><mkey_algo> Key exchange algorithm selection 1 RSA key exchange</p> <p><auth_algo> Authentication algorithm selection 1 RSA authentication</p> <p><enc_algo> Encryption algorithm selection 4 RC4 64 AES 128 128 AES 256 8192 AES128GCM</p> <p><mac_algo> Message authentication code algorithm selection 1 MD5 2 SHA1 64 AEAD</p> <p><tls_ver> Cipher suite version selection. 1 TLS 1.0 4 TLS 1.2</p> <p><auth> Authentication 0 No authentication 1 Authenticate server 2 Provide client certificate to server 3 Authenticate server and provide client certificate to server</p>

HL7518 and HL7548	
Reference Sierra Wireless Proprietary	

11.9.2. +KSSLCFG Command: SSL Configuration

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KSSLCFG=?	<u>Response</u> +KSSLCFG:<option id>,<option> OK
<i>Read command</i>	
<u>Syntax</u> AT+KSSLCFG?	<u>Response</u> +KSSLCFG:0,<TLS Version> +KSSLCFG:2,<Session Mode> OK
<i>Write command</i>	
<u>Syntax</u> AT+KSSLCFG =<option id>,<option>	<u>Response</u> If <option_id> = 0: AT+KSSLCFG=<option_id>,<TLS Version> OK If <option_id> = 1: AT+KSSLCFG=<option_id>,<Random Seed> OK If <option_id> = 2: AT+KSSLCFG=<option_id>,<Session Mode> OK <u>Parameters</u> <option id> 0 Specify a TLS version to be used for hand shake 1 Setup random seed 2 Specify session mode <TLS Version> 0 Highest possible 1 TLS 1.0 3 TLS 1.2 <Random Seed> String to be added into the entropy of the random number generator <Session Mode> 0 Automatic 1 Always start a new session (not supported)

11.10. TCP Specific Commands

11.10.1. +KTCPCFG Command: TCP Connection Configuration

HL7518 and HL7548													
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KTCPCFG=?</p>	<p><u>Response</u> +KTCPCFG: (list of possible <cnx_cnf>s),(list of possible <mode>s),<remote-name/ip>,(list of possible <tcp_port >s),(list of possible <source_port>s),(list of possible <data_mode>s),(list of possible <URC-ENDTCP-enable>s),(list of possible <af>s),(list of possible <cipher_index>es) OK</p>												
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KTCPCFG?</p>	<p><u>Response</u> +KTCPCFG: <session_id>,<status>,<cnx_cnf>,<mode>[,<serverID>],<tcp remote address>,<tcp_port>[,<source_port>],<data_mode>,<URC-ENDTCP-enable>,<af>,<cipher_index> [...]</p>												
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KTCPCFG= [<cnx_cnf>], <mode>, [<tcp remote address>], <tcp_port>[[, [<source_port>]],[<data_mode>], [<URC-ENDTCP- enable>]]],<af> [,<cipher_index>]</p>	<p><u>Response</u> +KTCPCFG: <session_id> OK</p> <p><u>Parameters</u> <cnx_cnf> Index of a set of parameters for configuring one TCP session (see +KCNXCFG)</p> <p><session_id> TCP session index</p> <p><mode></p> <table> <tr><td>0</td><td>Client</td></tr> <tr><td>1</td><td>Server</td></tr> <tr><td>2</td><td>Child (generated by server sockets)</td></tr> <tr><td>3</td><td>Secure client</td></tr> </table> <p><tcp remote address> IP address string or explicit name of the remote server. For server configuration, this parameter is left blank</p> <p><tcp_port> TCP port number; numeric parameter with range 1 – 65535. This parameter is the listening port for a server configuration.</p> <p><status> Connection state of the selected socket</p> <table> <tr><td>0</td><td>Disconnected</td></tr> <tr><td>1</td><td>Connected</td></tr> </table> <p><serverID> Server session ID index. Only for sockets in CHILD mode</p> <p><source_port> Numeric parameter (0-65535). Specifies the local TCP port number. This parameter is left blank for a server configuration.</p>	0	Client	1	Server	2	Child (generated by server sockets)	3	Secure client	0	Disconnected	1	Connected
0	Client												
1	Server												
2	Child (generated by server sockets)												
3	Secure client												
0	Disconnected												
1	Connected												

HL7518 and HL7548	
	<p><data_mode> <u>0</u> Do not display <data> in URC (default setting) 1 Display <data> in URC</p> <p><URC-ENDTCP-enable> <u>0</u> Do not display URC "+KTCP_ACK" (default setting) 1 Display URC "+KTCP_ACK"</p> <p><af> Address family used for the connection. <u>0</u> IPV4 1 IPV6</p> <p><cipher_index> Cipher suite profile index to use for a secured socket; defined by +KSSLCRYPTO</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • If the socket is defined as a <CLIENT> socket, <tcp_port> and <tcp remote address> define the port and the IP address of the remote server we want to connect. • Maximum <session_id> is 32. • For child session, the property <data_mode> will be kept the same as the server socket's setting. • See section 16.5.6 for use cases of AT+KTCPACKINFO and <URC-ENDTCP-enable> option of AT+KTCPCFG. • This command can be used before setting up +KCNXCFG configuration. Note however that the latter is required to start the connection properly. • The connection timeout for TCP socket is about 9 seconds with 3 retransmissions with 3 seconds delay.

11.10.2. +KTCPCNX Command: Start TCP Connection

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KTCPCNX=?</p>	<p><u>Response</u> +KTCPCNX: (list of possible <session_id>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KTCPCNX= <session_id></p>	<p><u>Response</u> OK +CME ERROR: <err> +KTCP_NOTIF: <session_id>, <tcp_notif></p> <p><u>Parameters</u> <session_id> TCP session index</p> <p><tcp_notif> Integer type. Indicates the cause of the TCP connection failure</p> <p>0 Network error 1 No more sockets available; max. number already reached 2 Memory problem 3 DNS error</p>

HL7518 and HL7548	
	4 TCP disconnection by the server or remote client 5 TCP connection error 6 Generic error 7 Fail to accept client request's 8 Data sending is OK but KTCPSND was waiting more or less characters 9 Bad session ID 10 Session is already running 11 All sessions are used
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> This command is used for connecting to a remote server or listening to a bound port, depending on the selected mode of <session_id.>

11.10.3. +KTCPRCV Command: Receive Data through a TCP Connection

HL7518 and HL7548	
<u>Test command</u>	
<u>Syntax</u> AT+KTCPRCV=?	<u>Response</u> +KTCPRCV: (list of possible <session_id>s),(list of possible <ndata>s) OK
<u>Write command</u>	
<u>Syntax</u> AT+KTCPRCV= <session_id>, <ndata>	<u>Response</u> CONNECT ...<EOF pattern> OK +KTCP_NOTIF: <session_id>,<tcp_notif>
	<u>Parameters</u> <session_id> TCP session index <ndata> Number of bytes the device wants to receive (max value 4294967295) <tcp_notif> See command AT+KTCPCNX
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> This function is used to receive <ndata> data bytes through a previously opened TCP socket. <ndata> indicates the max data number that the terminal wishes to receive. If the TCP socket contains more data than <ndata> bytes then only <ndata> bytes will be received. If the TCP socket contains less data than <ndata> bytes then only TCP socket's data will be received. <EOF pattern> would be added at the end of data automatically. When <ndata> (max value) bytes or only available data in the TCP socket have been received, the module returns to command state and returns OK. It is highly recommended to configure the module for hardware flow control using AT&K3 before using this command. The behavior of DTR drop meets with AT&D.

11.10.4. +KTCPSND Command: Send Data through a TCP Connection

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KTCPSND=?</p>	<p><u>Response</u> +KTCPSND: (list of possible <session_id>s),(list of possible <ndata>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KTCPSND= <session_id>, <ndata></p>	<p><u>Response</u> CONNECT OK</p> <p><u>Error case</u> NO CARRIER +CME ERROR: <err> +KTCP_NOTIF: <session_id>,<tcp_notif></p> <p><u>Parameters</u> <session_id> TCP session index</p> <p><ndata> Number of bytes (max value 4294967295)</p> <p><tcp_notif> See command AT+KTCPCNX</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • User must use <EOF pattern> to finish sending, then module returns to command mode. • All the data will be sent out ignoring <ndata>. If data sent is not equal to <ndata> then KTCP_NOTIF would appear. • <ndata> is the data size without <EOF pattern>. • It is highly recommended to configure the module for hardware flow control using AT&K3 before using this command. • The behavior of DTR drop meets with AT&D. • Using "+++" can abort sending data and using ATO[n] to return back to data mode.

11.10.5. +KTCPCLOSE Command: Close Current TCP Operation

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KTCPCLOSE =?</p>	<p><u>Response</u> +KTCPCLOSE: (list of possible <session_id>s), (list of possible <closing_type>s) OK</p>

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KTCPCLOSE =<session_id> [<closing_type>]</p>	<p><u>Response</u> OK +CME ERROR: <err> NO CARRIER +KTCP_NOTIF: <session_id>, <tcp_notif></p> <p><u>Parameters</u> <session_id> TCP session index</p> <p><closing_type> 0 Abort. Fast closing of the TCP connection (not supported). 1 The TCP connection is properly closed, which means that data sent to the module by AT+KTCPSND will be sent to the TCP server and acknowledged before the socket is closed.</p> <p><tcp_notif> See command AT+KTCPCNX</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • This function first closes the TCP socket and if there is no other session running then the PDP context is released. • AT+KTCPDEL=<session_id> can be used to delete the socket configuration after close.

11.10.6. +KTCPDEL Command: Delete a Configured TCP Session

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KTCPDEL=?</p>	<p><u>Response</u> +KTCPDEL: (list of possible <session_id>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KTCPDEL= <session_id></p>	<p><u>Response</u> OK +CME ERROR: <err></p> <p><u>Parameters</u> <session_id> TCP session index</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u> The session must be closed (using +KTCPCLOSE) before using this command.</p>

11.10.7. +KTCP_SRVREQ Notification: Incoming Client Connection Request

HL7518 and HL7548	
<i>Unsolicited Notification</i>	<p><u>Response</u> +KTCP_SRVREQ: <session_id>,<subsession_id>,<client_ip>,<client_port></p> <p><u>Parameters</u> <session_id> TCP session index <subsession_id> Newly created TCP session index <client_ip> IP address string of the incoming socket <client_port> Numeric parameter (0-65535), the port of the incoming client</p>
<u>Examples</u>	<p>Configure the module to TCP servers AT+KCNXCFG=0,"GPRS","szsjmc.gd"; +KTCPCFG=0,1,,179 +KTCPCFG: 1 OK</p> <p>AT+KCNXCFG=0,"GPRS","szsjmc.gd"; +KTCPCFG=0,1,,180 +KTCPCFG: 2 OK</p> <p>Start the TCP servers AT+KTCPCNX=1 //listen on port 179 OK</p> <p>AT+KTCPCNX=2 //listen on port 180 OK</p> <p>Show the TCP servers' IP address AT+KCGPADDR +KCGPADDR: 0,"192.168.1.49" OK</p> <p>Incoming connection request from remote client, shows ip address and port of remote client +KTCP_SRVREQ: 1,3,"192.168.0.32",4614 //incoming a connection request from "192.168.0.32" via //listening port 179, the remote port //is 4614</p> <p>+KTCP_SRVREQ: 2,4,"10.10.10.110",4665 //incoming a connection request from "10.10.10.110" via //listening port 180, the remote port //is 4665</p> <p>+KTCP_SRVREQ: 2,5,"10.10.10.110",4668 //incoming a connection request from the same ip via the same //listening port, the remote //port is 4668</p> <p>+KTCP_SRVREQ: 1,6,"192.168.1.117",1739 //incoming a connection request from "192.168.1.117" via //listening port 179, the remote //port is 1739</p>

HL7518 and HL7548	
	<p>+KTCP_NOTIF: 4,4 //the connection of sub session id 4 (on listening port 180) is //closed.</p> <p>+KTCP_SRVREQ: 2,4,"10.10.10.8",4672 //incoming a connection request from "10.10.10.8" via listening //port 180, the remote port is //4672</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • This notification is sent when a client requests a connection to the server. The connection is automatically accepted. • The created session is driven as any other TCP session with its own session ID. Use KTCPSND, KTCPCRV, KTCPCLOSE, etc. to provide the service associated to this TCP server. • The TCP server corresponding to the session ID is still able to receive connection requests from other clients. These requests are notified with KTCP_SRVREQ. • The client IP address and port can also be checked using AT+KTCPCFG? after the client is connected to the TCP server.

11.10.8. +KTCP_DATA Notification: Incoming Data through a TCP Connection

HL7518 and HL7548	
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +KTCP_DATA: <session_id>,<ndata available>[,<data>]</p> <p><u>Parameters</u> <session_id> TCP session index</p> <p><ndata available> for <data_mode> = 0, maximum number of bytes to be read in the TCP receive buffer for <data_mode> = 1, maximum number of bytes to be read in <data></p> <p><data> Data in octet. The length of data is specified by <ndata_available></p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • As soon as the connection is established, the module can receive data through the TCP socket. This notification is sent when data are available in the receive buffer. • This notification is sent for each TCP packet received. • When <data_mode> is set to 1, <ndata_available> will range from 1 to 1500 in the URC. If the user application sends over 1500 bytes of data to the module, the module will display those data with several URCs. • See section 16.6.3 Use Cases for KTCP_DATA and KUDP_DATA for use cases for KTCP_DATA and KUDP_DATA.

11.10.9. +KTCP_IND Notification: TCP Status

HL7518 and HL7548	
<i>Unsolicited Notification</i>	<p><u>Response</u> +KTCP_IND: <session_id>,<status></p> <p><u>Parameters</u> <session_id> TCP session index</p> <p><status> TCP session status</p> <p>1 Session is set up and ready for operation</p>
<u>Reference</u> Sierra Wireless Proprietary	

11.10.10. +KTCPSTAT Command: Get TCP Socket Status

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u> AT+KTCPSTAT= ?</p>	<p><u>Response</u> OK</p>
<i>Read command</i>	
<p><u>Syntax</u> AT+KTCPSTAT?</p>	<p><u>Response</u> OK</p>
<i>Write command</i>	
<p><u>Syntax</u> For all TCP session IDs: AT+KTCPSTAT</p> <p>or</p> <p>AT+KTCPSTAT= <session_id></p>	<p><u>Response</u> +KTCPSTAT: <session_id>,<status>,<tcp_notif>,<rem_data>,<rcv_data> [...] OK</p> <p>or</p> <p>+KTCPSTAT: <status>,<tcp_notif>,<rem_data>,<rcv_data> OK</p> <p><u>Parameters</u> <session_id> TCP session index</p> <p><status> value to indicate TCP socket state</p> <p>0 socket not defined, use KTCP_CFG to create a TCP socket</p> <p>1 socket is only defined but not used</p> <p>2 socket is opening and connecting to the server, cannot be used</p> <p>3 connection is up, socket can be used to send/receive data</p> <p>4 connection is closing, it cannot be used, wait for status 5</p> <p>5 socket is closed</p> <p><tcp_notif> -1 if socket/connection is OK, <tcp_notif> if an error has happened</p>

HL7518 and HL7548	
	<p><rem_data> remaining bytes in the socket buffer, waiting to be sent</p> <p><rcv_data> received bytes, can be read with +KTCPCRV command</p>
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> The socket buffer's size for sending is 17520 bytes. This command returns +CME ERROR: 910 (Bad Session ID) for undefined <session_id>s.

11.10.11. +KTCPSTART Command: Start a TCP Connection in Direct Data Flow

HL7518 and HL7548	
<u>Test command</u>	
<u>Syntax</u> AT+KTCPSTART =?	<u>Response</u> OK
<u>Read command</u>	
<u>Syntax</u> AT+KTCPSTART ?	<u>Response</u> OK
<u>Write command</u>	
<u>Syntax</u> AT+KTCPSTART =<session_id>	<u>Response</u> CONNECT OK <p>+CME ERROR: an error occurs, syntax error +KTCP_NOTIF: <session_id>,<tcp_notif> : an error occurs</p> <u>Parameters</u> <session_id> TCP session index <tcp_notif> See command AT+KTCPCNX
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> This function is used to send and receive data bytes through a TCP socket. It is highly recommended to configure the module for hardware flow control using AT&K3 before using this command. The behavior of DTR drop meets with AT&D. +++ can be used to switch in command mode. ATO<session_id> can be used to switch back in data mode. Only 1 KTCPSTART session can be used. Can be used in 07.10 multiplexer. If the session is successfully connected by +KTCPCNX, this command does not restart the connection and the module directly enters direct data flow.

11.10.12. +KTCP_ACK Notification: Status Report for Latest TCP Data

HL7518 and HL7548	
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +KTCP_ACK: <session_id>,<result> <CR><LF></p> <p><u>Parameters</u> <session_id> TCP session index</p> <p><result> 0 Data sent failure: not all data has been received by remote side 1 Data sent success: all the data has already been received by the remote side</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • This URC is enabled or disabled by parameter <URC-ENDTCP-enable> of command "+KTCPCFG". The URC is disabled by default. • See section 16.5.6 for use cases for AT+KTCPACKINFO and <URC-ENDTCP-enable> option.

11.10.13. +KTCPACKINFO Command: Poll ACK Status for the Latest Data

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KTCPACKINFO=?</p>	<p><u>Response</u> OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KTCPACKINFO?</p>	<p><u>Response</u> OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> For all TCP session IDs with <URC-ENDTCP-enable>=1: AT+KTCPACKINFO or AT+KTCPACKINFO=<session_id></p>	<p><u>Response</u> +KTCPACKINFO: <session_id>,<result> [...] OK</p> <p>or +KTCPACKINFO: <session_id>,<result> OK +CME ERROR: <err></p> <p><u>Parameters</u> <session_id> TCP session index</p>

HL7518 and HL7548							
	<p><result></p> <table> <tr> <td>0</td> <td>Data sent failure: not all data has been received by remote side.</td> </tr> <tr> <td>1</td> <td>Data sent success: all the data has already been received by the remote side; or no data transfer has happened yet</td> </tr> <tr> <td>2</td> <td>The status is unknown yet</td> </tr> </table>	0	Data sent failure: not all data has been received by remote side.	1	Data sent success: all the data has already been received by the remote side; or no data transfer has happened yet	2	The status is unknown yet
0	Data sent failure: not all data has been received by remote side.						
1	Data sent success: all the data has already been received by the remote side; or no data transfer has happened yet						
2	The status is unknown yet						
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> The command will return ERROR if <URC-ENDTCP-enable> of command "+KTCP CFG" is 0. After the TCP session is connected and before any data transfer, AT+KTCPCFG returns 1. 						

11.11. UDP Specific Commands

11.11.1. +KUDPCFG Command: UDP Connection Configuration

HL7518 and HL7548							
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KUDPCFG=?</p>	<p><u>Response</u> +KUDPCFG: (list of possible <cnx cnf>s),(list of possible <mode>s),(list of possible <port>s),(list of possible <data_mode>s),<remote-name/ip>,(list of possible <udp_port>s),(list of possible <af>s) OK</p>						
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KUDPCFG?</p>	<p><u>Response</u> +KUDPCFG: <session_id>,<cnx cnf>,<mode>,<port>,<data_mode>,<udp remote address>,<udp_port>,<af> [...] OK</p>						
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KUDPCFG= [<cnx cnf>], <mode>[,<port>] [,<data_mode>], [<udp remote address>], <udp_port>,<af></p>	<p><u>Response</u> +KUDPCFG: <session_id> OK</p> <p><u>Error case</u> +CME ERROR: <err> +KUDP_NOTIF: <session_id>, <udp_notif></p> <p><u>Parameter</u> <session_id> UDP session index</p> <table> <tr> <td><mode></td> <td>0</td> <td>Client</td> </tr> <tr> <td></td> <td>1</td> <td>Server</td> </tr> </table> <p><port> Numeric parameter (0-65535); default value is 0 (random)</p>	<mode>	0	Client		1	Server
<mode>	0	Client					
	1	Server					

HL7518 and HL7548	
	<p><cnx cnf> 1 – 5 (PDP context configuration) a numeric parameter which specifies a particular PDP context configuration (see section 11.7.1 +KCNXCFG Command: GPRS Connection Configuration).</p> <p><udp_notif> Integer type. Indicates the cause of the UDP connection failure.</p> <p>0 Network error 1 No more sockets available; max number already reached 2 Memory problem 3 DNS error 5 UDP connection error (host unreachable) 6 Generic error 8 Data sending is OK but KUDPSND was waiting more or less characters 9 Bad session ID 10 Session is already running 11 All sessions are used</p> <p><data_mode> <u>0</u> Do not display <data> in URC (default setting) 1 Display <data> in URC</p> <p><udp remote address> IP address string or explicit name of the remote host, Default is empty (given by +KUDPSND).</p> <p><udp_port> UDP peer port. Numeric parameter with range 0-65535. Default value is <u>0</u> (given by +KUDPSND).</p> <p><af> Address family used for the connection.</p> <p><u>0</u> IPV4 1 IPV6</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> For UDP socket in server mode, it is bound to a defined port number, incoming connection are notified by KUDP_DATA. If remote address and port are given, they are saved for use in +KUDPSND. Maximum <session_id> is 32. +KCNXCFG configuration should be set up in order to start the connection properly

11.11.2. +KUDPRCV Command: Receive Data through a UDP Connection

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KUDPRCV=?</p>	<p><u>Response</u> +KUDPRCV: (list of possible <session_id>s),(list of possible <ndata>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KUDPRCV= <session_id>, <ndata></p>	<p><u>Response</u> CONNECT ...<EOF pattern> OK +KUDP_RCV: <udp remote address>,<udp remote port>,<ndata available></p>

HL7518 and HL7548	
	<p><u>Error case</u> NO CARRIER +CME ERROR: <err> +KUDP_NOTIF: <session_id>, <udp_notif> +KUDP_DATA_MISSED: <session_id>, <ndata missed></p> <p><u>Parameters</u> <session_id> UDP session index</p> <p><ndata> Number of bytes the device wants to receive (max value 4294967295)</p> <p><udp remote address> IP address string of the remote host</p> <p><udp remote port> Numeric parameter (0-65535)</p> <p><ndata available> Number of bytes to be read in first received packet</p> <p><udp_notif> See command AT+KUDPCFG</p> <p><ndata missed> Number of bytes left (and definitely lost!) in the UDP socket</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • This function is used to receive <ndata> data bytes through a previously opened UDP socket. • <ndata> indicates the max data number that the terminal wishes to receive. If the UDP socket contains more data than <ndata> bytes, then only <ndata> bytes will be received and more data can be read by running this command again. • <EOF pattern> would be added at the end of data automatically. • When <ndata> (max value) bytes or only available data in the UDP socket have been received, the module returns to command mode. • It is highly recommended to configure the module for hardware flow control using AT&K3 before using this command. • The behavior of DTR drop meets with AT&D.

11.11.3. +KUDPSND Command: Send Data through a UDP Connection

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KUDPSND=?</p>	<p><u>Response</u> +KUDPSND: (list of possible <session_id>s),<remote-name/ip>,(list of possible <udp_port>s),(list of possible <ndata>s) OK</p>

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KUDPSND= <session_id>, <udp remote address>, <udp_port>, <ndata></p>	<p><u>Response</u> CONNECT OK</p> <p><u>Error case</u> NO CARRIER +CME ERROR: <err> +KUDP_NOTIF: <session_id>,<udp_notif></p> <p><u>Parameters</u> <session_id> UDP session index</p> <p><udp remote address> IP address string or explicit name of the remote host</p> <p><udp_port> UDP peer port. Numeric parameter with range 1-65535</p> <p><ndata> Number of bytes (max value 4294967295)</p> <p><udp_notif> See command AT+KUDPCFG</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • User must use <EOF pattern> to finish sending, then module returns to command mode. • All the data will be sent out ignoring <ndata>. If data sent is not equal to <ndata> then KUDP_NOTIF would appear. • <ndata> is the data size without <EOF pattern>. • It is highly recommended to configure the module for hardware flow control using AT&K3 before using this command. • The behavior of DTR drop meets with AT&D. • Using “+++” can abort sending data and using ATO[n] to return back to data mode. • The maximum transmission unit (MTU) is 1500 bytes. • The <udp remote address> and <udp_port> are saved internally such that they can be omitted in subsequent calls of +KUDPSND. • The packet segmentation is controlled by +KIPOPT with <option_id>=0, and the maximum UDP packet size is limited by <send size v4> (1472 bytes) or <send size v6> (1452 bytes). Default values are 1020 bytes.

11.11.4. +KUDPCLOSE Command: Close Current UDP Operation

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KUDPCLOSE =?</p>	<p><u>Response</u> +KUDPCLOSE: (list of possible <session_id>s),(list of possible <keep_cfg>s) OK</p>

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KUDPCLOSE =<session_id> [,<keep_cfg>]</p>	<p><u>Response</u> OK +KUDP_NOTIF: <session_id>, <udp_notif></p> <p><u>Parameters</u> <session_id> UDP session index</p> <p><udp_notif> See command AT+KUDPCFG</p> <p><keep_cfg> Specifies whether to delete the session configuration after closing it</p> <p>0 Delete the session configuration 1 Keep the session configuration</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • This function closes the UDP session. If there is no other session running, the PDP context would be released. • This function will delete the session configuration if <keep_cfg> = 0.

11.11.5. +KUDPDEL Command: Delete a Configured UDP Session

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KUDPDEL=?</p>	<p><u>Response</u> +KUDPDEL: (list of possible <session_id>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KUDPDEL= <session_id></p>	<p><u>Response</u> OK +CME ERROR: <err></p> <p><u>Parameters</u> <session_id> UDP session index</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u> The session must be closed (using +KUDPCLOSE) before using this command.</p>

11.11.6. +KUDP_IND Notification: UDP Status

HL7518 and HL7548	
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +KUDP_IND: <session_id>,<status></p> <p><u>Parameters</u> <session_id> UDP session index</p> <p><status> UDP session status 1 Session is set up and ready for operation</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	

11.11.7. +KUDP_DATA Notification: Incoming Data through a UDP Connection

HL7518 and HL7548	
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +KUDP_DATA: <session_id>,<ndata available>[,<udp remote address>,<udp remote port>,<data>]</p> <p><u>Parameters</u> <session_id> UDP session index</p> <p><ndata available> Number of bytes to be read</p> <p><udp remote address> IP address string of the remote host</p> <p><udp remote port> Numeric parameter (0 – 65535)</p> <p><data> Data in octet. The length of data is specified by <ndata_available></p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • As soon as the UDP socket is created, the module can receive data through this socket. This notification is sent when data are available in the receive buffer. • This notification will be sent one time. When <data_mode> was set to 0 (Do not display data in URC), the controlling software must read the buffer with KUDPRCV in order to activate the notification again. • When <data_mode> was set to 1, <ndata_available> will range from 1 – 1500 in the URC. If the user application sends over 1500 bytes of data to the module, the module will display those data with several URCs. It is possible for other applications (e.g. from Windows) to send more than 1472 bytes UDP packets to the module but the packet will be segmented and reassembled by the network stack. • When <data_mode> is set to 1, URC "+KUDP_RCV" will not be displayed after "+KUDP_DATA". • When <data_mode> was set to 1, the fields <udp remote address> and <udp remote port> will be displayed in URC "+KUDP_DATA". When <data_mode> was set to 0, they will be displayed in URC "+KUDP_RCV". • See section 16.6.3 Use Cases for KTCP_DATA and KUDP_DATA for use cases for KTCP_DATA and KUDP_DATA.

11.12. FTP Client Specific Commands

11.12.1. +KFTPCFG Command: FTP Configuration

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KFTPCFG=?</p>	<p><u>Response</u> +KFTPCFG: (list of possible <cnx cnf>s),<server-name/ip>,(range of possible length of <login>),(range of possible length of <password>),(list of possible <port_number>s),(list of possible <mode>s),(list of possible <start>s),(list of possible <af>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KFTPCFG?</p>	<p><u>Response</u> +KFTPCFG: <session_id>,<cnx cnf>,<server_name>,<login>,<password>,<port_number>,<mode>,<started>,<af></p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KFTPCFG= [<cnx cnf>], <server_name> [,<login> [,<password> [,<port_number> [,<mode>] [,<start>] [,<af>]]]]</p>	<p><u>Response</u> +KFTPCFG:<session_id> OK</p> <p><u>Error case</u> +KFTP_ERROR: <session_id>,<ftp cause></p> <p><u>Parameters</u> <cnx cnf> 1 – 5 (PDP context configuration) a numeric parameter which specifies a particular PDP context configuration</p> <p><session_id> FTP session index</p> <p><server_name> IP address string of the ftp server or domain name of the server</p> <p><login> String type, indicates the user name to be used during the FTP connection</p> <p><password> String type, indicates the password to be used during the FTP connection</p> <p><port_number> Numeric parameter (1-65535). Indicates the remote command port (21 by default)</p> <p><mode> Numeric number. Indicates the initiator of the FTP connection. 0 Active. The server is initiator of the FTP data connection 1 Passive. The client is initiator of the FTP data connection in order to avoid the proxy filtrate. The passive data transfer process “listens” on the data port for a connection from the active transfer process in order to open the data connection</p> <p><start> Specifies whether to start the FTP connection immediately. 0 Start the FTP connection later by +KFTPCNX 1 Start the FTP connection immediately</p>

HL7518 and HL7548	
	<p><started> Specifies whether the FTP connection is started</p> <p>0 FTP connection is not started yet</p> <p>1 FTP connection is started</p> <p><af> Address family used for the connection.</p> <p>0 IPV4</p> <p>1 IPV6</p> <p><ftp_cause> Integer type. Indicates the cause of the FTP connection failure.</p> <p>0 the sending or the retrieving was impossible due to request timeout</p> <p>1 it is impossible to connect to the server due to DNS resolution failure</p> <p>2 it is impossible to download a file due to connection troubles</p> <p>3 the download was impossible due to connection timeout</p> <p>4 no network available</p> <p>5 flash access trouble</p> <p>6 flash memory full</p> <p>7 network error</p> <p>XXX three digits, reply codes from FTP server. See section 16.2.5 FTP Reply Codes</p>
<u>Example</u>	AT+KFTPCFG=1,"ftp.connect.com","username","password",21,0
<u>Reference</u> Sierra Wireless Proprietary	<p><u>Notes</u></p> <ul style="list-style-type: none"> • Execution command sets the server name, the login, the password, the port number and the mode for ftp operations. • This command (with <start> = 0) can be used before setting up +KCNXCFG configuration. Note however that the latter is required to start the connection properly. • The connection timeout for TCP socket is about 9 seconds with 3 retransmissions with 3 seconds delay. • The result of the FTP connection is notified using unsolicited response.

11.12.2. +KFTPCNX Command: Start FTP Connection

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KFTPCNX=?	<p><u>Response</u></p> <p>+KFTPCNX: (list of possible <session_id>s)</p> <p>OK</p>
<i>Write command</i>	
<u>Syntax</u> AT+KFTPCNX= <session_id>	<p><u>Response</u></p> <p>OK</p> <p><u>Error case</u></p> <p>NO CARRIER</p> <p>+CME ERROR: <err></p> <p>+KFTP_ERROR: <session_id>,<ftp cause></p>

HL7518 and HL7548	
	<p><u>Parameters</u></p> <p><session_id> FTP session index</p> <p><ftp_cause> Integer type. Indicates the cause of the FTP connection failure.</p> <p>0 the sending or the retrieving was impossible due to request timeout</p> <p>1 it is impossible to connect to the server due to DNS resolution failure</p> <p>2 it is impossible to download a file due to connection troubles</p> <p>3 the download was impossible due to connection timeout</p> <p>4 no network available</p> <p>5 flash access trouble</p> <p>6 flash memory full</p> <p>7 network error</p> <p>XXX three digits, reply codes from FTP server. See section 16.2.5 FTP Reply Codes</p>
<p><u>Reference</u></p> <p>Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • This command is used to start the FTP connection created by +KFTPCFG with <start>=0. • +KFTPCV, +KFTPSND, +KFTPDEL automatically starts the connection if it has not been started using AT+KFTPCNX. • The result of the FTP connection is notified using unsolicited response.

11.12.3. +KFTPCV Command: Receive FTP Files

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u></p> <p>AT+KFTPCV=?</p>	<p><u>Response</u></p> <p>+KFTPCV: (list of possible <session_id>s),<local_uri>,<server_path>,<file_name>, (list of possible <type_of_file>s),(list of possible <offset>s)</p> <p>OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u></p> <p>AT+KFTPCV= <session_id>, [<local_uri>], [<server_path>], <file_name> [,<type_of_file> [,<offset>]]</p>	<p><u>Response</u></p> <p>CONNECT</p> <p><EOF_pattern></p> <p>OK</p> <p><u>Error case</u></p> <p>+CME ERROR<err></p> <p>NO CARRIER</p> <p>+KFTP_ERROR: <session_id>,<ftp cause></p> <p><u>Parameters</u></p> <p><session_id> FTP session index</p> <p><local_uri> This argument must be empty. It is reserved for compatibility of command syntax.</p> <p><server_path> String type. Indicates the path of the file to be downloaded. An empty string or no string indicates the downloading is done from the path given by the FTP server</p>

HL7518 and HL7548	
	<p><file_name> string type. Indicates the name of the file to download</p> <p><type_of_file> Numeric type. Indicates the type of file (ASCII or binary) to transfer</p> <p>0 Binary (default value)</p> <p>1 ASCII</p> <p><offset> 0 – 4294967295 Integer type indicating the offset to “resume transfer”. See 16.7.2 "FTP Resume" Use Case. When downloading file and transmitting to serial link, module will use the <offset> value and “resume transfer” from this position.</p> <p><EOF_pattern> End of file notification. See +KPATTERN for value</p> <p><ftp_cause> Integer type. Indicates the cause of the FTP connection failure</p> <p>0 the sending or the retrieving was impossible due to request timeout</p> <p>1 it is impossible to connect to the server due to DNS resolution failure</p> <p>2 it is impossible to download a file due to connection troubles.</p> <p>3 the download was impossible due to connection timeout</p> <p>4 no network available</p> <p>5 flash access trouble</p> <p>6 flash memory full</p> <p>7 network error</p> <p>XXX three digits, reply codes from FTP server. See section 16.2.5 FTP Reply Codes</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • Before using this command, an FTP connection must have been achieved using AT+KFTPCFG. • After sending the +KFTPCV command, the user will receive the entire data stream. • The user can abort the download by sending the “End of Data pattern” from the host. In this case, the module will end the transfer by transmitting the EOF followed by NO CARRIER. • Download can also be aborted (disconnected) by +++ or DTR as specified in 16.9 Switch Data/Command Mode DTR +++ ATO Behavior Table. • If AT&C1 is set, DCD will be ON after CONNECT and DCD will be OFF after download is done. • “Resume transfer” feature shall be supported by the FTP server to be used. • See section 16.7.2 "FTP Resume" Use Case. • If the FTP server does not support the resume feature, module will output KFTP_ERROR. The <ftp_cause> will be in the sets {500, 501, 502, 421, 530}. See section 16.2.5 FTP Reply Codes for error codes.

11.12.4. +KFTPSND Command: Send FTP Files

HL7518 and HL7548	
<p><i>Test command</i></p>	
<p><u>Syntax</u> AT+KFTPSND=?</p>	<p><u>Response</u> +KFTPSND: (list of possible <session_id>s),<local_uri>,<server_path>,<file_name>, (list of possible <type of file>s),(list of possible <append>s) OK</p>

HL7518 and HL7548*Write command*Syntax

AT+KFTPSND=
<session_id>,
[<local_uri>],
[<server_path>],
<file_name>
[,<type of file>]
[,<append>]

Response

CONNECT
data ...
<EOF pattern>
OK

Error case

+CME ERROR <err>
NO CARRIER
+KFTP_ERROR: <session_id>,<ftp cause>

Parameters

<session_id> FTP session index

<local_uri> This argument must be empty. It is reserved for compatibility of command syntax.

<server_path> string type. Indicates the path of the file to be uploaded. An empty string or no string indicates the uploading is done from the path given by the FTP server

<file_name> string type. Indicates the name of the file to upload

<type of file> Numeric type. Indicates the type of file (ASCII or binary) to transfer

0 Binary
 1 ASCII

<append> Numeric type. Indicates using "append" or not when uploading.

0 Do not use "append". (default value) If the file already exists then the file will be overridden

1 Use "append". If the file already exists then the data will be appended at the end of the file; otherwise the file will be created

<EOF pattern> End of file notification. See KPATTERN for values

<ftp_cause> Integer type. Indicates the cause of the FTP connection failure.

0 the sending or the retrieving was impossible due to request timeout
 1 it is impossible to connect to the server due to DNS resolution failure
 2 it is impossible to download a file due to connection troubles.
 3 the download was impossible due to connection timeout
 4 no network available
 5 flash access trouble
 6 flash memory full
 7 network error

XXX three digits, reply codes from FTP server. See section 16.2.5 FTP Reply Codes

HL7518 and HL7548	
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> • Before using this command, an FTP connection must have been achieved using AT+KFTPCFG. • After sending the +KFTPSND command, the host must send the entire data stream of the file. • Upload can also be ended (disconnected) by +++ or DTR as specified in 16.9 Switch Data/Command Mode DTR +++ ATO Behavior Table. • ATO is not available for this command. • If AT&C1 is set, DCD will be ON after CONNECT, and it will be OFF after the upload done.

11.12.5. +KFTPDEL Command: Delete FTP Files

HL7518 and HL7548	
<u>Test command</u> <u>Syntax</u> AT+KFTPDEL=?	<u>Response</u> +KFTPDEL: (list of possible <session_id>s),<server_path>,<file_name>,(list of possible <type>s) OK
<u>Write command</u> <u>Syntax</u> AT+KFTPDEL= <session_id>, [<server_path>], <file_name> [,<type>]	<u>Response</u> OK <u>Error case</u> +CME ERROR <err> NO CARRIER +KFTP_ERROR: <session_id>,<ftp cause> <u>Parameters</u> <session_id> FTP session index <server_path> string type. Indicates the path of the file to be deleted. An empty string or no string indicates the deleting is done from the path given by the <server_name> parameter <file_name> string type. Indicates the name of the file to delete <type> Numeric type. Indicates the type of file (ASCII or binary) to transfer 0 Binary 1 ASCII <ftp_cause> Integer type. Indicates the cause of the FTP connection failure 0 the sending or the retrieving was impossible due to request timeout 1 it is impossible to connect to the server due to DNS resolution failure 2 it is impossible to delete a file due to connection troubles 3 the deleting was impossible due to connection timeout 4 no network available XXX three digits, reply codes from FTP server. See section 16.2.5 FTP Reply Codes

HL7518 and HL7548	
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> Before using this command, an FTP connection must have been achieved using AT+KFTPCFG. The result of the delete operation is notified using unsolicited response.

11.12.6. +KFTP_IND Notification: FTP Status

HL7518 and HL7548	
<u>Unsolicited Notification</u>	<u>Response</u> +KFTP_IND: <session_id>,<status>[,<data_len>] <u>Parameters</u> <session_id> FTP session index <status> FTP session status 1 Session is set up and ready for operation 2 The last FTP command is executed successfully <data_len> Byte length of data downloaded/uploaded to/from the terminal (+KFTPCV or +KFTPSND)
<u>Reference</u> Sierra Wireless Proprietary	

11.12.7. +KFTPCLOSE Command: Close Current FTP Connection

HL7518 and HL7548	
<u>Test command</u>	
<u>Syntax</u> AT+KFTPCLOSE =?	<u>Response</u> +KFTPCLOSE: (list of possible <session_id>s),(list of possible <keep_cfg>s) OK
<u>Write command</u>	
<u>Syntax</u> AT+KFTPCLOSE =<session_id> [,<keep_cfg>]	<u>Response</u> OK <u>Parameters</u> <session_id> FTP session index <keep_cfg> Specifies whether to delete the session configuration after closing it 0 Delete the session configuration 1 Keep the session configuration
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> This command will close the connection to the FTP server.

11.12.8. +KFTPCFGDEL Command: Delete a Configured FTP Session

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KFTPCFGDEL=?</p>	<p><u>Response</u> +KFTPCFGDEL: (list of possible <session_id>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KFTPCFGDEL=<session_id></p>	<p><u>Response</u> OK +CME ERROR: <err></p> <p><u>Parameters</u> <session_id> FTP session index</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u> The session must be closed (using +KFTPCLOSE) before using this command.</p>

11.13. HTTP Client Specific Commands

11.13.1. +KHTTPCFG Command: HTTP Connection Configuration

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KHTTPCFG=?</p>	<p><u>Response</u> +KHTTPCFG: (list of possible <cnx_cnf>s),<server-name/ip>,(list of possible <http_port>s),(list of possible <http_version>s),(range of possible length of <login>),(range of possible length of <password>),(list of possible <started>s),(list of possible <af>s),(list of possible <cipher_index>es) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KHTTPCFG?</p>	<p><u>Response</u> +KHTTPCFG: <session_id>,<cnx_cnf>,<http_server>,<http_port>,<http_version>,<login>,<password>,<started>,<af>,<cipher_index> OK</p>

HL7518 and HL7548																					
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KHTTPCFG= [<cnx_cnf>], <http_server> [,<http_port> [,<http_version> [,<login> [,<password>] [,<start>] [,<af>]]] [,<cipher_index>]]]</p>	<p><u>Response</u> +KHTTPCFG: <session_id> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <cnx_cnf> 1 – 5 (PDP context configuration) a numeric parameter which specifies a particular PDP context configuration (see KCNXCFCG)</p> <p><session_id> HTTP session index</p> <p><http_server> IP address string or explicit name of the remote server</p> <p><http_port> Numeric parameter (1-65535), 80 by default</p> <p><http_version></p> <table style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">0</td> <td>HTTP 1.1(by default)</td> </tr> <tr> <td>1</td> <td>HTTP 1.0</td> </tr> <tr> <td>2</td> <td>HTTP 1.1 over TLS (HTTPS)</td> </tr> <tr> <td>3</td> <td>HTTP 1.0 over TLS (HTTPS)</td> </tr> </table> <p><login> String type, indicates the user name to be used during the HTTP connection</p> <p><password> String type, indicates the password to be used during the HTTP connection</p> <p><start> Specifies whether to start the HTTP connection immediately or not</p> <table style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">0</td> <td>Start the HTTP connection later using +KTTPCNX</td> </tr> <tr> <td>1</td> <td>Start the HTTP connection immediately</td> </tr> </table> <p><started> Specifies whether the HTTP connection has been started</p> <table style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">0</td> <td>The HTTP connection has not been started yet</td> </tr> <tr> <td>1</td> <td>The HTTP connection has already been started</td> </tr> </table> <p><af> Address family used for the connection. Default is IPV4.</p> <table style="margin-left: 20px;"> <tr> <td style="padding-right: 10px;">0</td> <td>IPV4</td> </tr> <tr> <td>1</td> <td>IPV6</td> </tr> </table> <p><cipher_index> Cipher suite profile index to use for a secured socket; defined by +KSSLCRYPTO</p>	0	HTTP 1.1(by default)	1	HTTP 1.0	2	HTTP 1.1 over TLS (HTTPS)	3	HTTP 1.0 over TLS (HTTPS)	0	Start the HTTP connection later using +KTTPCNX	1	Start the HTTP connection immediately	0	The HTTP connection has not been started yet	1	The HTTP connection has already been started	0	IPV4	1	IPV6
0	HTTP 1.1(by default)																				
1	HTTP 1.0																				
2	HTTP 1.1 over TLS (HTTPS)																				
3	HTTP 1.0 over TLS (HTTPS)																				
0	Start the HTTP connection later using +KTTPCNX																				
1	Start the HTTP connection immediately																				
0	The HTTP connection has not been started yet																				
1	The HTTP connection has already been started																				
0	IPV4																				
1	IPV6																				
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> <http_port> and <http_server> define the port and the IP address of the remote server one wants to connect. The connection timeout for TCP socket is about 9 seconds with 3 retransmissions with 3 seconds delay. This command can be used before setting up +KCNXCFCG configuration. Note however that the latter is required to start the connection properly. For <af>=1 (IPV6), server address (<http_server>) in IP address string format can be optionally quoted with square brackets "[]", e.g. [FEDC:BA98:7654:3210:FEDC:BA98:7654:3210] 																				

11.13.2. +KHTTPCNX Command: Start the HTTP Connection

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+KHTTPCNX= ?	<u>Response</u> +KHTTPCNX: (list of possible <session_id>s) OK
<i>Write command</i>	
<u>Syntax</u> AT+KHTTPCNX= <session_id>	<u>Response</u> OK or +CME ERROR: <err> +KHTTP_ERROR: <session_id>, <http_notif> <u>Parameters</u> <session_id> HTTP session index <http_notif> Integer type. Indicates the cause of the HTTP connection failure 4 DNS error 5 HTTP connection error due to internal trouble 6 HTTP connection timeout 9 Triple plus (+++) error (switch to command mode) 10 HTTP has no data 11 HTTP has partial data
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> This command is used to start the HTTP connection created by +KHTTPCFG with <start>=0. +KHTTPGET, +KHTTPHEAD, +KHTTPPOST automatically starts the connection if it has not been started before using AT+KHTTPCNX.

11.13.3. +KHTTPHEADER Command: Set the HTTP Request Header

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+ KHTTPHEADER =?	<u>Response</u> +KHTTPHEADER: (list of possible <session_id>s),<local_uri> OK
<i>Read command</i>	
<u>Syntax</u> AT+ KHTTPHEADER?	<u>Response</u> +KHTTPHEADER: <session_id>,<count> [...]

HL7518 and HL7548	
<i>Write command</i>	
<p><u>Syntax</u> AT+KHTTPHEADER= <session_id> [,<local_uri>]</p>	<p><u>Response</u> OK or +CME ERROR: <err></p> <p><u>Parameters</u> <session_id> HTTP session index</p> <p><local_uri> This argument must be empty. It is reserved for compatibility of command syntax.</p> <p><count> Count of HTTP headers</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> The data session is automatically ended when <ndata> data bytes are sent/received, and the module returns to command state and returns OK. The data session can also be ended by <EOF pattern>, +++ or DTR. Refer to section 16.9 Switch Data/Command Mode DTR +++ ATO Behavior Table.

11.13.4. +KHTTPGET Command: Get HTTP Server Information

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u> AT+KHTTPGET =?</p>	<p><u>Response</u> +KHTTPGET: (list of possible <session_id>s),<request_uri >,(list of possible <show_resp>s) OK</p>
<i>Write command</i>	
<p><u>Syntax</u> AT+KHTTPGET= <session_id>,<request_uri> [,<show_resp>]</p>	<p><u>Response</u> CONNECT ...<EOF pattern> OK or NO CARRIER +CME ERROR: <err> +KHTTP_ERROR: <session_id>, <http_notif></p> <p><u>Parameters</u> <session_id> HTTP session index</p> <p><request_uri> string type, indicates the information url to get during the HTTP connection</p>

HL7518 and HL7548	
	<p><http_notif> Integer type. Indicates the cause of the HTTP connection failure</p> <p>4 DNS error</p> <p>5 HTTP connection error due to internal trouble</p> <p>6 HTTP connection timeout</p> <p>9 Triple plus (+++) error (switch to command mode)</p> <p>10 HTTP has no data</p> <p>11 HTTP has partial data</p> <p><show_resp> Whether to show HTTP response and HTTP headers</p> <p>0 Do not show response and headers</p> <p>1 Show response and headers (default)</p>
Reference Sierra Wireless Proprietary	<p><u>Notes</u></p> <ul style="list-style-type: none"> • <session_id> is always 0. • The user can abort the download by sending the “End of Data pattern” from the host. In this case, the module will end the transfer by transmitting the EOF followed by NO CARRIER. • Download can also be aborted (disconnected) by +++ or DTR as specified in 16.9 Switch Data/Command Mode DTR +++ ATO Behavior Table. • HTTP does not support DTR1.

11.13.5. +KHTTPHEAD Command: Get HTTP Headers

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u></p> <p>AT+KHTTPHEAD =?</p>	<p><u>Response</u></p> <p>+KHTTPHEAD: (list of possible <session_id>s),<request_uri> OK</p>
<i>Write command</i>	
<p><u>Syntax</u></p> <p>AT+KHTTPHEAD =<session_id>,<request_uri></p>	<p><u>Response</u></p> <p>CONNECT ...<EOF pattern> OK</p> <p>or</p> <p>NO CARRIER +CME ERROR: <err> +KHTTP_ERROR: <session_id>, <http_notif></p> <p><u>Parameters</u></p> <p><session_id> HTTP session index</p> <p><request_uri> String type, indicates the information URL to get during HTTP connection</p> <p><http_notif> Integer type. Indicates the cause of the HTTP connection failure</p> <p>4 DNS error</p> <p>5 HTTP connection error due to internal trouble</p> <p>6 HTTP connection timeout</p>

HL7518 and HL7548	
	9 Triple plus (+++) error (switch to command mode) 10 HTTP has no data 11 HTTP has partial data
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> • HTTP does not support DTR1 • This method is identical to GET except that the server MUST NOT return a message-body in the response. The meta-information contained in the HTTP headers in response to a HEAD request SHOULD be identical to the information sent in response to a GET request

11.13.6. +KHTTPPOST Command: Perform HTTP Post

HL7518 and HL7548	
<u>Test command</u>	
<u>Syntax</u> AT+KHTTPPOST =?	<u>Response</u> +KHTTPPOST: (list of possible <session_id>s),<local_uri>,<request_uri>,(list of possible <show_resp>s) OK
<u>Write command</u>	
<u>Syntax</u> AT+KHTTPPOST = <session_id>,<local_uri>,<request_uri> [<show_resp>]	<u>Response</u> CONNECT ...<EOF pattern> OK or NO CARRIER +CME ERROR: <err> +KHTTP_ERROR: <session_id>, <http_notif> <u>Parameters</u> <session_id> HTTP session index <local_uri> This argument must be empty. It is reserved for compatibility of command syntax. <request_uri> String type, the request data of the HTTP connection <http_notif> Refer to +KHTTPGET <show_resp> Whether to show HTTP response and HTTP headers 0 Do not show HTTP response and headers 1 Show HTTP response and headers (default)

HL7518 and HL7548	
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> • <session_id> is always 0. • It is highly recommended to configure the module for hardware flow control using AT&K3 before using this command. • Upload can also be ended (disconnected) by +++ or DTR as specified in 16.9 Switch Data/Command Mode DTR +++ ATO Behavior Table. • ATO is not available for this command.

11.13.7. +KHTTPCLOSE Command: Close an HTTP Connection

HL7518 and HL7548	
<u>Test command</u>	
<u>Syntax</u> AT+KHTTPCLOSE=?	<u>Response</u> +KHTTPCLOSE: (list of possible <session_id>s), (list of possible <keep_cfg>s) OK
<u>Write command</u>	
<u>Syntax</u> AT+KHTTPCLOSE= <session_id> [,<keep_cfg>]	<u>Response</u> OK or +CME ERROR: <err> <u>Parameters</u> <session_id> HTTP session index <keep_cfg> Specifies whether to delete the session configuration after closing it 0 Delete the session configuration 1 Keep the session configuration
<u>Reference</u> Sierra Wireless Proprietary	

11.13.8. +KHTTPDEL Command: Delete a Configured HTTP Session

HL7518 and HL7548	
<u>Test command</u>	
<u>Syntax</u> AT+KHTTPDEL =?	<u>Response</u> +KHTTPDEL: (list of possible <session_id>s) OK

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KHTTPDEL= <session_id></p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameter</u> <session_id> HTTP session index</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u> The HTTP session must be closed (using +KHTTPCLOSE) before using this command.</p>

11.13.9. +KHTTP_IND Notification: HTTP Status

HL7518 and HL7548	
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +KHTTP_IND: <session_id>,<status>[,<data_len>,<st_code>,<st_reason>]</p> <p><u>Parameters</u> <session_id> HTTP session index</p> <p><status> HTTP session status 1 Session is set up and ready for operation 3 The last HTTP command is executed successfully</p> <p><data_len> Byte length of data downloaded/uploaded to/from the terminal (using +KHTTPHEAD, +KHTTPGET, or +KHTTPPOST)</p> <p><st_code> HTTP response status code</p> <p><st_reason> HTTP response status reason string</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	

11.14. HTTPS Client Specific Commands

11.14.1. +KHTTPSCFG Command: HTTPS Connection Configuration

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KHTTPSCFG =?</p>	<p><u>Response</u> +KHTTPSCFG: (list of possible <cnx_cnf>s),<server-name/ip>,(list of possible <https_port>s),(list of possible <http_version>s),(list of possible <cipher_suite>s) ,(list of possible <sec_level>s) ,(range of possible length of <login>),(range of possible length of <password>),(list of possible <started>s), (list of possible <af>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KHTTPSCFG ?</p>	<p><u>Response</u> +KHTTPSCFG: <session_id>,<cnx_cnf>,<http_server>,<https_port>, <http_version>,<cipher suite>,<sec_level>,<login>,<password>,<started>,<af> OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KHTTPSCFG =[<cnx_cnf>], <http_server> [,<https_port> [,<http_version> [,<cipher_suite> [,<sec_level> [,<login> [,<password>] [,<start>] [,<af>]]]]]]]</p>	<p><u>Response</u> +KHTTPSCFG: <session_id> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u></p> <p><cnx_cnf> 1 – 5 (PDP context configuration) a numeric parameter which specifies a particular PDP context configuration (see +KCNXCFG).</p> <p><session_id> HTTPS session index</p> <p><http_server> IP address string or explicit name of the remote server</p> <p><https_port> Numeric parameter (1-65535), <u>443</u> by default.</p> <p><http_version> <u>0</u> HTTP 1.1 1 HTTP 1.0</p> <p><cipher_suite></p> <p><u>0</u> TLS_RSA_CHOOSE_BY_SERVER <u>1</u> TLS_RSA_WITH_RC4_128_MD5 <u>2</u> TLS_RSA_WITH_RC4_128_SHA <u>3</u> TLS_RSA_WITH_DES_CBC_SHA (not supported) <u>4</u> TLS_RSA_WITH_3DES_EDE_CBC_SHA (not supported) <u>5</u> TLS_RSA_EXPORT1024_WITH_DES_CBC_SHA (not supported) <u>6</u> TLS_RSA_WITH_AES_128_CBC_SHA <u>7</u> TLS_RSA_WITH_AES_256_CBC_SHA</p>

HL7518 and HL7548	
	<p><sec_level> 1 No authentication 2 Manage server authentication (renegotiation of client certificate is not supported) 3 Manage server and client authentication if requested by remote server (renegotiation of client certificate is not supported)</p> <p><login> String type, indicates the user name to be used during the HTTPS connection.</p> <p><password> String type, indicates the password to be used during the HTTPS connection.</p> <p><start> Specifies whether to start the HTTPS connection immediately or not 0 Start the HTTPS connection later using +KHTTPSCNX 1 Start the HTTPS connection immediately</p> <p><started> Specifies whether the HTTPS connection has been started 0 The HTTPS connection has not been started yet 1 The HTTPS connection has already been started</p> <p><af> Address family used for the connection 0 IPV4 1 IPV6</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • <https_port> and <http_server> define the port and the IP address of the remote server one wants to connect. • The connection timeout for TCP socket is about 9 seconds with 3 retransmissions with 3 seconds delay. • For <sec_level>:2 and 3, certificates or private key must be loaded from internal storage. See SSL Certificate Management for more information. • Any certificates referenced in HTTPS feature should be DER encoded. • Any private key referenced in HTTPS feature should be DER- PKCS#8 encoded. • This command can be used before setting up +KCNXCFG configuration. Note however that the latter is required to start the connection properly. • For <af>=1 (IPV6), server address (<http_server>) in IP address string format can be optionally quoted with square brackets "[]", e.g. [FEDC:BA98:7654:3210:FEDC:BA98:7654:3210] • SSL version is TLS 1.1 by default; refer to <ssl_ver> of +KIPOPT for configuration.

11.14.2. +KHTTPSCNX Command: Start HTTPS Connection

HL7518 and HL7548	
<i>Test command</i>	
<p><u>Syntax</u> AT+KHTTPSCNX =?</p>	<p><u>Response</u> +KHTTPSCNX: (list of possible <session_id>s) OK</p>

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KHTTPSCNX =<session_id></p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err> +KHTTPS_ERROR: <session_id>, <http_notif></p> <p><u>Parameters</u> <session_id> HTTPS session index</p> <p><http_notif> Integer type. Indicates the cause of the HTTPS connection failure</p> <p>4 DNS error 5 HTTPS connection error due to internal trouble 6 HTTPS connection timeout 9 Triple plus (+++) error (switch to command mode) 10 HTTPS got no data 11 HTTPS got partial data</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • This command is used to start the HTTPS connection created by +KHTTPSCFG with <start>=0. • +KHTTPSGET, +KHTTPSHEAD, +KHTTPSPOST automatically starts the connection if it has not been started using AT+KHTTPSCNX.

11.14.3. +KHTTPSHEADER Command: Set the HTTPS Request Header

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KHTTPSHEADER =?</p>	<p><u>Response</u> +KHTTPSHEADER: (list of possible <session_id>s), <local_uri> OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KHTTPSHEADER ?</p>	<p><u>Response</u> +KHTTPSHEADER: <session_id>,<count> [...]</p>

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KHTTPSHEADER =<session_id> [,<local_uri>]</p>	<p><u>Response</u> OK</p> <p>or</p> <p>+CME ERROR: <err></p> <p><u>Parameters</u> <session_id> HTTPS session index</p> <p><local_uri> This argument must be empty. It is reserved for compatibility of command syntax.</p> <p><count> HTTPS header count</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • The data session is automatically ended when <ndata> data bytes are sent/received, and the module returns to command state and returns OK. • The data session can also be ended by <EOF pattern>, +++ or DTR. Refer to section 16.9 Switch Data/Command Mode DTR +++ ATO Behavior Table for the behavior of +++, DTR or ATO.

11.14.4. +KHTTPSGET Command: Get Information from HTTPS Server

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KHTTPSGET =?</p>	<p><u>Response</u> +KHTTPSGET: (list of possible <session_id>s),<request_uri>,(list of possible <show_resp>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KHTTPSGET =<session_id>,<request_uri> [,<show_resp>]</p>	<p><u>Response</u> CONNECT ...<EOF pattern> OK</p> <p>or</p> <p>NO CARRIER +CME ERROR: <err> +KHTTPS_ERROR: <session_id>,<http_notif></p> <p><u>Parameters</u> <session_id> HTTPS session index</p> <p><request_uri> String type, indicates the information URL to get during HTTPS connection</p>

HL7518 and HL7548	
	<p><http_notif> Integer type. Indicates the cause of the HTTPS connection failure</p> <p>4 DNS error</p> <p>5 HTTP connection error due to internal trouble</p> <p>6 HTTP connection timeout</p> <p>7 Flash access trouble</p> <p>8 Flash memory full</p> <p>9 Triple plus (+++) error (switch to command mode)</p> <p>10 HTTP has no data</p> <p>11 HTTP has partial data</p> <p>12 SSL connection error</p> <p>13 SSL initialization error</p> <p><show_resp> Defines whether HTTPS response and HTTPS headers are shown</p> <p>0 Do not show HTTPS response and headers</p> <p>1 Show HTTPS response and headers</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> The user can abort the download by sending the “End of Data pattern” from the host. In this case, the module will end the transfer by transmitting the EOF followed by NO CARRIER. Download can also be aborted (disconnected) by +++ or DTR as specified in 16.9 Switch Data/Command Mode DTR +++ ATO Behavior Table.

11.14.5. +KHTTPSHEAD Command: Retrieve HTTPS Headers

HL7518 and HL7548	
<p><i>Test command</i></p>	
<p><u>Syntax</u> AT+ KHTTPSHEAD=?</p>	<p><u>Response</u> +KHTTPSHEAD: (list of possible <session_id>s),<request_uri> OK</p>
<p><i>Write command</i></p>	
<p><u>Syntax</u> AT+ KHTTPSHEAD= <session_id>, <request_uri></p>	<p><u>Response</u> CONNECT ...<EOF pattern> OK</p> <p>or</p> <p>NO CARRIER +CME ERROR: <err> +KHTTPS_ERROR: <session_id>, <http_notif></p> <p><u>Parameters</u> <session_id> HTTPS session index</p> <p><request_uri> String type, indicates the information URL to get during HTTPS connection</p>

HL7518 and HL7548	
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • HTTPS does not support DTR1 • This method is identical to GET except that the server MUST NOT return a message-body in the response. The meta-information contained in the HTTP headers in response to a HEAD request SHOULD be identical to the information sent in response to a GET request.

11.14.6. +KHTTPSPPOST Command: Send Data to HTTPS Server

HL7518 and HL7548	
<p><i>Test command</i></p>	
<p><u>Syntax</u> AT+KHTTPSPPOST=?</p>	<p><u>Response</u> +KHTTPSPPOST: (list of possible <session_id>s),<local_uri>,<request_uri>,(list of possible <show_resp>s) OK</p>
<p><i>Write command</i></p>	
<p><u>Syntax</u> AT+KHTTPSPPOST= <session_id>, <local_uri>, <request_uri> [,<show_resp>]</p>	<p><u>Response</u> CONNECT ...<EOF pattern> OK</p> <p>or</p> <p>NO CARRIER +CME ERROR: <err> +KHTTPS_ERROR: <session_id>, <http_notif></p> <p><u>Parameters</u> <session_id> HTTPS session index</p> <p><local_uri> This argument must be empty. It is reserved for compatibility of command syntax.</p> <p><request_uri> String type, indicates the request data of the HTTPS connection</p> <p><http_notif> Refer to +KHTTPSGET</p> <p><show_resp> Defines whether HTTPS response and HTTPS headers are shown 0 Do not show HTTPS response and headers 1 Show HTTPS response and headers</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • It is highly recommended to configure the module for hardware flow control using AT&K3 before using this command. • Upload can also be ended (disconnected) by +++ or DTR as specified in 16.9 Switch Data/Command Mode DTR +++ ATO Behavior Table. • ATO is not available for this command.

11.14.7. +KHTTPSCLOSE Command: Close an HTTPS Connection

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KHTTPSCLOSE=?</p>	<p><u>Response</u> +KHTTPSCLOSE: (list of possible <session_id>s), (list of possible <keep_cfg>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KHTTPSCLOSE=<session_id>[,<keep_cfg>]</p>	<p><u>Response</u> OK or +CME ERROR: <err></p> <p><u>Parameters</u> <session_id> HTTPS session index</p> <p><keep_cfg> Specified whether to delete the session configuration after closing it 0 Delete the session configuration 1 Keep the session configuration</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	

11.14.8. +KHTTPSDEL Command: Close an HTTPS Connection

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KHTTPSDEL=?</p>	<p><u>Response</u> +KHTTPSDEL: (list of possible <session_id>s) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KHTTPSDEL=<session_id></p>	<p><u>Response</u> OK or +CME ERROR: <err></p> <p><u>Parameter</u> <session_id> HTTPS session index</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u> The session must be closed (using +KHTTPSCLOSE) before using this command.</p>

11.14.9. +KHTTPS_IND Notification: HTTPS Status

HL7518 and HL7548	
<i>Unsolicited Notification</i>	<p><u>Response</u> +KHTTPS_IND: <session_id>,<status>[,<data_len>]</p> <p><u>Parameters</u> <session_id> HTTPS session index</p> <p><status> HTTPS session status 1 Session is set up and ready for operation 2 The last HTTPS command is executed successfully</p> <p><data_len> Byte length of data downloaded/uploaded to/from the terminal (using +KHTTPSHEAD, +KHTTSPGET, or +KHTTSPPOST)</p>
<u>Reference</u> Sierra Wireless Proprietary	

11.15. SSL Certificate Manager

11.15.1. +KCERTSTORE Command: Store Root CA and Local Certificates to Internal Storage

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+ KCERTSTORE=?	<p><u>Response</u> +KCERTSTORE: (list of possible <data_type>s),(range of possible lengths of <NbData>), (list of possible <index>es) OK</p>
<i>Read command</i>	
<u>Syntax</u> AT+ KCERTSTORE?	<p><u>Response</u> +KCERTSTORE [root_cert,<index>,<NbData><CR><LF> <File_data><CR><LF>] [local_cert,<index>,<NbData><CR><LF> <File_data> <CR><LF>] [...] OK</p> <p>or +CME ERROR: <err></p>

HL7518 and HL7548	
<p><i>Write command</i></p> <p><u>Syntax</u> AT+ KCERTSTORE= <data_type> [,<NbData> [,<index>]]</p>	<p><u>Response</u> CONNECT OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <data_type> 0 Root certificate 1 Local certificate</p> <p><NbData> Number of bytes to read/write. Value range: 1-3000.</p> <p><index> Stored root/local certificate index. If a root/local certificate is already stored at the index, it will be overloaded. <u>0</u> by default. Value range: 0 If <data_type> = 0 0 – 2 If <data_type> = 1</p> <p><File_data> File data in bytes</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • The <index> parameter is the link between a local certificate and a private key (refer to +KPRIVKSTORE and +KCERTDELETE for more information). • The data session is automatically ended when <ndata> data bytes are sent/received, and the module returns to command state and returns OK. • The data session can also be ended by <EOF pattern>, +++ or DTR. Refer to section 16.9 Switch Data/Command Mode DTR +++ ATO Behavior Table for the behavior of +++ or DTR. • ATO is not available for this command.

11.15.2. +KPRIVKSTORE Command: Store Private Key Associated to a Local Certificate

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+ KPRIVKSTORE =?</p>	<p><u>Response</u> +KPRIVKSTORE: (list of possible <index>s),(range of possible lengths of <NbData> OK</p>

HL7518 and HL7548	
<p><i>Read command</i></p> <p><u>Syntax</u> AT+KPRIVKSTORE?</p>	<p><u>Response</u> +KPRIVKSTORE private_key,<index>,<NbData><CR><LF> <File_data> <CR><LF> OK</p> <p>or</p> <p>+CME ERROR: <err></p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+KPRIVKSTORE= <index> [,<NbData>]</p>	<p><u>Response</u> CONNECT OK</p> <p>or</p> <p>+CME ERROR: <err></p> <p><u>Parameters</u> <index> Index of the stored local certificate associated to this private key. Value range: 0 – 2</p> <p><NbData> Number of bytes to read/write (mandatory for both reading and writing). Value range: 1-3000.</p> <p><File_data> File data in bytes</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • The data session is automatically ended when <ndata> data bytes are sent/received, and the module returns to command state and returns OK. • The data session can also be ended by <EOF pattern>, +++ or DTR. Refer to section 16.9 Switch Data/Command Mode DTR +++ ATO Behavior Table for the behavior of +++ or DTR. • ATO is not available for this command.

11.15.3. +KCERTDELETE Command: Delete Local Certificate from the Index

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+KCERTDELETE =?</p>	<p><u>Response</u> +KCERTDELETE: (list of possible <data_type>s),(list of possible <index>s) OK</p>

HL7518 and HL7548	
<p><i>Read command</i></p> <p><u>Syntax</u> AT+ KCERTDELETE?</p>	<p><u>Response</u> +KCERTDELETE: OK</p> <p>or +CME ERROR: <err></p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+ KCERTDELETE= <data_type> [,<index>]</p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameters</u> <data_type> 0 Root certificate 1 Local certificate</p> <p><index> Stored local certificate index. Default value = 0. Value range: 0 If <data_type> = 0 0 – 2 If <data_type> = 1</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	

11.15.4. +KPRIVKDELETE Command: Delete Private Key from the Index

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+ KPRIVKDELETE =?</p>	<p><u>Response</u> +KPRIVKDELETE: (list of possible <index>es) OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> AT+ KPRIVKDELETE= <index></p>	<p><u>Response</u> OK</p> <p>or +CME ERROR: <err></p> <p><u>Parameter</u> <index> Stored private key index. Value range: 0 – 2</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	

>> 12. AVMS Commands

12.1. +WDSA Command: Change Account for DM Connection

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+WDSA=?	<u>Response</u> +WDSA: (list of supported <ServerId>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+WDSA?	<u>Response</u> +WDSA: <ServerId> OK
<i>Write command</i>	
<u>Syntax</u> AT+WDSA= <serverId>	<u>Response</u> OK or +CME ERROR <err> <u>Parameter</u> <ServerId> String type – Server ID associated with the account.
<u>Examples</u>	AT+WDSA=? +WDSA: (“Cingular”, “Cingularlab”, “WAVECOM-RDMS-SERVER”) OK AT+WDSA=“WAVECOM-RDMS-SERVER” OK AT+WDSA? +WDSA: “WAVECOM-RDMS-SERVER” OK
<u>Notes</u>	This command is available when the embedded module has finished the Device Services initialization (see +WDSI) and when the AVMS services are in activated state (see +WDSG).

12.2. +WDSC Command: Device Services Configuration

HL7518 and HL7548	
<p><i>Test command</i></p> <p><u>Syntax</u> AT+WDSC=?</p>	<p><u>Response</u> +WDSC: (0-2), (list of supported <State>s) +WDSC: 3, (list of supported <State>s) +WDSC: 4, (list of supported <Timer_n>s) OK</p>
<p><i>Read command</i></p> <p><u>Syntax</u> AT+WDSC?</p>	<p><u>Response</u> +WDSC: 0,<State> +WDSC: 1,<State> +WDSC: 2,<State> +WDSC: 3,<State> +WDSC: 4,<Timer_1>[[,<Timer_2>]...[,<Timer_n>]] OK</p>
<p><i>Write command</i></p> <p><u>Syntax</u> For <Mode>= 0, 1, 2 or 3 AT+WDSC=<Mode>,<State></p> <p>For <Mode>= 4 AT+WDSC=<Mode>,<timer_1>[[,<Timer_2>]...[,<Timer_n>]]</p>	<p><u>Response</u> OK</p> <p>or +CME ERROR <err></p> <p><u>Parameters</u> <Mode> Integer type</p> <p>0 User agreement for connection When this mode is activated and when a notification SMS is received by the embedded module, an indication (see +WDSI indication for more information) is returned by the embedded module to request for an agreement before connecting to the AirPrime Management Services server</p> <p>1 User agreement for package download When this mode is activated, an indication (see +WDSI indication for more information) is returned by the embedded module to request for an agreement before downloading any package</p> <p>2 User agreement for package install When this mode is activated, an indication (see +WDSI indication for more information) is returned by the embedded module to request for an agreement before installing any package</p> <p>3 Polling mode The embedded module will initiate a connection to the Device Services server according to the defined timer</p> <p>4 Retry mode If an error occurs during a connection to the Device Services server (GPRS establishment failed, for example), the embedded module will initiate a new connection according to the defined timers. This mechanism is persistent to the reset.</p>

HL7518 and HL7548	
	<p><State> Integer type – Status of the mode For <Mode> = 0, 1 or 2 0 Disabled (default value) 1 Enabled</p> <p>For <Mode> = 3 Value in range [0-525600] (units:min) 0 The polling mode is deactivated</p> <p><Timer_1> Timer between the first failed connection and the next attempt. Value in range [0 to 20160] (units: min). 0 The retry mode is deactivated 15 Default value</p> <p><Timer_n> Timer between the nth failed attempt connection and the (n+1)th connection (n<=8). Value in range [1 to 20160] (units: min) Default values: <Timer_2>=60 <Timer_3>=240 <Timer_4>=960 <Timer_5>=2880 <Timer_6>=10080 <Timer_7>=10080</p>
<u>Examples</u>	<p>AT+WDSC=? +WDSC:(0-2),(0-1) +WDSC:3,(0-525600) +WDSC:4,(0-20160),(1-20160),(1-20160),(1-20160),(1-20160),(1-20160),(1-20160), (1-20160) OK</p> <p>AT+WDSC? <i>// All modes are deactivated except retry mode which is used with default timers</i> +WDSC: 0,0 +WDSC: 1,0 +WDSC: 2,0 +WDSC: 3,0 +WDSC: 4,15,60,240,960,2880,10080,10080 OK</p> <p>AT+WDSC=0,1 OK</p> <p>AT+WDSC? +WDSC: 0,1 +WDSC: 1,0 +WDSC: 2,0 +WDSC: 3,0 +WDSC: 4,15,60,240,960,2880,10080,10080 OK</p>

HL7518 and HL7548	
<u>Notes</u>	<ul style="list-style-type: none"> • This command is available when the embedded module has finished the Device Services initialization (see +WDSI) and when the AVMS services are in prohibited state (see +WDSG). • Parameters <State> and <Timer_1> to <Timer_n> are stored in non-volatile memory. The &F command has no impact on these values. • The network registration is considered as “failed” when all connections configured by the retry mode have failed. This registration is forbidden while the APN is not set by the +WDSS command.

12.3. +WSD Command: Device Services Local Download

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+WSD=?	<u>Response</u> +WSD: (list of supported <Size>s) OK
<i>Write command</i>	
<u>Syntax</u> AT+WSD=<Size>	<u>Response</u> <NACK> <i>// User sends data</i> OK or +CME ERROR <err> <u>Parameter</u> <Size> Package size in bytes. Value in range [1 to 24643584]
<u>Examples</u>	AT+WSD=? +WSD: (1-24643584) OK AT+WSD=1024 <i>//download a 1kBytes package</i> <NACK> <i>//the device is ready to receive data</i> <i>//Send Data</i> OK <i>//All data are well received by the module</i> +WSDI: 3 <i>//A package is ready to install (see +WDSI and +WDSR commands)</i>

HL7518 and HL7548	
<p><u>Reference</u> Sierra Wireless Proprietary Command</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • This command is available when the embedded module has finished its initialization. • The response to the AT+WDS= <Size> command is the <NACK> character when the device is ready to receive data using the 1K-Xmodem protocol. • The flow control of the TE has to be set to 'Hardware'. • This command will automatically activate the user agreement for install (see +WDS command description). • No reset is made during the package download. • A timeout will happen (and a +CME ERROR: 3 is returned) if no data is sent to the device in 5 minutes.

12.4. +WDSE Command: Device Services Error

HL7518 and HL7548	
<p><i>Execute command</i></p> <p><u>Syntax</u> AT+WDSE</p>	<p><u>Response</u> [+WDSE:<HTTP_Status>] OK</p> <p>or</p> <p>+CME ERROR <err></p> <p><u>Parameter</u> <HTTP_Status> Integer type – last HTTP response received by the module</p> <ul style="list-style-type: none"> 100 Continue 101 Switching Protocols 200 OK 201 Created 202 Accepted 203 Non-Authoritative Information 204 No Content 205 Reset Content 206 Partial content 300 Multiple Choices 301 Moved Permanently 302 Found 303 See Other 304 Not Modified 305 Use Proxy 307 Temporary Redirect 400 Bad Request 401 Unauthorized 402 Payment Required 403 Forbidden 404 Not Found 405 Method Not Allowed 406 Not Acceptable 407 Proxy Authentication Required

HL7518 and HL7548	
	408 Request time-out 409 Conflict 410 Gone 411 Length Required 412 Precondition Failed 413 Request Entity too large 414 Request URI too large 415 Unsupported Media type 416 Request range unsatisfiable 417 Expectation failed 500 Internal server error 501 Not implemented 502 Bad Gateway 503 Service unavailable 504 Gateway time-out 505 HTTP version not supported If no session was made with the server, AT+WDSE only returns OK, without +WDSE: <HTTP_Status> intermediary response.
<u>Examples</u>	AT+WDSS=1,1 //A session was made with the server OK AT+WDSE +WDSE: 200 //The last HTTP response received is "OK" OK
<u>Notes</u>	This command is available when the embedded module has finished the Device Services initialization (see +WDSI) and when the AVMS services are in activated state (see +WDSG).

12.5. +WDSF Command: Device Services Fallback

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+WDSF=?	<u>Response</u> +WDSF: (list of supported <Mode>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+WDSF?	<u>Response</u> +WDSF: 1,<FallbackInfo> +WDSF: 2,<EraseInfo> OK
<i>Write command</i>	
<u>Syntax</u> AT+WDSF= <Mode>	<u>Response</u> OK or +CME ERROR <err>

HL7518 and HL7548	
	<p><u>Parameters</u></p> <p><Mode> Integer type</p> <p>1 Downgrade to a previous installation</p> <p>2 Delete the downloaded package which contains the reverse patch</p> <p><FallbackInfo> Integer type – Indicates the presence of the previous package</p> <p>0 Previous package is not present</p> <p>1 Previous package is present</p> <p><EraseInfo> Integer type – Indicate if a package can be deleted. Be careful, erasing the package will disable the possibility to make any recovery or manual fallback</p> <p>0 The package cannot be deleted</p> <p>1 The package can be deleted</p>
<u>Examples</u>	<p>AT+WDSF? //a reverse package is present, deletion impossible</p> <p>+WDSF: 1,1</p> <p>+WDSF: 2,0</p> <p>OK</p> <p>AT+WDSF=1 //downgrade to the previous installation</p> <p>OK</p> <p>+WDSI: 17,1 //downgrade the package successfully done, displayed only if +WDSI //indication is activated</p>
<u>Notes</u>	This command is available when the embedded module has finished the Device Services initialization (see +WDSI).

12.6. +WDSG Command: Device Services General Status

HL7518 and HL7548	
<u>Test command</u>	
<u>Syntax</u> AT+WDSG=?	<u>Response</u> OK
<u>Execute command</u>	
<u>Syntax</u> AT+WDSG	<p><u>Response</u></p> <p>+WDSG: <Indication>,<State></p> <p>[+WDSG: <Indication>,<State>[...]]</p> <p>OK</p> <p>or</p> <p>+CME ERROR <err></p> <p><u>Parameters</u></p> <p><Indication> Integer type</p> <p>0 Device services activation state</p> <p>1 Session and package indication</p>

HL7518 and HL7548	
	<p><State> Indication status</p> <p>For <Indication>=0</p> <p>0 Device services are prohibited. Device services will never be activated.</p> <p>1 Device services are deactivated. Connection parameters to a device services have to be provisioned.</p> <p>2 Device services have to be provisioned. NAP parameters have to be provisioned.</p> <p>3 Device services are activated.</p> <p>If a device has never been activated (first use of device services on this device), <State> is set to 1. The connection parameters are automatically provisioned, no action is needed from the user.</p> <p>For <Indication>=1</p> <p>0 No session or package</p> <p>1 A session is under treatment</p> <p>2 A package is available on the server.</p> <p>3 A package was downloaded and ready to install</p> <p>When a package was installed or a recovery was made, <State> is set to 0.</p>
<u>Examples</u>	<p>AT+WDSG=? OK</p> <p>AT+WDSG +WDSG: 0,3 //Device services are activated, +WDSG: 1,0 //No session to the server, no patch to download or to install OK</p>
<u>Notes</u>	This command is available when the embedded module has finished the Device Services initialization (see +WDSI).

12.7. +WDSI Command: Device Services Indication

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+WDSI=?	<u>Response</u> +WDSI: (list of supported <Level>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+WDSI?	<u>Response</u> [+WDSI: <Level>] OK
<i>Write command</i>	
<u>Syntax</u> AT+WDSI= <Level>	<u>Response</u> OK or +CME ERROR <err>

HL7518 and HL7548

Parameters

- <Level>** Indication level, bit field (default value = 0)
- Bit set to 0 Indication deactivated
- Bit set to 1 Indication activated
- 0 No indication
- 1 Activate the initialization end indication (<Event> = 0)
- 2 Activate the server request for a user agreement indication (<Event>=1,2 & 3)
- 4 Activate the authentication indications (<Event> = 4 & 5)
- 8 Activate the session start indication (<Event> = 6,7 & 8)
- 16 Activate the package download indications (<Event> = 9,10 & 11)
- 32 Activate the certified downloaded package indication (<Event> = 12 &13)
- 64 Activate the update indications (<Event> = 14,15 & 16)
- 128 Activate the fallback indication (<Event> = 17)
- 256 Activate download progress indication (<Event> = 18)
- 512 Reserved
- 1024 Reserved
- 2048 Activate provisioning indication (<Event>=21)
- 4096 Reserved

- <Event>**
 - 0 Device services are initialized and can be used. Devices services are initialized when the SIM PIN code is entered and a dedicated NAP is configured (see +WDSS command)
 - 1 The Device Services server requests the device to make a connection. The device requests a user agreement to allow the embedded module to make the connection. The response can be sent using +WDSR command and this indication can be returned by the device if the user has activated the user agreement for connection (see +WDSC command for more information)
 - 2 The Device Services server requests the device to make a package download. The device requests a user agreement to allow the embedded module to make the download. The response can be sent using +WDSR command and this indication can be returned by the device if the user has activated the user agreement for download (see +WDSC command for more information).
 - 3 The device has downloaded a package. The device requests a user agreement to install the downloaded package. The response can be sent using +WDSR command and this indication can be returned by the device if the user has activated the user agreement for install (see +WDSC command for more information).
 - 4 The embedded module starts sending data to the server
 - 5 Authentication with the server failed
 - 6 Authentication has succeeded, a session with the server started
 - 7 Session with the server failed
 - 8 Session with the server is finished
 - 9 A package is available on the server and can be downloaded by the embedded module. A <Data> parameter is returned indicating the package size in kB
 - 10 A package was successfully downloaded and stored in flash
 - 11 An issue happens during the package download. If the download has not started (+WDSI: 9 indication was not returned), this indication indicates that there is not enough space in the device to download the update package. If the download has started (+WDSI: 9 indication was returned), a flash problem implies that the package has not been saved in the device
 - 12 Downloaded package is certified to be sent by the AirPrime Management Services server

HL7518 and HL7548	
	<p>13 Downloaded package is not certified to be sent by the AirPrime Management Services server</p> <p>14 Update will be launched</p> <p>15 OTA update client has finished unsuccessfully</p> <p>16 OTA update client has finished successfully</p> <p>17 A fallback mechanism was launched</p> <p>18 Download progress. This event is returned without <Data> parameter to indicate that a download starts. During the download, a percentage progress is indicated in <Data> parameter</p> <p>19 Reserved</p> <p>20 Reserved</p> <p>21 A provision was made by the AirVantage Management Services server</p> <p>22 Reserved</p> <p><Data> Specific data for some <Event></p> <p>For<Event>=9, <Data> indicates the package size in bytes, which will be downloaded</p> <p>For<Event>=17, <Data> indicates if the fallback was asked by the user or applied because a recovery was necessary</p> <p>0 Automatic recovery (a recovery mechanism was made)</p> <p>1 Fallback asked by the user (see +WDSF for more information)</p> <p>For<Event>=18, <Data> indicates the download progress in percentage</p> <p>For<Event>=21, <Data> indicates the provisioned parameters</p> <p>0 Reserved</p> <p>1 Reserved</p> <p>2 Reserved</p> <p>3 Reserved</p> <p>4 Reserved</p> <p>5 Reserved</p> <p>6 Reserved</p> <p>7 Reserved</p> <p>8 Reserved</p> <p>9 Device Service Polling mode (see +WDSC command for more information)</p> <p>10 Reserved</p> <p>11 Reserved</p> <p>12 Reserved</p> <p>13 Reserved</p>
<i>Unsolicited Notification</i>	<p><u>Response</u></p> <p>+WDSI: <Event>[,<Data>]</p>
<u>Examples</u>	<p>AT+WDSI=?</p> <p>+WDSI: (0-2047)</p> <p>OK</p> <p>AT+WDSI?</p> <p>+WDSI: 0 // All indications are deactivated</p> <p>OK</p> <p>AT+WDSI=207</p> <p>OK</p> <p>+WDSI: 1 // The devices services server request a connection to the // embedded module</p>

HL7518 and HL7548	
	<p>AT+WDSR=1 // Accept the connection</p> <p>OK</p> <p>+WDSI: 4 // The embedded module will send the first data to the AirPrime Management Services server</p> <p>+WDSI: 6 // The authentication succeeded</p> <p>+WDSI: 8 // The session with the server is over</p> <p>+WDSI: 9,1000 // A package will be downloaded, the size is 1kbytes</p> <p>+WDSI: 18,“1%” // 1% was downloaded</p> <p>+WDSI: 18,“100%” // The whole package was downloaded</p> <p>+WDSI: 10 // The whole package was stored in flash</p>
<u>Notes</u>	<ul style="list-style-type: none"> This command is available when the embedded module has finished its initialization. To receive +WDSI indications, the Device Services should be in activated state (see +WDSG for more information). The <Level> parameter is stored in non-volatile memory. The default value can be restored using AT&F. When the AVMS status is updated, +WDSI unsolicited response will be displayed according to the AVMS status change at the same time. If there is power loss when the AVMS status is updating and is updated successfully, the +WDSI unsolicited response may be lost.

12.8. +WDSR Command: Device Services Reply

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+WDSR=?	<u>Response</u> +WDSR: (list of supported <Reply>s),(list of supported <Timer>s) OK
<i>Write command</i>	
<u>Syntax</u> AT+WDSR= <Reply> [,<Timer>]	<u>Response</u> OK or +CME ERROR <err> <u>Parameters</u> <Reply> Reply to user agreement request (see +WDSI) 0 Delay or refuse the connection to the server 1 Accept the connection to the server 2 Delay or refuse the download 3 Accept the download 4 Accept the install 5 Delay the install <timer> Timer until a new User agreement request is returned by the module. This parameter is only available for <Reply>=0, 2 or 5. Units: minutes. Range is from 0 to 1440. Default value = 30. Value 0 indicates that the application refuses the user agreement (impossible when <Reply>=5).

HL7518 and HL7548	
<u>Examples</u>	<p>AT+WDSR=? +WDSR: (0-5),(0-1440) OK +WDSI: 1 //The device Services server requests the device to make a connection // to the server. The user is requested to allow the connection.</p> <p>AT+WDSR=1 OK +WDSI: 3 //A user agreement is requested to install a package</p> <p>AT+WDSR=5,10 //A delay of 10 minutes is requested OK +WDSI: 3 //10 minutes later, a new user agreement is requested to install a //package</p> <p>AT+WDSR=4 //The install is requested OK</p>
<u>Notes</u>	<ul style="list-style-type: none"> This command is available when the embedded module has finished the Device Services initialization (see +WDSI) and when the AVMS services are in activated state (see +WDSG). It is not possible to refuse an install request (AT+WDSR=5,0) will return +CME ERROR: 3. After an install delay if the embedded module is powered down until after the delay, it is not powered on and the new user agreement request should be returned at the new start up.

12.9. +WDSS Command: Device Services Session

HL7518 and HL7548	
<u>Test command</u>	
<u>Syntax</u> AT+WDSS=?	<u>Response</u> +WDSS: 0,(Max length for <Apn>),(Max length for <User>),(Max length for <Pwd>),(list of supported <Cid>s) [+WDSS: 1,(list of supported <Action>s for this <Mode>)] OK
<u>Read command</u>	
<u>Syntax</u> AT+WDSS?	<u>Response</u> [+WDSS: 0,<Apn>,<User>,<Cid>] [+WDSS: 1,<Action>] OK
<u>Write command</u>	
<u>Syntax</u> For <Mode>=0: AT+WDSS=<Mode>,<Apn>[,<User>[,<Pwd>]][,<Cid>]	<u>Response</u> OK +CME ERROR <err>

HL7518 and HL7548	
<p>For <Mode>=1 AT+WDSS= <Mode>,<Action></p>	<p><u>Parameters</u></p> <p><Mode> Integer type 0 PDP context configuration for Device Services 1 User initiated connection to the Device services server</p> <p><Apn> Access Point Name for Devices Services. String type up to 50 characters. See <Cid> for empty strings.</p> <p><User> Login for the APN. String type, up to 30 characters</p> <p><Pwd> Password for the APN. String type, up to 30 characters</p> <p><Cid> Context ID used for AVMS PDP activation. It must be set to 1 if used with AT&T; but can have a value of 1 – 5 otherwise (default value = 5) When connecting to the server, if the PDP of <Cid> has already been activated:</p> <ul style="list-style-type: none"> • AVMS connection will directly reuse the PDP of that <Cid> when <Apn> is set as an empty string; • <Apn> will be checked if it matches with +CGDCONT settings to reuse the connection when <Apn> is set as a non-empty string. <p>Otherwise, APN <Apn> will be activated.</p> <p><Action> For <Mode>=1 only 0 Release the current connection to the Device Services Server 1 Establish a connection to the Device Services Server</p>
<p><u>Examples</u></p>	<pre> AT+WDSS? OK //No APN defined AT+WDSS=? +WDSS: 0, 50,30,30,(1-5) +WDSS:1,(0-1) OK AT+WDSS=0,"Sierra Wireless",,,5 //Define the APN for the Device Services; // with context ID = 5 OK AT+WDSS? +WDSS: 0,"Sierra Wireless",,5 +WDSS: 1,0 OK AT+WDSS=1,1 //Initiation of a connection to the Device Services server OK AT+WDSS=1,0 //Release connection to the Device Services server OK // modules using AT&T where <Cid> must be 1 (LTE with only one PDP context allowed) at+cgdcont? +CGDCONT: 1,"IP","broadband","10.191.8.184",0,0,0,0,0 OK at+wdss=0,"broadband",,,1 OK </pre>

HL7518 and HL7548	
	<pre> at+wdss? +WDSS: 0,"broadband",,1 +WDSS: 1,0 at+cgact? +CGACT: 1,1 OK at+wdss=1,1 OK +WDSI: 4 +WDSI: 8 at+cgdcont? +CGDCONT: 1,"IP","broadband","10.191.8.184",0,0,0,0,0 OK // reusing an activated PDP at+cgdcont? +CGDCONT: 1,"IP","broadband","10.191.8.184",0,0,0,0,0 OK at+wdss=0 //Clear all settings OK at+wdss? OK at+wdss=0,,,1 //Define an empty string APN OK at+wdss? +WDSS: 0,"",,1 +WDSS: 1,0 OK at+wdss=1,1 //Reuse activated PDP of cid 1 for connection OK +WDSI: 4 +WDSI: 8 </pre>
<u>Notes</u>	<ul style="list-style-type: none"> • This command is available when the embedded module has finished the Device Services initialization (see +WDSI). • <Apn>, <User>, <Pwd> and <Cid> parameters are stored in non-volatile memory. AT&F has no effect on these parameters. • AT+WDSS? command only returns OK if no APN is defined. • When a request is sent to the embedded module to resume an inexistent or unsuspended session, +CME ERROR: 3 is returned. • When a request is sent to the embedded module to release an inexistent session, +CME ERROR: 3 is returned.

HL7518 and HL7548	
	<ul style="list-style-type: none"> Depending on +WDSM configuration, when no dedicated NAP is defined using +WDSS command and a session is asked (by AT command or notify by SMS), the embedded module will use a NAP defined by +CGDCONT command to activate the dedicated PDP context. This NAP will be recorded to configure the NAP Device Services and it will be used to activate the dedicated PDP context for the next sessions. When the PDP context cannot be activated because of bad AirVantage Management Services NAP configuration, the embedded module will use a NAP defined by +CGDCONT command to activate the dedicated PDP context (but the initial NAP configuration is not erased). Activation is done if the embedded module is registered on the network. If the embedded module is not registered when the command is performed, activation will be done at the next network registration (even if the embedded module resets). No GPRS connection to the AirVantage Management Services server is possible when a registration is not completed. The default value of <Cid> is 5; if reuse of existing activated PDP context is required for all internet connection, set <Cid> accordingly. For example, in LTE, if the internet connection uses PDP of cid1, then <Cid> should be set to 1. AT+WDSS=0 will remove all stored information <Apn>, <User>, <Pwd> and <Cid>. <Apn> will become unprovisioned, but not an empty string.

12.10. +WDSM Command: Manage Device Services

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+WDSM=?	<u>Response</u> +WDSM: (list of supported <Mode>s),(list of supported <State>s) OK
<i>Read command</i>	
<u>Syntax</u> AT+WDSM?	<u>Response</u> +WDSM: 0,<State> +WDSM: 1,<State> OK
<i>Write command</i>	
<u>Syntax</u> AT+WDSM= <Mode>,<State>	<u>Response</u> OK or +CME ERROR <err> <u>Parameters</u> <Mode> APN backup 0 If AVMS APN (filled with +WDSS command) is incorrect, the module will use the APN defined by +CGDCONT command. 1 If AVMS APN has not been filled with +WDSS command, the module will use the APN defined by +CGDCONT command. Each APN will be used until successful session activation. If an AVMS session succeeds, the corresponding APN is copied in the +WDSS command and remains after the AVMS session ends.

HL7518 and HL7548	
	<p><State> Status of <Mode></p> <p><u>0</u> Disable (default value)</p> <p>1 Enable (not supported)</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u> <State> is stored in non-volatile memory. AT&F command has no impact on these values.</p>
<p><u>Examples</u></p>	<p>AT+WDSM=? +WDSM: (0-1),(0) OK</p> <p>AT+WDSM? +WDSM: 0,0 +WDSM: 1,0 OK // all modes are activated</p> <p>AT+WDSM=0,0 OK</p> <p>AT+WDSM? +WDSM: 0,0 +WDSM: 1,0 OK</p>

>> 13. Test Commands

The following commands are used for testing purposes.

13.1. +WMTXPOWER Command: Test RF Tx

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+ WMTXPOWER=?	<u>Response</u> +WMTXPOWER: (list of supported <ENABLE> s),(list of supported 4G <BAND> s), (list of supported 4G <CHANNEL> s), (list of supported 4G <POWER_LEVEL> s),(list of supported <BANDWIDTH> s) OK
<i>Read command</i>	
<u>Syntax</u> AT+ WMTXPOWER?	<u>Response</u> +WMTXPOWER: <ENABLE> [<BAND> , <CHANNEL> , <POWER_LEVEL> , <BANDWIDTH>] OK Note that parameters <BAND> , <CHANNEL> , <POWER_LEVEL> and <BANDWIDTH> are only available if <ENABLE> =1.
<i>Write command</i>	
<u>Syntax</u> AT+ WMTXPOWER= <ENABLE> , [,<BAND> , <CHANNEL> , <POWER_ LEVEL> , <BANDWIDTH>]	<u>Response</u> OK <u>Parameters</u> <ENABLE> 0 Stop the burst emission 1 Start the burst emission <BAND> Tx burst band emission. This is a mandatory parameter if <ENABLE> =1, but is not allowed if <ENABLE> =0. 2 PCS 4 AWS 5 CLR 13 Upper SMH block C 17 Lower SMH blocks B/C <CHANNEL> Tx burst channel emission. This is a mandatory parameter if <ENABLE> =1, but is not allowed if <ENABLE> =0. If <BAND> =2 18600 – 19199 If <BAND> =4 19950 – 20399 If <BAND> =5 20400 – 20649 If <BAND> =13 23180 – 23279 If <BAND> =17 23730 – 23849 <POWER_LEVEL> Tx burst power. This is a mandatory parameter if <ENABLE> =1, but is not allowed if <ENABLE> =0. Range: 0 (0 dBm) to 368 (23 dBm)

HL7518 and HL7548													
	<p><BANDWIDTH> Defines the bandwidth of Tx burst emissions. This parameter is not allowed if <ENABLE>=0.</p> <table> <tr><td>0</td><td>1.4MHz</td></tr> <tr><td>1</td><td>3 MHz</td></tr> <tr><td>2</td><td>5 MHz</td></tr> <tr><td>3</td><td>10 MHz</td></tr> <tr><td>4</td><td>15 MHz</td></tr> <tr><td>5</td><td>20 MHz</td></tr> </table>	0	1.4MHz	1	3 MHz	2	5 MHz	3	10 MHz	4	15 MHz	5	20 MHz
0	1.4MHz												
1	3 MHz												
2	5 MHz												
3	10 MHz												
4	15 MHz												
5	20 MHz												
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • Only one burst can be emitted at a time. • This AT command is not available if AT+WMRXPOWER is enabled. • The module must be restarted after using this command. 												
<p><u>Example</u></p>	<pre>at+wmtxpower? +WMTXPOWER: 255 // +WMTXPOWER has not been started yet OK at+wmtxpower=1,4,19950,0,0 // Emits a Tx burst (0 dBm) at band 4, // earfcn = 19950 with bandwidth = 1.4MHz OK at+wmtxpower? +WMTXPOWER: 1,4,19950,0,0 OK</pre>												

13.2. +WMRXPOWER Command: Test RF Rx

HL7518 and HL7548	
<p><i>Test command</i></p>	
<p><u>Syntax</u> AT+ WMRXPOWER=?</p>	<p><u>Response</u> +WMRXPOWER: (list of supported <ENABLE>s),(list of supported 4G <BAND>s), (list of supported 4G <CHANNEL>s) OK</p>
<p><i>Read command</i></p>	
<p><u>Syntax</u> AT+ WMRXPOWER?</p>	<p><u>Response</u> +WMRXPOWER: <ENABLE>[,<BAND>,<CHANNEL>] OK</p> <p>Note that parameters <BAND> and <CHANNEL> are only available if <ENABLE>=1.</p>

HL7518 and HL7548	
<i>Read command</i>	
<u>Syntax</u> AT+WMANTSEL?	<u>Response</u> +WMANTSEL: <MODE> OK
<i>Write Command</i>	
<u>Syntax</u> AT+WMANTSEL= <MODE>	<u>Response</u> OK <u>Parameter</u> <MODE> Mode of operation for main and diversity antennas. This parameter is coded as as a single decimal number, <digit-L> <digit-L> LTE options 0 Use primary antenna for Tx and Rx, and use diversity antenna for Rx 1 Only use primary antenna for Tx and Rx 2 Use primary antenna for Tx only, and diversity antenna for Rx only
<u>Examples</u>	at+wmantSEL? +WMANTSEL: 0 OK at+cops=2 // deregister from network OK at+wmantSEL=1 // to select primary antenna only for Tx and Rx on LTE OK at+cops=0 // re-register to network OK at+cops=2 // deregister from network OK at+wmantSEL=2 // to select diversity antenna only OK at+cops=0 // re-register to network OK
<u>Reference</u> Sierra Wireless Proprietary	<u>Notes</u> <ul style="list-style-type: none"> • This command works with or without a SIM card. • <MODE> is saved in non-volatile memory using AT&W. • This command should be issued when the device is deregistered from the network; it will be effective at the next network registration. • The diversity antenna is an Rx only antenna; no power will be transmitted from the diversity antenna.



14. NV Related Commands

14.1. Auto Generation of NV Backup Files

There are 3 NV partitions in flash used by the firmware:

- Static Calibrated NV partition
- Static Fixed NV partition
- Dynamic NV partition

NV backup is per partition based, with one NV backup file per partition. These are labelled with <file id>=0, 1, 2 in the NV log and by firmware design.

The firmware automatically generates NV backup files from existing NV data at ~8 seconds after boot if one of the following conditions are met:

- NV backup of a partition does not exist, or it has been corrupted unexpectedly
- NV backup files exist, but the firmware version has changed while IMEI has not changed, in comparison to the records in the backup file
- NV backup files exist, but the firmware version has changed and a valid IMEI has been updated, in comparison to the records in the backup file

An automatic backup file generation is notified with +NVBU_IND with <status>=0 on all AT ports.

14.2. Auto Recovery from Backup NV Files

NV recovery is automatically done if an NV corruption is detected during NV initialization at boot.

The firmware automatically recovers NV data from available NV backups when one or more NV items are corrupted. This is notified with +NVBU_IND with <status>=3 on all AT ports.

Manual NV data restores all data from backup file to the original NV partition.

The firmware will try to recover corrupted or missing NV data items instead of all NV data items (partial restore) if possible; otherwise, the firmware restores all NV data items (full restore).

If the firmware crashes with 10 consecutive loops and a full restore has not been performed before, the firmware performs a full restore of all NV data items. Only consecutive crashes that happened within 8 seconds after the module boots is counted for this reset loop detection.

14.3. +NVBU: NV Backup Status and Control

HL7518 and HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+NVBU=?	<u>Response</u> +NVBU: (0-2) OK

HL7518 and HL7548	
<p><i>Read command</i></p> <p><u>Syntax</u> AT+NVBU?</p>	<p>Returns list of NV backup with the format: +NVBU: <file id>,<backup date>,<backup firmware version></p> <p><u>Response</u> [+NVBU: 0,<backup date>,<backup firmware version>] [+NVBU: 1,<backup date>,<backup firmware version>] [+NVBU: 2,<backup date>,<backup firmware version>] OK</p> <p><u>Parameters</u> <file id> Backup file ID corresponding to an NV partition in flash <backup date> NV backup generation date <backup firmware version> Firmware version used to generate the NV backup</p>
<p><i>Write command</i></p> <p><u>Syntax</u> For <mode>=0 or 1 AT+NVBU= <mode> [,<parti_id>]</p> <p>For <mode>=2 AT+NVBU= <mode>[,<clear>]</p>	<p><u>Response</u> For <mode>=0 or 1 OK</p> <p>For <mode>=2 and <clear>=0 <log data 0> [<log data 1>] ... [<log data n>] OK</p> <p>For <mode>=2 and <clear>=1 OK</p> <p><u>Parameters</u> <mode> 0 Generate backup of all NV data to NV backup partition 1 Restore all NV data from the NVM backup partition 2 List logs of NV backup operations</p> <p><log data> NV backup operations log data</p> <p><parti_id> 0 Static Calibrated NV 1 Static Fixed NV partition 2 Dynamic NV partition 3 All NV partitions</p> <p><clear log> <u>0</u> Read log 1 Clear log</p>

HL7518 and HL7548	
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u></p> <ul style="list-style-type: none"> • Status of operations for <mode>=0 and <mode>=1 is notified by +NVBU_IND unsolicited notifications with <status>=0 and <status>=1 respectively on the AT port that executed the write command. • Execution of the write command with <mode>=1 is followed by a modem reboot automatically; NVs are restored to their default values on booting. • The number of lines of <log data> ranges from 1 to 2142 lines. • NO SIM card is required for this command. • <mode>=2 is for retrieving log for R&D analysis and not fully documented, generally: <ul style="list-style-type: none"> ○ USER=0 for operations triggered by the firmware ○ USER=1 for manual operations
<p><u>Example</u></p>	<pre># automatic backup files generation after FW upgrade, notified by +NVBU_IND +NVBU_IND: 0,0,"2015/07/22 04:23:33","RHL75xx.2.15.142600.201507220405.x7160_2" +NVBU_IND: 0,1,"2015/07/22 04:23:33","RHL75xx.2.15.142600.201507220405.x7160_2" +NVBU_IND: 0,2,"2015/07/22 04:23:33","RHL75xx.2.15.142600.201507220405.x7160_2" # manual generation of backup files from existing NV partitions AT+NVBU=0,3 OK +NVBU_IND: 0,0,"2015/07/22 04:23:39","RHL75xx.2.15.142600.201507220405.x7160_2" +NVBU_IND: 0,1,"2015/07/22 04:23:39","RHL75xx.2.15.142600.201507220405.x7160_2" +NVBU_IND: 0,2,"2015/07/22 04:23:39","RHL75xx.2.15.142600.201507220405.x7160_2" # manual restore of backup files to original NV partitions AT+NVBU=1,3 OK +NVBU_IND: 1,0,"2015/07/22 04:23:39","RHL75xx.2.15.142600.201507220405.x7160_2" +NVBU_IND: 1,1,"2015/07/22 04:23:39","RHL75xx.2.15.142600.201507220405.x7160_2" +NVBU_IND: 1,2,"2015/07/22 04:23:39","RHL75xx.2.15.142600.201507220405.x7160_2" <module reboots automatically> # to retrieve the list of NV related operations done by the Firmware at+nvbu=2 [2015/07/22 04:02:49] BULO: MDM-RHL75xx.2.15.142600.201507220405.x7160_2 [2015/07/22 04:02:49] BUFL: GENERATE USER=0 FILE=3 LAS=0,0,0 [2015/07/22 04:02:49] BUFM: ENCODE F=0 REF=0 CNT=15/15 41 [2015/07/22 04:02:49] BUFM: ENCODE F=1 REF=0 CNT=16/16 31 [2015/07/22 04:02:49] BUFM: ENCODE F=2 REF=42 CNT=41/41 57 [2015/07/22 04:23:39] BUFL: GENERATE USER=1 FILE=3 LAS=0,0,0 [2015/07/22 04:23:39] BUFM: ENCODE F=0 REF=0 CNT=15/15 41 [2015/07/22 04:23:39] BUFM: ENCODE F=1 REF=0 CNT=16/16 31 [2015/07/22 04:23:39] BUFM: ENCODE F=2 REF=42 CNT=41/41 57 [2015/07/22 04:23:43] BUFL: RESTORE USER=1 FILE=3 LAS=0,0,0 [2015/07/22 04:23:43] BUFM: DECODE-2 F=0 REF=1 CNT=15/15 15,41 [2015/07/22 04:23:43] BUFM: DECODE-2 F=1 REF=1 CNT=16/16 16,31 [2015/07/22 04:23:43] BUFM: DECODE-2 F=2 REF=43 CNT=41/41 41,57 OK</pre>

14.4. +NVBU_IND: NV Backup Status Notification

HL7518 and HL7548	
<p><i>Unsolicited Notification</i></p>	<p><u>Response</u> +NVBU_IND: <status>,<file id>,...</p> <p>For <status>=0 +NVBU_IND: <status>,<file id>,<backup date>,<backup firmware version></p> <p>For <status>=1 +NVBU_IND: <status>,<file id>,<backup date used for restore>,<backup firmware version used for restore></p> <p>For <status>=2 +NVBU_IND: <status>,<file id>,<backup date used for restore>,<backup firmware version used for restore>,<num NV> <NV ID 1>[<NV ID 2>...[<NV ID 16><CR><LF>]] ...</p> <p><u>Parameters</u></p> <p><status> NV backup status</p> <p>0 Indicates completion of NV backup generation</p> <p>1 Indicates completion of NV backup restore</p> <p>2 Indicates that backup data were restored when the NV corruption was detected during NV initialization</p> <p><backup date> NV backup generation date</p> <p><backup firmware version> Firmware version used to generate the NV backup</p> <p><backup date used for restore> Generation date of the NV backup that was used for the NV restore</p> <p><backup firmware version used for restore> Firmware version used to generate the NV backup that was used for the NV restore</p> <p><num NV> Total number of NV items restored</p> <p><NV ID> List of NV item IDs with data restored, expressed in hexadecimal number delimited by spaces, and delimited by <CR><LF> every 16 numbers.</p>
<p><u>Reference</u> Sierra Wireless Proprietary</p>	<p><u>Notes</u> The list of <NV ID> is expressed in 16 hexadecimal numbers per line.</p>
<p><u>Examples</u></p>	<p># recovery in calibrated NV partition after Firmware boot # note that the data is also logged by NV log (i.e. AT+NVBU=2) +NVBU_IND: 2,0,"2015/07/22 04:23:39","RHL75xx.2.15.142600.201507220405.x7160_2",15 10034900 10034901 10034401 10034402 10034902 10035400 10035401 10035402 10035403 10035500 10035501 10035502 10050000 10310000 10370000</p>

>> 15. Board Support Commands

15.1. +WIMEI Command: IMEI Write and Read

Note: For HL7548 only.

HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+WIMEI=?	<u>Response</u> OK
<i>Read command</i>	
<u>Syntax</u> AT+WIMEI?	<u>Response</u> +WIMEI: <IMEI> OK
<i>Write command</i>	
<u>Syntax</u> AT+WIMEI= <IMEI>	<u>Response</u> +WIMEI: <IMEI> OK <u>Parameter</u> <IMEI> 14 or 15-digit IMEI as defined in GSM 23.003
<u>Notes</u>	<ul style="list-style-type: none"> • The default IMEI is 012345678901237. • The write command can only be used once for IMEI programming. • The IMEI to be written must be different from the default IMEI. • If a 14-digit IMEI is entered, the 15th checksum digit is automatically calculated. • The NV backup of the static calibrated NV partition which stores the IMEI is automatically updated after successful execution of the write command (i.e. backup is updated when OK is returned).
<u>Examples</u>	<pre>// Default IMEI at+wimei? +WIMEI: 012345478901237 OK // Enter 15-digit IMEI at+wimei=354610060035829 OK at+wimei? +WIMEI: 354610060035829 OK // Enter 14-digit IMEI at+wimei=35461006003582 OK at+wimei? +WIMEI: 354610060035829 OK</pre>

15.2. +WCARRIER: Show Carrier Name

Note: For HL7548 only.

HL7548	
<i>Test command</i>	
<u>Syntax</u> AT+WCARRIER= ?	<u>Response</u> OK
<i>Action command</i>	
<u>Syntax</u> AT+WCARRIER	<u>Response</u> +WCARRIER: <Carrier Name> OK <u>Parameters</u> <Carrier Name> Carrier string (maximum of 8 characters, without quotes)
<u>Notes</u>	The carrier name is written in non-volatile memory during the factory customization process.
<u>Example</u>	at+wcarrier +WCARRIER: AT&T OK

>> 16. Appendix

16.1. Result Codes and Unsolicited Messages

Verbose Result Code	Numeric	Type	Description
+CCCM: <ccm>	like verbose	Unsolicited	
+CME ERROR: <err>	like verbose	Final	
+CMS ERROR: <err>	like verbose	Final or unsolicited	
+CMTI	like verbose	Unsolicited	
+CBM	like verbose	Unsolicited	
+CDS	like verbose	Unsolicited	
+COLP: <number>,<type>[,<subaddr> , <satype>[,<alpha>]]	like verbose	Intermediate	
+CR: <type>	like verbose	Intermediate	
+CREG: <stat>[,<lac>,<ci>]	like verbose	Unsolicited	
+CRING: <type>	like verbose	Unsolicited	
+CSSI: <code1>[,<index>]	like verbose	Intermediate	
+CSSU: <code2>[,<index>[,<number>,<type> [,<subaddr>,<satype>]]]	like verbose	Unsolicited	
+CUSD: <m>[,<str>,<dc>]	like verbose	Unsolicited	
BUSY	6	Final	
CONNECT	1	Intermediate	connection has been established
CONNECT <text>	manufacturer specific	Intermediate	like CONNECT but manufacturer specific <text> gives additional information (e.g. connection data rate)
ERROR	4	Final	command not accepted
NO ANSWER	7	Final	connection completion timeout
NO CARRIER	3	Final	connection terminated
NO DIALTONE	5	Final	no dial tone detected
OK	0	Final	acknowledges execution of a command line
RING	2	Unsolicited	incoming call signal from network

16.2. Error Codes

16.2.1. CME Error Codes

<err> Code	Meaning
0	Phone failure
1	No connection to phone
2	Phone-adapter link reserved
3	Operation not allowed
4	Operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	Incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	Memory full
21	Invalid index
22	Not found
23	Memory failure
24	Text string too long
25	Invalid characters in text string
26	Dial string too long
27	Invalid characters in dial string
30	No network service
31	Network timeout
32	Network not allowed - emergency call only
40	Network personalization PIN required
41	Network personalization PUK required
42	Network subset personalization PIN required
43	Network subset personalization PUK required
44	Service provider personalization PIN required
45	Service provider personalization PUK required
46	Corporate personalization PIN required
47	Corporate personalization PUK required
48	Hidden key required
49	EAP method not supported

<err> Code	Meaning
50	Incorrect parameters
99	Resource limitation
100	Synchronization error
103	Illegal MS
106	Illega IME
107	GPRS services not allowed
111	PLMN not allowed
112	Location area not allowed
113	Roaming not allowed in this location area
132	Service option not supported
133	Requested service option not subscribed
134	Service option temporarily out of order
148	Unspecified GPRS error
149	PDP authentication failure
150	Invalid mobile class
201	Alternate SIM conflict
500	CTS Handover on Progress
501	Cellular Protocol Stack Out of service state
502	CTS Unspecified Error
650	General AVMS error
651	Communication error
652	Session in progress
654	RDMS services are in "deactivated" state
655	RDMS services are in "prohibited" stae (see +WDSG command)
656	RDMS services are in "to be provisioned" state; no available NAP
800	SIM Security unspecified error
902	No more sockets available; the maximum number has been reached
903	Memory problem
904	DNS error
905	TCP disconnection by the server
906	TCP/UDP connection error
907	Generic error
908	Fail to accept client request's
909	Data send by KTCPSND/KUDPSND are incoherent
910	Bad session ID
911	Session is already running
912	No more sessions can be used (maximum session is 32)
913	Socket connection timer timeout
914	Control socket connection timer timeout
915	A parameter is not expected
916	A parameter has an invalid range of values
917	A parameter is missing
918	Feature is not supported

<err> Code	Meaning
919	Feature is not available
920	Protocol is not supported
921	Error due to invalid state of bearer connection
922	Error due to invalid state of session
923	Error due to invalid state of terminate port data mode
924	Error due to session busy, retry later
925	Failed to decode HTTP header's name, missing ':'
926	Failed to decode HTTP header's value, missing 'cr/lf'
927	HTTP header's name is an empty string
928	HTTP header's value is an empty string
929	Format of input data is invalid
930	Content of input data is invalid or not supported
931	The length of a parameter is invalid
932	The format of a parameter is invalid

16.2.2. CEER Error Codes

<cause>	<description>
0	No cause information available
1	Unassigned (unallocated) number
3	No route destination
6	Channel unacceptable
8	Operator determined barring
16	Normal call clearing
17	User busy
18	No user responding
19	User alerting, no answer
21	Call rejected
22	Number changed
26	Non-selected user clearing
27	Destination out of order
28	Invalid number format (incomplete number)
29	Facility rejected
30	Response to STATUS ENQUIRY
31	Normal, unspecified
34	No circuit / channel available
38	Network out of order
41	Temporary failure
42	Switching equipment congestion
43	Access information discarded
44	Requested circuit / channel not available
47	Resources unavailable, unspecified

<cause>	<description>
49	Quality of service unavailable
50	Requested facility not subscribed
55	Incoming calls barred with in the CUG
57	Bearer capability not authorized
58	Bearer capability not presently available
63	Service or option not available, unspecified
65	Bearer service not implemented
68	ACM equal to or greater than AC Mmax
69	Requested facility not implemented
70	Only restricted digital information bearer capability is available
79	Service or option not implemented, unspecified
81	Invalid transaction identifier value
87	User not member of CUG
88	Incompatible destination
91	Invalid transit network selection
95	Semantically incorrect message
96	Invalid mandatory information
97	Message type non-existent or not implemented
98	Message type not compatible with protocol state
99	Information element non-existent or not implemented
100	Conditional IE error
101	Message not compatible with protocol state
102	Recovery on timer expiry
103	Illegal MS
106	Illegal ME
107	GPRS service not allowed
111	Protocol error, unspecified
112	Location area not allowed
113	Roaming not allowed in this location area
124	MBMS bearer capabilities insufficient for the service
125	LLC or SNDSCP failure
126	Insufficient resources
127	Missing or unknown APN
128	Unknown PDP address or PDP type
129	User authentication failed
130	Activation rejected by GGSN - Serving GW or PDN GW
131	Activation reject, unspecified
132	Service not supported
133	Requested service option not subscribed
134	Service option temporarily out of order
135	NSAPI already used
136	Regular PDP context deactivation
137	QoS not accepted

<cause>	<description>
138	Network failure
139	Reactivation requested
140	Feature not supported
141	Semantic error in the TFT operation
142	Syntactical error in the TFT operation
143	Unknown PDP context
144	Semantic errors in packet filter(s)
145	Syntactical errors in packet filter(s)
146	PDP context without TFT already activated
148	Unspecified GPRS error
149	PDP authentication error
152	Single address bearers only allowed
153	ESM information not received
154	PDN connection does not exist
155	Multiple PDN connections for a given APN not allowed
156	Collision with network initiated request
181	Invalid PTI value
182	APN restriction value incompatible with active EPS bearer context
183	PTI already in use
185	Invalid EPS bearer identity
187	Last PDN disconnection not allowed
188	PDN type IPv4 only allowed
189	PDN type IPv6 only allowed
212	APN restriction
256	Internal unspecified
257	Out of memory
258	Invalid parameters
259	Data call active
260	Speech call active
262	Missing ACM information
263	Temporary forbidden
264	Called party is blacklisted
265	Blacklist is full
266	No service
267	Limited service
268	Client conflict
269	Dual Service call active
271	Unknown SIM error
274	Active client is gone
277	SIM status failure
278	Rejected by call control
279	FDN failed
280	BDN failed

<cause>	<description>
283	CCBS possible
284	Invalid alternate service line
285	LND overview
287	MM network failure unspecified
288	MM no service
289	MM access class barred
290	MM RR no resource
291	MM ME busy
292	MM unspecified
301	MMI not registered
303	Rejected by user
304	Rejected due to time out
306	Disconnected due to SIM TK call setup
307	Pending SIM TK call setup
310	SIM reset
340	MM sapi3 release
341	MM lower layer failure
342	MM authentication failure
343	MM PS reject
344	MM service rejected
345	MM abort by network
346	MM timeout
347	MM detach
348	MM RR connection release
349	MM not registered
350	MM reestablishment failure
351	Failure due to handover
352	Link establishment failure
353	Random access failure
354	Radio link aborted
355	Lower layer failure in Layer 1
356	Immediate assignment reject
357	Failure due to paging
358	Abnormal release unspecified
359	Abnormal release channel unacceptable
360	Abnormal release timer expired
361	Abnormal release no act on radio path
362	Preemptive release
363	UTRAN configuration unknown
364	Handover impossible
365	Channel mode unacceptable
366	Frequency not implemented
367	Originator leaving call group area

<cause>	<description>
368	Lower layer failure from network
369	Call already cleared
370	Semantically incorrect message
371	Invalid mandatory info
372	Message type non-existing
373	Message type incompatible in state
374	Conditional information element error
375	No cell allocation available
376	Protocol error unspecified
377	Normal event
378	Unspecified
379	Preemptive release
380	Congestion
381	RE establishment reject
382	Directed sig conn establishment
383	User inactivity
384	Lower layer failure downlink
385	Lower layer failure uplink
386	Cell barred due to authentication failure
387	Signalling connection release
388	CS connection release triggered by MM
389	RRC connection establishment failure
390	RRC connection establishment re-ject with redirection
391	Resource conflict
392	Layer 2 sequence error
393	Layer 2 T200 exp N200 plus 1 times
394	Layer 2 unsolicited DM resp MFES
395	Layer 2 contention resolution
396	Layer 2 normal cause
397	RR connection release due to BAND change (2G)
400	MM RR connection error while release
500	User disconnected
510	Remote user / NW disconnected for call status rather than call proceeding
511	Remote user / NW disconnected for call status is call proceeding
512	Request rejected, BCM violation

16.2.3. CMS Error Codes

<err> Code	Meaning
1	Unassigned (unallocated) number
8	Operator determined barring
10	Call barred
21	Short message transfer rejected
27	Destination out of service
28	Unidentified subscriber
29	Facility rejected
30	Unknown subscriber
38	Network out of order
41	Temporary failure
42	Congestion
47	Resources unavailable, unspecified
50	Requested facility not subscribed
69	Requested facility not implemented
81	Invalid short message transfer reference value
95	Invalid message, unspecified
96	Invalid mandatory information
97	Message type non-existent or not implemented
98	Message not compatible with short message protocol state
99	Information element non-existent or not implemented
111	Protocol error, unspecified
127	Interworking, unspecified
128	Telematic interworking not supported
129	Short message Type 0 not supported
130	Cannot replace short message
143	Unspecified TP-PID error
144	Data coding scheme (alphabet) not supported
145	Message class not supported
159	Unspecified TP-DCS error
160	Command cannot be executed
161	Command unsupported
175	Unspecified TP-Command error
176	TPDU not supported
192	SC busy
193	No SC subscription
194	SC system failure
195	Invalid SME address
196	Destination SME barred
197	SM Rejected-Duplicate SM
198	TP-VPF not supported
199	TP-VP not supported

<err> Code	Meaning
208	D0 SIM SMS storage full
209	No SMS storage capability in SIM
210	Error in MS
211	Memory Capacity Exceeded
212	SIM Application Toolkit Busy
213	SIM data download error
255	Unspecified error cause
300	ME failure
301	SMS service of ME reserved
302	Operation not allowed
303	Operation not supported
304	Invalid PDU mode parameter
305	Invalid text mode parameter
310	SIM not inserted
311	SIM PIN required
312	PH-SIM PIN required
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	Memory failure
321	Invalid memory index
322	Memory full
330	SMSC address unknown
331	no network service
332	Network timeout
340	NO +CNMA ACK EXPECTED
500	Unknown error

16.2.4. GPRS Error Codes

<err> Code	Meaning
Errors related to a failure to Perform an Attach	
103	Illegal MS
106	Illegal ME
107	GPRS services not allowed
111	PLMN not allowed
112	Location area not allowed
113	Roaming not allowed in this location area

<err> Code	Meaning
Errors related to a failure to Activate a Context	
132	Service option not supported
133	Requested service option not subscribed
134	Service option temporarily out of order
149	PDP authentication failure
Other GPRS Errors	
148	Unspecified GPRS error
150	Invalid mobile class

Other values in the range 101 - 150 are reserved for use by GPRS.

16.2.5. FTP Reply Codes

FTP Reply Code	Meaning
110	Restart marker reply
120	Service ready in nnn minutes
125	Data connection already open: transfer starting
150	File status okay; about to open data connection
200	Command okay
202	Command not implemented, superfluous at this site
211	System status or system help reply
212	Directory status
213	File status
214	Help message
215	NAME system type
220	Service ready for new user
221	Service closing control connection. Logged out if appropriate. Unassigned (unallocated) number
225	Data connection open; no transfer in progress
226	Closing data connection. Requested file action successful (for example, file transfer or file abort)
227	Entering Passive Mode (h1, h2, h3, h4, p1, p2)
22	User logged in, proceed
250	Requested file action okay, completed
257	"PATHNAME" created
331	User name okay, need password
332	Need account for login
350	Requested file action pending further information
421	Service not available, closing control connection. This may be a reply to any command if the service knows it must shut down
425	Can't open data connection
426	Connection closed; transfer aborted
450	Requested file action not taken. File unavailable (e.g., file busy)

FTP Reply Code	Meaning
451	Requested action aborted: local error in processing
452	Requested action not taken. Insufficient storage space in system
500	Syntax error, command unrecognized. This may include errors such as command line too long
501	Syntax error in parameters or arguments
502	Command not implemented
503	Bad sequence of commands
504	Command not implemented for that parameter
530	Not logged in
532	Need account for storing files
550	Requested action not taken. File unavailable (e.g., file not found, no access)
551	Requested action aborted: page type unknown
552	Requested file action aborted. Exceeded storage allocation (for current directory or dataset)
553	Requested action not taken. File name not allowed

16.2.6. AVMS Error Codes

<err> Code	Meaning
3	Parameter is out of range; Device Services is not in a good state
24	Parameters <APN>, <User> or <Pwd> are too long
650	General error
651	Communication error
652	Session in progress
654	AVMS services are in DEACTIVATED state (see +WDSG)
655	AVMS services are in PROHIBITED state (see +WDSG)
656	AVMS services are in TO BE PROVISIONED state (see +WDSG)

16.2.7. Error Case Examples

Internet AT commands return specific error codes if parameter verification fails. The following table enumerates some examples to demonstrate specific error cases.

Table 3. Error Case Examples

Error Codes	Corresponding Examples
+CME ERROR: 907 Generic error/Unsupported read command	AT+KFTPCNX? AT+KFTPCLOSE? AT+KFTPCFGDEL? AT+KFTPRCV? AT+KFTPSND? AT+KFTPDEL? AT+KUDPDEL? AT+KUDPCLOSE?

Error Codes	Corresponding Examples
+CME ERROR: 907 Generic error/Unsupported read command	AT+KUDPRCV? AT+KUDPSND? AT+KTCPSND? AT+KTCPRCV? AT+KTCPCNX? AT+KTCPCLOSE? AT+KTCPDEL?
+CME ERROR: 912 No more sessions can be used	Create a UDP client session repeatedly until 32 sessions are created: AT+KUDPCFG=1,0,1033,,"10.10.10.10" Then try to create a TCP server session (33rd session) AT+KTCPCFG=1,1,,80
+CME ERROR: 915 A parameter is not expected	AT+KFTPCRV=1,0,,"/sample.txt" AT+KFTPCRV=1,1,,"/sample.txt" AT+KFTPCRV=1,"file",,"/sample.txt"
+CME ERROR: 916 A parameter has an invalid range of values	AT+KFTPCFG=0,"ftp.kernel.org" AT+KFTPCFG=1,"ftp.kernel.org",,,65536 AT+KFTPCFG=1,"ftp.kernel.org",,-1 AT+KFTPCFG=1,"ftp.kernel.org",,,2 AT+KFTPCFG=1,"ftp.kernel.org",,-1 AT+KFTPCFG=1,"ftp.kernel.org",,,,2 AT+KFTPCFG=1,"ftp.kernel.org",,,,,10 AT+KFTPCFG=1,"ftp.kernel.org",,,,,,-1 AT+KFTPCFG=1,"ftp.kernel.org",,,,,,? AT+KFTPCNX=0 AT+KFTPCNX=99 AT+KFTPCNX=-1 AT+KFTPCLOSE=0 AT+KFTPCLOSE=1,2 AT+KFTPCLOSE=1,-1 AT+KFTPCFGDEL=0 AT+KFTPCFGDEL=-1 AT+KFTPCRV=0,,"/sample.txt" AT+KFTPCRV=-1,,"/sample.txt" AT+KFTPCRV=1,,"/sample.txt",2 AT+KFTPCRV=1,,"/sample.txt",-1 AT+KFTPSND=0,,"/sample.txt" AT+KFTPSND=-1,,"/sample.txt" AT+KFTPSND=1,,"/sample.txt",2 AT+KFTPSND=1,,"/sample.txt",-1 AT+KFTPDEL=0,,"/sample.txt" AT+KFTPDEL=-1,,"/sample.txt" AT+KFTPDEL=1,,"/sample.txt",2 AT+KFTPDEL=1,,"/sample.txt",-1 AT+KTCPSND=1,0 AT+KTCPRCV=1,0 AT+KUDPSND=1,"116.66.221.43",5043,0 AT+KUDPRCV=1,0
+CME ERROR: 917 A parameter is missing	AT+KFTPCFG=1, AT+KFTPCFG= AT+KFTPCLOSE=, AT+KFTPCRV=1,,, AT+KFTPSND=1,,

Error Codes	Corresponding Examples
+CME ERROR: 917 A parameter is missing	AT+KFTPDEL=1,, AT+KFTPDEL=,,
+CME ERROR: 919 Feature is not available	AT+KTCPCACKINFO=1
+CME ERROR: 932 The format of a parameter is invalid	AT+KFTPCFG=a,"ftp.kernel.org" AT+KFTPCFG=1,"ftp.kernel.org",,,,,? AT+KFTPCFG=1,"ftp.kernel.org",,,,,?
	AT+KFTPCNX=a AT+KFTPCNX=#
	AT+KFTPCLOSE=b AT+KFTPCLOSE=1,?
	AT+KFTPCFGDEL=C AT+KFTPCFGDEL=#
	AT+KFTPCV=D,,, "/sample.txt" AT+KFTPCV=#,,, "/sample.txt" AT+KFTPCV=1,,, "/sample.txt",?
	AT+KFTPSND=E,,, "/sample.txt" AT+KFTPSND=#,,, "/sample.txt" AT+KFTPSND=1,,, "/sample.txt",? AT+KFTPSND=1,,, "/sample.txt",,?
	AT+KFTPDEL=f, "/sample.txt" AT+KFTPDEL=#, "/sample.txt" AT+KFTPDEL=1, "/sample.txt",?
	AT+KCGPADDR=a

16.3. Commands without Pin Code Requirement

Most AT Commands are rejected (i.e. an error is returned to the DTE) if the valid PIN code has not been entered.

The **main** commands which can be sent without the PIN code include:

- ATD (emergency calls)
- AT+CPIN
- ATI
- AT+CGMI, AT+GMI
- AT+CGMM, AT+GMM
- AT+CGMR, AT+GMR
- AT+CGSN, AT+GSN
- AT+CPAS
- AT+CIND
- AT+CMEE
- AT+IPR
- ATE, ATV, ATS, ATZ
- AT&F, AT&D, AT&C

- AT+CBST
- AT+CLVL

This list may be modified in case of special needs from the customer (contact Sierra Wireless directly to treat this kind of request)

Note: Some commands require the PIN2 code.

16.4. GSM 27.010 Multiplexing Protocol

Main Options	BASIC	YES
	ADVANCED	YES
	advanced WITH ERROR RECOVERY	NO
Frames	SABM	YES
	UA	YES
	DM	YES
	DISC	YES
	I (ERM)	NO
	RR (ERM)	NO
	RNR (ERM)	NO
	REJ (ERM)	NO
	UI	YES
	UIH	YES
Multiplexer Controls	DLC parameters negotiation (PN) (optional)	YES
	Power Saving control (PSC)	YES
	Multiplexer Close Down (CLD)	YES
	Test Command (Test)	YES
	Flow control On Command (Fcon)	YES
	Flow control Off Command (Fcoff)	YES
	Modem Status Command (MSC)	YES
	Non Supported Command response (NSC)	YES
	Remote Port Negotiation (RPN). (optional)	NO
	Remote Line Status command (RLS).(optional)	YES
Convergence Layers	Service Negotiation Command (SNC)	NO
	Type 1 - Unstructured Octet Stream	YES
	Type 2 - Unstructured Octet Stream with flow control, break signal handling and transmission of v24 signal states	YES
	Type 3 – Uninterruptible Framed Data	NO
Others	Type 4 - Interruptible Framed Data	NO
	Wake up procedure (see [RE2] sub clause 5.4.7)	YES
	Priority management	YES
	DLCL number limitation	8

16.5. TCP Commands Examples

16.5.1. Client Mode

<pre>AT&K3 OK</pre>	Hardware flow control activation
<pre>AT+KCNXCFG=1,"GPRS","APN","log","password","0.0.0.0", "0.0.0.0","0.0.0.0" OK</pre>	Set GPRS parameters (APN, login, password)
<pre>AT+KTCPCFG=1,0,"www.google.com",80 +KTCPCFG: 1 OK</pre>	Set IP address and port number Returns session ID 1
<pre>AT+KTCPCNX=1 OK</pre>	Initiate the connection
<pre>AT+KTCPSEND=1,18 CONNECT ...Data send... OK +KTCP_DATA: 1,1380</pre>	Send data with the EOF string at the end "GET / HTTP / 1.0 --EOF--Pattern"
<pre>AT+KTCPRCV=1, 1380 CONNECT HTTP/1.0 200 OK Cache-Control: private, max-age=0 ... a lot of data... --EOF--Pattern-- OK +KTCP_DATA: 1,1380</pre>	Read data +KTCP_DATA notification
<pre>AT+KTCPRCV=1,1380 CONNECT er{padding-bottom:7px !important}#gbar,#guser{font- ... a lot of data... --EOF--Pattern-- OK +KTCP_DATA: 1,1380</pre>	Read received data
<pre>AT+KTCPCLOSE=1,1 OK</pre>	Close session 1
<pre>AT+KTCPDEL=1 OK</pre>	Delete session 1
<pre>AT+KTCPCFG? OK</pre>	No session is available

16.5.2. Server Mode

In this simple example, we emulate a daytime server. This server listens to port 13 and for each connection it returns the date.

<p>AT&K3 OK</p>	Hardware flow control activation
<p>AT+KCNXCFG=1,"GPRS","APN","log","password","0.0.0.0", "0.0.0.0","0.0.0.0" OK</p>	Set GPRS parameters (APN, login, password)
<p>AT+KTCPCFG=1,1,,13 +KTCPCFG: 1 OK</p>	Set TCP listener and port number Returns session ID 1
<p>AT+KTCPCNX=1 OK</p>	Initiate the server
<p>AT+KCGPADDR +KCGPADDR: 0,"10.35.125.89" OK</p>	Get the IP address to initiate a connection request with a client
<p>+KTCP_SRVREQ: 1,2</p>	A client requests a connection (session ID 2)
<p>AT+KTCPSPND=2,15 CONNECT ...Date and time... OK</p>	Data is sent to the client read
<p>+KTCP_SRVREQ: 1,3 +KTCP_NOTIF: 2, 4</p>	Another client requests a connection (session ID 3); child mode for session 3 Client (session 2) closes the connection
<p>AT+KTCPSPND=3,15 CONNECT ...Date and time... OK</p>	Data is sent to the client
<p>AT+KTCPCLOSE=3,1 OK</p>	Close client session 3 and then session 3 is deleted automatically (child mode for session 3)
<p>AT+KTCPCLOSE=1,1 OK</p>	Close server session 1
<p>AT+KTCPDEL=1 OK</p>	Delete session 1

16.5.3. Polling for the Status of a Socket

<p>AT&K3 OK</p>	<p>Hardware flow control activation</p>
<p>AT+KCNXCFG=1,"GPRS","APN","log","password","0.0.0.0", "0.0.0.0","0.0.0.0" OK</p>	<p>Set GPRS parameters (APN, login, password)</p>
<p>AT+KTCPCFG=1,0,"www.google.com",80 +KTCPCFG: 1 OK</p>	<p>Set TCP Server address and port number Returns session ID 1</p>
<p>AT+KURCCFG="TCP",0 OK</p>	<p>Disable TCP unsolicited messages</p>
<p>AT+KTCPCNX=1 OK</p>	<p>Initiate connection, use session 1</p>
<p>AT+KTCPSTAT=1 +KTCPSTAT: 3,-1,0,0 OK</p>	<p>Poll the connection status Connection is UP</p>
<p>AT+KTCPSEND=1,3000 CONNECT <...Data send...> OK</p>	<p>Send data on socket 1 for 3000 bytes or less. Data can be sent after CONNECT Send the EOF string to finish. The EOF pattern should be defined using the +KPATTERN command.</p>
<p>AT+KTCPSTAT=1 +KTCPSTAT : 3,-1,1234,0 OK</p>	<p>Poll the connection status Connection is up, with 1234 unsent bytes</p>
<p>AT+KTCPSTAT=1 +KTCPSTAT : 3,-1,100,0 OK</p>	<p>Poll the connection status Connection is up, with 100 unsent bytes</p>
<p>AT+KTCPSTAT=1 +KTCPSTAT : 3,-1,0,0 OK</p>	<p>Poll the connection status Connection is up, all bytes have been sent</p>
<p>AT+KTCPSTAT=1 +KTCPSTAT : 3,-1,0,320 OK</p>	<p>Poll the connection status Connection is up with 320 bytes available for reading</p>

AT+KTCPCV=1,320 CONNECT <... a lot of data...> --EOF--Pattern-- OK	Read 320 bytes on socket 1 Data are sent after CONNECT
AT+KTCPCLOSE=1,1 OK	Close session 1
AT+KTCPDEL=1 OK	Delete session 1

16.5.4. End to End TCP Connection

AT&K3 OK	Hardware flow control activation
AT+KCNXCFG=1,"GPRS","APN","log","password","0.0.0.0", "0.0.0.0","0.0.0.0" OK	Set GPRS parameters (APN, login, password)
AT+KTCPCFG=1,0,"www.google.com",80 +KTCPCFG: 1 OK	Set the TCP server address and port number Returns session ID 1
AT+KTCPSTART=1 CONNECT ...Data sent.....Data received.....Data sent... ...Data sent.....Data received.....Data sent... +++ OK	Initiate connection, use session 1 Message CONNECT: connection to server is established, data can be sent Use +++ to enter command mode
ATO1 CONNECT ...Data sent.....Data received.....Data sent... ...Data sent.....Data received.....Data sent... OK	Use ATO<session_id> to switch back to data mode
AT+KTCPCLOSE=1,1 OK	Toggle DTR (if using AT&D1 or AT&D2 configuration) to enter command mode Close the session
AT+KTCPDEL=1 OK	Delete the configured session

16.5.5. Error Case for End to End TCP Connection

AT+KTCPSTART=1 NO CARRIER +KTCP_NOTIF: 1,<tcp_notif>	Try to initiate connection Connection failed, see the value of <tcp_notif>
AT+KTCPSTART=1 CONNECT ...Data sent.....Data received.....Data sent... ...Data sent.....Data received.....Data sent... NO CARRIER +KTCP_NOTIF: 1,<tcp_notif>	Initiate connection Exchange some data
(Continuation of previous sequence)	An error occurs during connection (network lost, server closed, etc.)

16.5.6. Use Cases for AT+KTCPPACKINFO and <URC-ENDTCP-enable> Option

This section describes the behavior of AT+KTCPPACKINFO when the <URC-ENDTCP> option is used with AT+KTCPCFG.

16.5.6.1. <URC-ENDTCP-enable> is Disabled (default setting)

AT+KCNXCFG=1,"GPRS","CMNET" OK	
AT+KTCPCFG=1,0,"202.170.131.76",2000 +KTCPCFG: 1 OK	
AT+KTCPCFG? +KTCPCFG: 1,0,0,0,"202.170.131.76",2000,,0,0 OK	<URC-ENDTCP-enable> is disabled
AT+KTCPCNX=1 OK	Connect to TCP server
AT+KTCPSEND=1,10 CONNECT 0123456789--EOF--Pattern-- OK	Use command to send 10 bytes Write to serial
AT+KTCPPACKINFO=1 +CME ERROR: operation not allowed	The URC "+KTCP_ACK" is not displayed Error is returned because <URC-ENDTCP-enable> is disabled

16.5.6.2. <URC-ENDTCP-enable> is Enabled

<pre> AT+KCNXCFG=1,"GPRS","CMNET" OK AT+KTCPCFG=1,0,"202.170.131.76",2000,,1 +KTCPCFG: 1 OK AT+KTCPCFG? +KTCPCFG: 1,0,0,0,"202.170.131.76",2000,,0,1 OK AT+KTCPCNX=1 OK AT+KTCPSEND=1,10 CONNECT 0123456789--EOF--Pattern-- OK +KTCP_ACK: 1, 1 AT+KTCPACKINFO=1 +KTCPACKINFO: 1, 1 OK AT+KTCPSEND=1,1000 CONNECT <1000bytes and --EOF--Pattern-> OK AT+KTCPACKINFO=1 +KTCPACKINFO: 1, 2 OK +KTCP_ACK: 1, 0 AT+KTCPACKINFO=1 +KTCPACKINFO: 1, 0 OK </pre>	<p>Set <URC-ENDTCP-enable> to 1, enable URC "+KTCP_ACK"</p> <p><URC-ENDTCP-enable> is enabled</p> <p>Connect to TCP server</p> <p>Receive 10 bytes Connect to TCO server Write to serial</p> <p>After a short time, URC "+KTCP_ACK" states that the latest TCP data has arrived on the remote side</p> <p>Poll the status of the latest TCP data</p> <p>Send 1000 bytes</p> <p>Write to serial</p> <p>URC "+KTCP_ACK" not got yet Poll the status of the latest TCP data The status of the latest TCP data is unknown</p> <p>Since the "OK" of the latest "+KTCPSEND", 64 seconds has elapsed URC "+KTCP_ACK" indicates that data has not arrived on the remote side yet. The network may not be good.</p> <p>Poll the status of the latest TCP data The status of the latest TCP data is "failure": not all data has been received by the remote side</p>
--	--

16.6. UDP Commands Examples

16.6.1. Client Mode

<pre>AT&K3 OK</pre>	<p>Hardware flow control activation</p>
<pre>AT+KCNXCFG=1,"GPRS","APN","log","password",,, OK</pre>	<p>Set GPRS parameters (APN, login, password)</p>
<pre>AT+KUDPCFG=1,0 +KUDPCFG: 1 OK</pre>	<p>Create a new UDP socket (returned session 1) with the parameters associated to the connection profile ID number 0</p>
<pre>AT+KUDPSND= 1,"82.234.17.52",32,18 CONNECT <...Data sent...> --EOF--Pattern-- OK</pre>	<p>Send UDP data after "CONNECT"</p>
<pre>+KUDP_DATA: 1,35</pre>	<p>Received notification that indicates the presence of 35 bytes in the socket</p>
<pre>AT+KUDPRCV=1, 35 CONNECT This is a simple UDP Protocol test --EOF--Pattern-- OK</pre>	<p>Try to read 35 bytes from session 1</p>
<pre>+KUDP_RCV: "82.234.17.52",32 +KUDP_DATA: 1,35</pre>	<p>Received notification that indicates the presence of 35 bytes in the socket</p>
<pre>AT+KUDPRCV=1, 18 CONNECT This is a simple --EOF--Pattern-- OK</pre>	<p>Try to read 18 bytes from session 1</p>
<pre>+KUDP_DATA_MISSED: 1,17</pre>	<p>There are 17 unread bytes left and missed in the UDP socket</p>
<pre>AT+KUDPCLOSE=1 OK</pre>	<p>Close the UDP session</p>
<pre>AT+KUDPCFG? OK</pre>	<p>No sessions are available anymore</p>

16.6.2. Server Mode

<p>AT&K3 OK</p>	<p>Hardware flow control activation</p>
<p>AT+KCNXCFG=1,"GPRS","APN","log","password","0.0.0.0", "0.0.0.0","0.0.0.0" OK</p>	<p>Set GPRS parameters (APN, login, password)</p>
<p>AT+KUDPCFG=1,1,3000 +KUDPCFG: 1 OK</p>	<p>Set UDP listener (port 3000). Initiate the server. Session ID is 1</p>
<p>AT+KUDPCFG? +KUDPCFG: 1,0,1,3000 OK</p>	<p>Check if the server is initiated</p>
<p>AT+KCGPADDR +KCGPADDR: 0, "192.168.0.71" OK</p>	<p>Get local IP address</p>
<p>+KUDP_DATA: 1,9</p>	<p>Data comes in from some client</p>
<p>AT+KUDPRCV=1,9 CONNECT DATA TEST--EOF--Pattern-- OK</p>	<p>Read received data</p>
<p>+KUDP_RCV: "10.10.10.5",1111</p>	<p>This data was sent from "10.10.10.5" (port:1111)</p>
<p>AT+KUDPSND=1,"10.10.10.5",3100,18 CONNECT <18 bytes data ended with "--EOF--Pattern--"> OK</p>	<p>Send 18 bytes to a remote server (port:3100)</p>
<p>AT+KUDPCLOSE=1 OK</p>	<p>Close the UDP server. The session is also deleted at the same time</p>
<p>AT+KUDPCFG? OK</p>	<p>No sessions are available anymore</p>

16.6.3. Use Cases for KTCP_DATA and KUDP_DATA

16.6.3.1. KTCP_DATA and KUDP_DATA without Data Auto Retrieval – Client Mode

<pre> AT+KCNXCFG=1,"GPRS","CMNET" OK AT+KTCPCFG=1,0,"202.170.131.76",2000 +KTCPCFG: 1 OK AT+KTCPCNX=1 OK +KTCP_DATA: 1,10 AT+KTCPCRV=1,10 CONNECT 0123456789--EOF--Pattern-- OK AT+KUDPCFG=1,0 +KUDPCFG: 2 OK +KUDP_DATA: 2,8 AT+KUDPCRV=2,8 CONNECT 01234567--EOF--Pattern-- OK +KUDP_RCV: "202.170.131.76",2001 </pre>	<p>Connect to TCP server</p> <p>10 bytes have arrived</p> <p>Receive the 10 bytes that arrived</p> <p>Open a UDP socket</p> <p>8 bytes have arrived</p> <p>Read the data</p>
---	--

16.6.3.2. KTCP_DATA and KUDP_DATA without Data Auto Retrieval – Server Mode

<pre> AT+KTCPCFG=1,1,,13 +KTCPCFG: 1 OK AT+KTCPCNX=1 OK AT+KCGPADDR +KCGPADDR: 0,"10.35.125.89" OK </pre>	<p>Configure a TCP server socket</p> <p>Open the listen port</p>
---	--

<pre> +KTCP_SRVREQ: 1,2 +KTCP_SRVREQ: 1,3 +KTCP_DATA: 2,10 +KTCP_DATA: 3,8 AT+KTCPCRV=2,10 CONNECT 0123456789--EOF--Pattern-- OK AT+KTCPCRV=3,8 CONNECT 01234567--EOF--Pattern-- OK AT+KUDPCFG=1,1,3000 +KUDPCFG: 4 OK +KUDP_DATA: 4,8 AT+KUDPCRV=4,8 CONNECT 01234567--EOF--Pattern-- OK +KUDP_RCV: "202.170.131.76",2001 </pre>	<p>Session 2 is set Session 3 is set 10 bytes have arrived at session 2 8 bytes have arrived at session 3</p> <p>Receive the 10 bytes in session 2</p> <p>Receive the 8 bytes in session 3</p> <p>Open a UDP socket in server mode</p> <p>8 bytes have arrived</p> <p>Receive the 8 bytes</p>
---	--

16.6.3.3. KTCP_DATA and KUDP_DATA with Data Auto Retrieval – Client Mode

<pre> AT+KCNXCFG=1,"GPRS","CMNET" OK AT+KTCPCFG=0,0,"202.170.131.76",2000,,1 +KTCPCFG: 1 OK AT+KTCPCNX=1 OK +KTCP_DATA: 1,10,0123456789 AT+KUDPCFG=0,0,3000,1 +KUDPCFG: 2 OK +KUDP_DATA: 2,8,"202.170.131.76",2001,01234567 </pre>	<p>When <data_mode> = 1, data will be received by the URC "+KTCP_DATA"</p> <p>Connect to TCP server</p> <p>10 bytes have arrived. The data are presented in the URC directly</p> <p>When <data_mode> = 1, data will be received by the URC "+KUDP_DATA"</p> <p>8 bytes have arrived. The data are presented in the URC directly</p>
---	---

16.6.3.4. KTCP_DATA and KUDP_DATA with Data Auto Retrieval – Server Mode

<pre>AT+KTCPCFG=1,1,,13,1 +KTCPCFG: 1 OK</pre>	<p>When <data_mode> = 1, all child connections will display data in URC mode. Data will be received by the URC "+KTCP_DATA:"</p>
<pre>AT+KTCPCNX=1 OK</pre>	<p>Open the listen port</p>
<pre>AT+KCGPADDR +KCGPADDR: 1,"10.35.125.89" OK</pre>	
<pre>+KTCP_SRVREQ: 1,2 +KTCP_SRVREQ: 1,3 +KTCP_DATA: 2,10,0123456789 +KTCP_DATA: 3,8,01234567</pre>	<p>10 bytes have arrived in session 2 8 bytes have arrived in session 3 Data are presented in the URC directly</p>
<pre>AT+KUDPCFG=1,1,3000,1 +KUDPCFG: 4 OK +KUDP_DATA: 4,8,"202.170.131.76",2001,01234567</pre>	<p>Open a UDP socket in server mode. Data will be received by the URC "+KUDP_DATA:" 8 bytes have arrived. Data are presented in the URC directly</p>

16.7. FTP Commands Examples

16.7.1. Client Mode

<pre>AT&K3 OK</pre>	<p>Hardware flow control activation</p>
<pre>AT+KCNXCFG=1,"GPRS","APN","log","password",,, OK</pre>	<p>Set GPRS parameters (APN, login, password)</p>
<pre>AT+KFTPCFG=1,"ftp.test.fr","userlogin","userpassword",21,0 OK</pre>	<p>Set FTP server address, login, password and port number</p>
<pre>AT+KPATTERN="--EOF--Pattern--" OK</pre>	<p>Customize the End Of File pattern</p>
<pre>AT+KFTPSND=0,,"Dir","TestFile.txt",0 CONNECT F6E6E656374696F6E207465737442E--EOF--Pattern-- OK</pre>	<p>Send data and store them in "TestFile.txt" from the FTP server. Data are presented with the EOF string.</p>

<p>AT+KFTPRCV=0,"Dir","Testfile.txt",0 CONNECT F6E6E656374696F6E20746573742E--EOF--Pattern-- OK</p>	<p>Read the file named "TestFile.txt" from ftp server, data are sent and end by EOF string</p>
<p>AT+KFTPDEL=0,"Dir","TestFile.txt" OK</p>	<p>Delete the file called "TestFile.txt" in the FTP server</p>
<p>AT+KFTPCLOSE=0 OK</p>	<p>Close the connection</p>

16.7.2. "FTP Resume" Use Case

16.7.2.1. Resume Feature when Transmitting Data to Serial Link

<p>AT+KCNXCFG=1,"GPRS","CMNET" OK</p>	
<p>AT+KFTPCFG=1,"202.170.131.76","administrator","8ik,(OL>" ,21,0 +KFTPCFG: 1 OK</p>	
<p>AT+KFTPRCV=1,,,"111111.txt",0 CONNECT 750aaaaaaaa..... aaaaa250bbbbbbb--EOF--Pattern-- +KFTP_ERROR: 1, 421</p>	<p>Total of 760 data from the serial link The result code indicates that the download met with some problems which may be due to control or data connection lost</p>
<p>AT+KFTPRCV=1,,,"111111.txt",0,760 bbbbbb.....bbbbbbend--EOF--Pattern-- OK</p>	<p>Try to resume transfer by using the offset 760. Total data from the serial link should be 240 The complete file "111111.txt" can be obtained by combining the data received from the two separate downloads</p>

16.7.2.2. Use Case when FTP Server does not Support the Resume Feature

<pre> AT+KCNXCFG=1,"GPRS","CMNET" OK AT+KFTPCFG=1,"202.170.131.76","administrator","8ik, (OL>","21,0 +KFTPCFG: 1 OK AT+KFTPRCV=1,,,"111111.txt",0 CONNECT 750aaaaaaaa..... aaaaa250bbbbbbb--EOF--Pattern-- +KFTP_ERROR: 1,421 AT+KFTPRCV=1,,,"111111.txt",0,760 CONNECT --EOF--Pattern-- +KFTP_ERROR: 1,502 </pre>	<p>Total of 760 data from the serial link</p> <p>The result code indicates that the download met with some problems which may be due to control or data connection lost</p> <p>ERROR 502 means that some commands in the procedure are not supported by the server</p>
--	---

16.8. HTTP Commands Usage Examples

<pre> AT&K3 OK AT+KCNXCFG=1,"GPRS","APN","log","password","0.0.0.0", "0.0.0.0","0.0.0.0" OK AT+KCNXTIMER=1,60,2,70 OK AT+KHTTPCFG=1,"www.google.com",80,1 +KHTTPCFG: 1 OK AT+KHTTPHEADER=1 CONNECT Accept : text/html If-Modified-Since : Saturday, 15-January-2000 14:37:11 GMT OK AT+KHTTPGET=1, "/index.html" CONNECT HTTP/1.0 200 OK Cache-Control: private, max-age=0 Date: Tue, 24 Jun 2008 02:11:35 GMT Expires: -1 Content-Type: text/html; charset=ISO-8859-1 </pre>	<p>Hardware flow control activation</p> <p>Set GPRS parameters (APN, login, password, etc.)</p> <p>Set Timers</p> <p>Set HTTP address, port number and http version</p> <p>Set the header of the request</p> <p>Send HTTP data after "CONNECT". The data should be ended with the EOF string.</p> <p>Get the web page</p> <p>HTTP server response</p>
---	---

<pre> Set-Cookie: PREF=ID=ae1c663417e7799e:NW=1:TM=1214273495:LM=121 4273495:S=5Uq9kExK4aTEv_cx; expires=Thu, 24-Jun-2010 02:11:35 GMT; path=/; domain=.google.com Server: gws Connection: Close <html><head><meta http-equiv="content-type" ... a lot of data... --EOF--Pattern-- OK AT+KHTTPHEAD=1, "/index.html" CONNECT HTTP/1.0 200 OK Cache-Control: private, max-age=0 Date: Tue, 24 Jun 2008 02:11:35 GMT Expires: -1 Content-Type: text/html; charset=ISO-8859-1 Set-Cookie: PREF=ID=ae1c663417e7799e:NW=1:TM=1214273495:LM=121 4273495:S=5Uq9kExK4aTEv_cx; expires=Thu, 24-Jun-2010 02:11:35 GMT; path=/; domain=.google.com Server: gws Connection: Close OK AT+KHTTPHEADER=1 CONNECT Accept : text/html Context-Length: 64 OK AT+KHTTPPOST=1,, "/get.cgi" CONNECT <...Data send...> HTTP/1.0 200 OK Content-Type: text/plain Context-Length: 37 Your data have been accepted. --EOF--Pattern-- OK </pre>	<p>Get the headers of the web page</p> <p>HTTP server response</p> <p>Send the data to the HTTP server Length of HTTP 1.0 POST data should be specified by HTTP header field Context-Length, otherwise HTTP server may not expect any data to be uploaded and should close the connection.</p> <p>Send HTTP data after "CONNECT"</p> <p>HTTP server response</p>
---	--

16.9. Switch Data/Command Mode DTR +++ ATO Behavior Table

When the module is in data mode and the connection encounters an error, NO CARRIER terminal response is shown and the module is switched back to command mode.

The following table shows the behavior when trying to switch mode (when connection is running properly):

- Case 1: "+++" is used to switch from data mode to command mode, and the service is suspended.
- Case 2: If AT&D1 is set, "DTR drop" is used to switch from data mode to command mode, but the service is suspended.
- Case 3: If AT&D2 is set, "DTR drop" is used to switch from data mode to command mode, and the service is stopped.
- Case 4: If AT&D0 is set, "DTR drop" has no any impact on the mode switch.
- Case 5: ATO[n] is used to switch from command mode to data mode.

	Case1/Case5 +++/ATO[n]	Case2/Case5 DTR1/ATO[n]	Case3/Case5 DTR2/ATO[n]	Case4/Case5 DTR0
TCP/UDP: +KTCPSND: Send data +KTCPCRV: Receive data +KUDPSND: Send data +KUDPCRV: Receive data +KTCPSTART: Direct data flow	OK/CONNECT	OK/CONNECT	NO CARRIER/ NO CARRIER (disconnect)	NO IMPACT
FTP: +KFTPCRV: Download FTP files +KFTPSND: Upload FTP files	OK/ NO CARRIER (disconnect)	OK/ NO CARRIER (disconnect)	NO CARRIER/ NO CARRIER (disconnect)	NO IMPACT
HTTP: +KHTTPGET: Get information +KHTTPHEAD: Get head of information +KHTTPPOST: Send data +KHTTPHEADER: Set the HTTP Request Header	OK/ NO CARRIER (disconnect)	OK/ NO CARRIER (disconnect)	NO CARRIER/ NO CARRIER (disconnect)	NO IMPACT
HTTPS: +KHTTPSGET: Get information +KHTTPSHEAD: Get head of information +KHTTPSPOST: Send data +KHTTPSHEADER: Set the HTTPS Request Header	OK/ NO CARRIER (disconnect)	OK/ NO CARRIER (disconnect)	NO CARRIER/ NO CARRIER (disconnect)	NO IMPACT
SSL: +KCERTSTORE: Store root CA +KPRIVKSTORE: Store private key	OK/ NO CARRIER (abort)	OK/ NO CARRIER (abort)	NO CARRIER/ NO CARRIER (abort)	NO IMPACT